



SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX130M

7.1 PARTS, DIAGRAMS & SPARE PARTS

Should the machine be scrapped, you need to arrange for disposal of its parts by taking into consideration their different nature. For the above purpose, it may be advisable to contact companies specialized in this field which, in any case, abide by the law in force in the machine installation country as to disposal of solid industrial wastes.

WARNING: Don't drop the machine in very busy areas as it might endanger persons lives, minors and animals in particular; the owner of the machine shall be held responsible for any claims arising in connection with the above.




ARCOBALENO®

SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX130M

TABLE 1

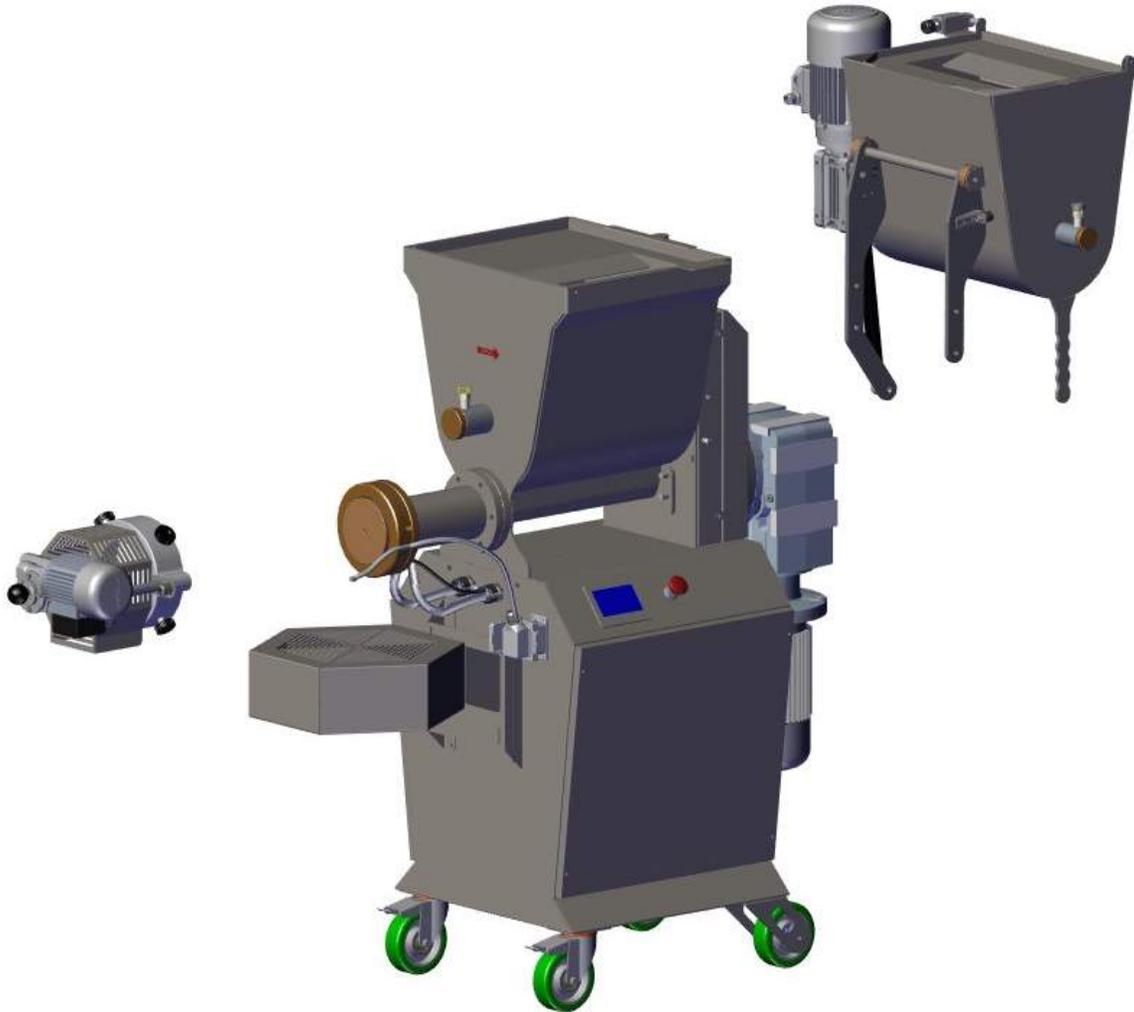




ARCOBALENO®

SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX130M

TABLE 3

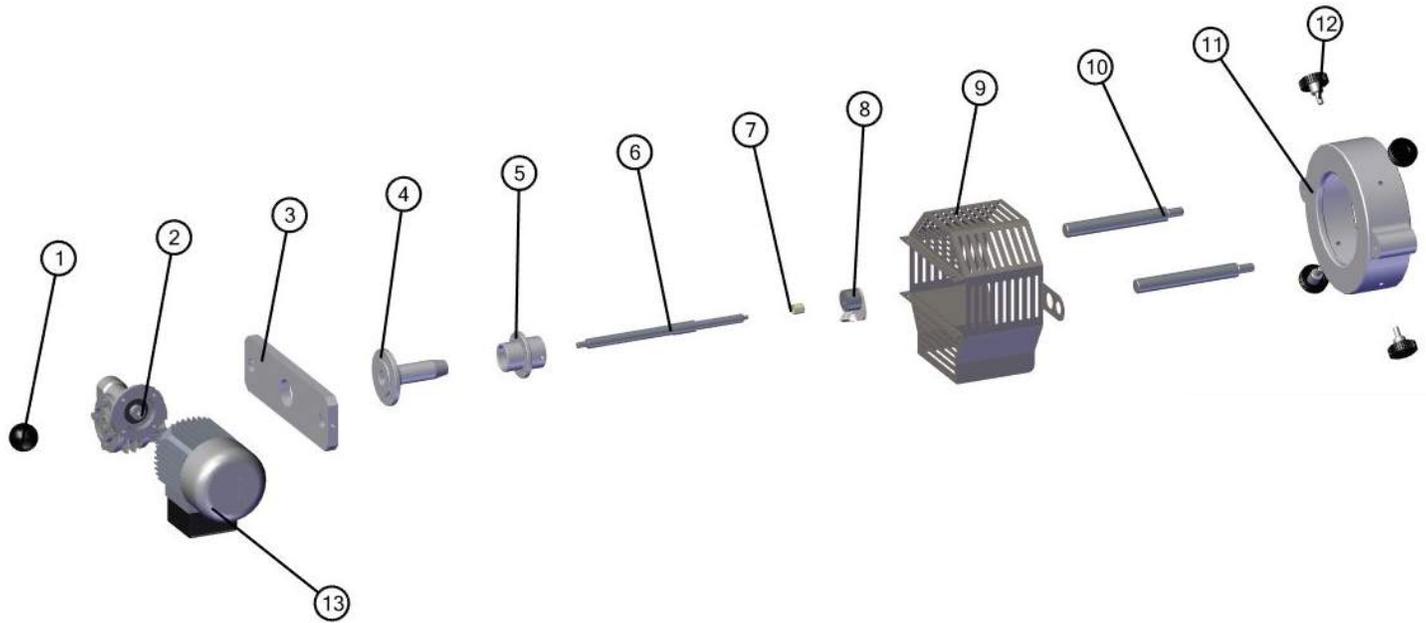



SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX130M

TABLE 4


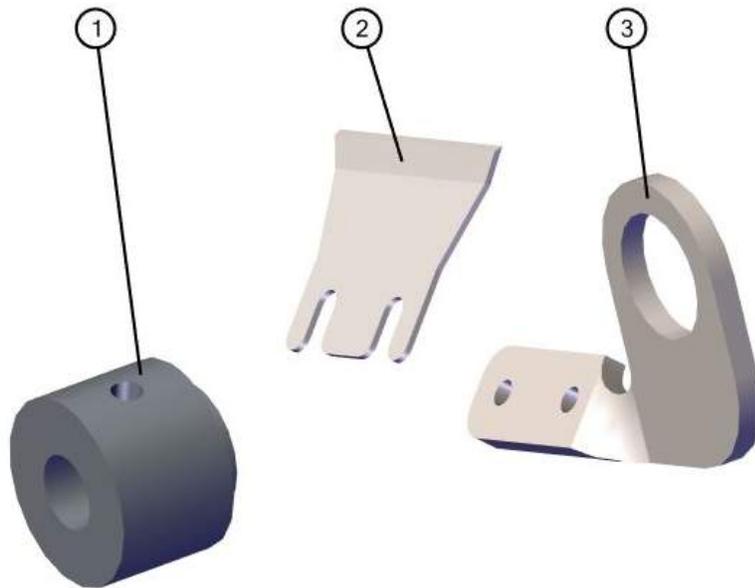




TABLE 5



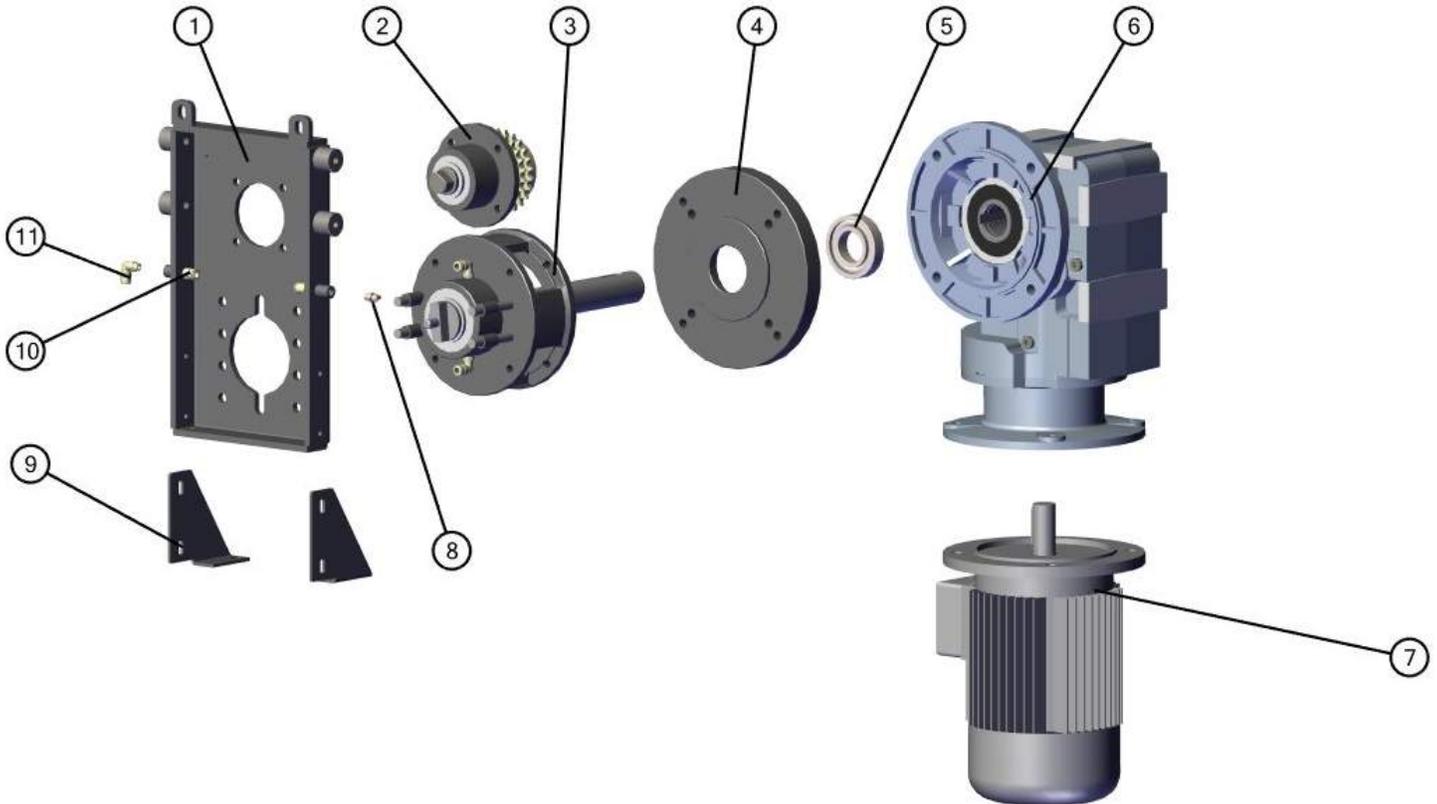


ARCOBALENO®

SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX130M

TABLE 6

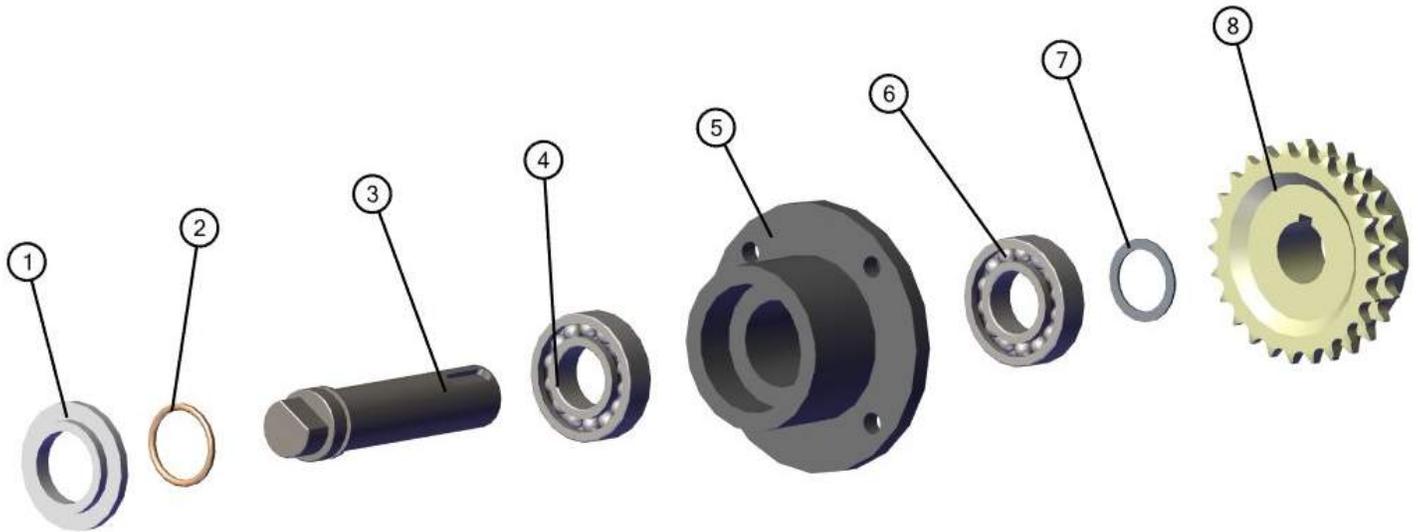




ARCOBALENO®

SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX130M

TABLE 7

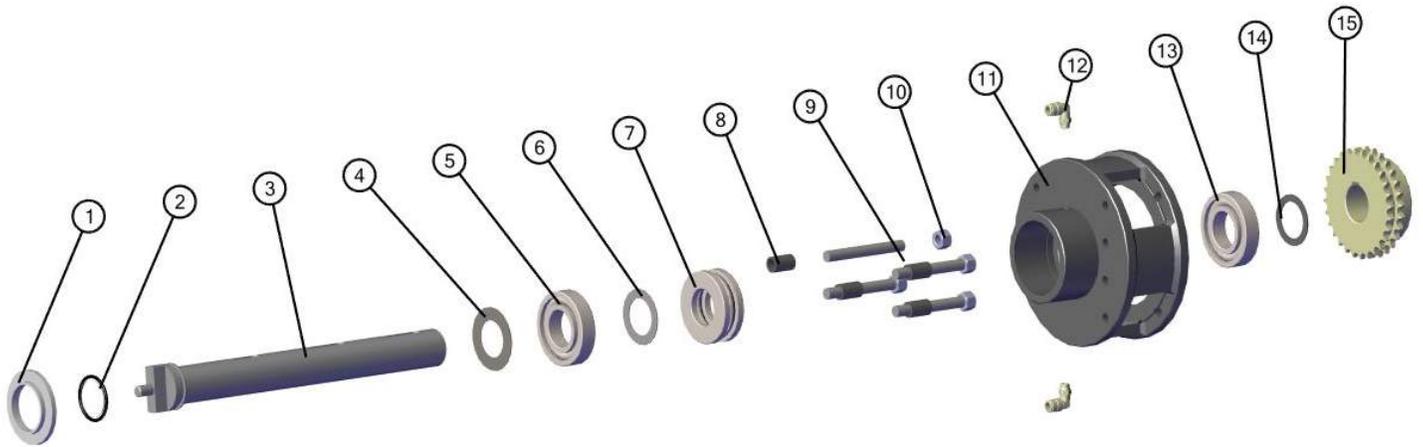




ARCOBALENO®

SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX130M

TABLE 8 - FRONT MIXING ARM PLUG

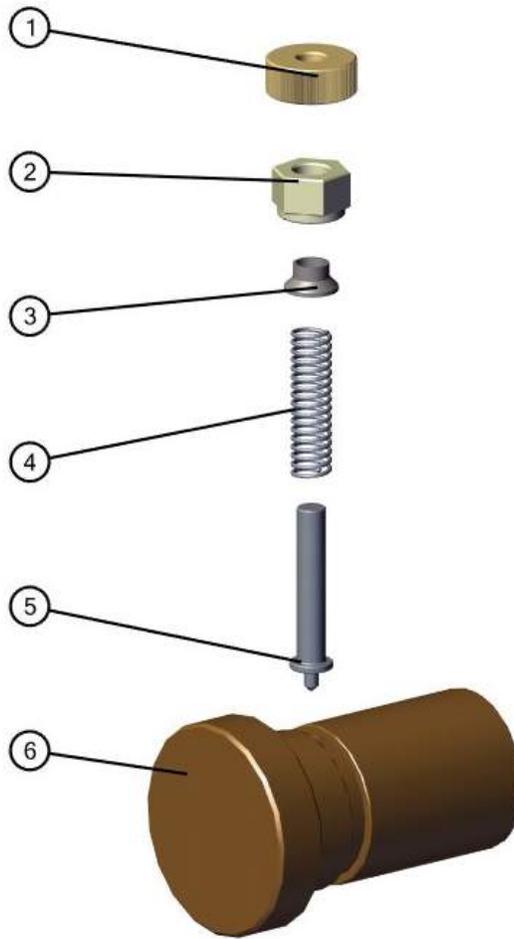




ARCOBALENO®

SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX130M

TABLE 9

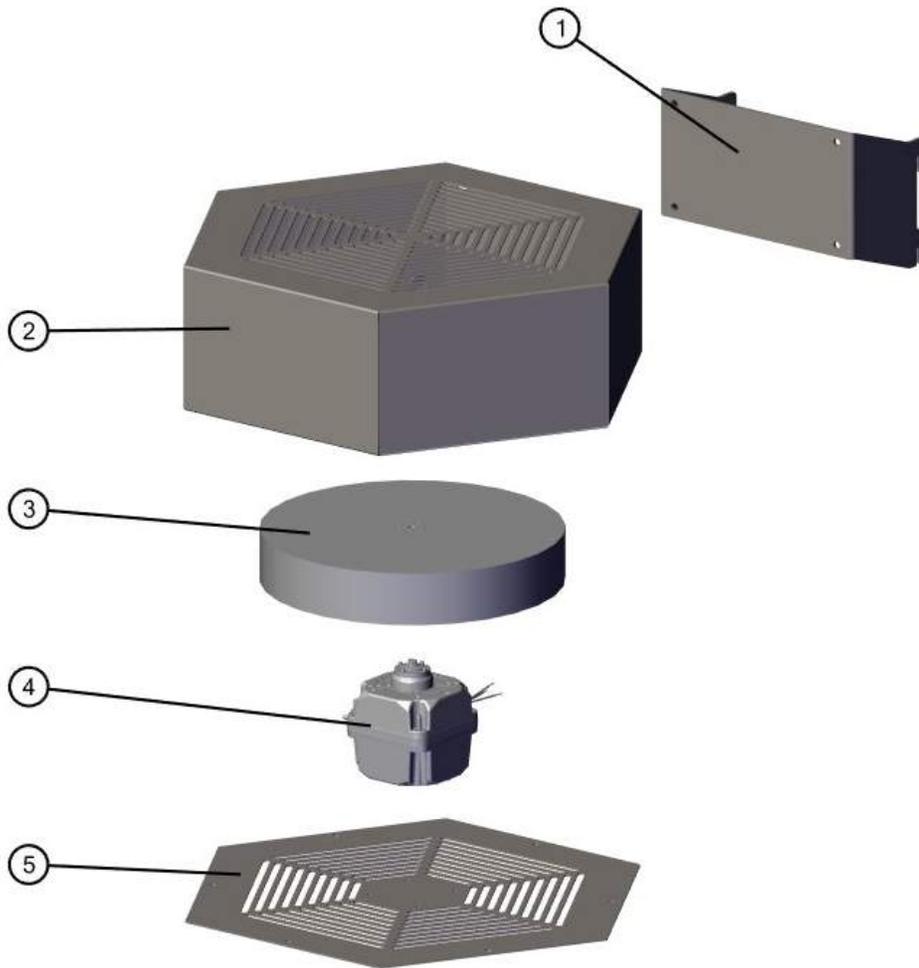




ARCOBALENO®

SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX130M

TABLE 10 - TOP MIXER

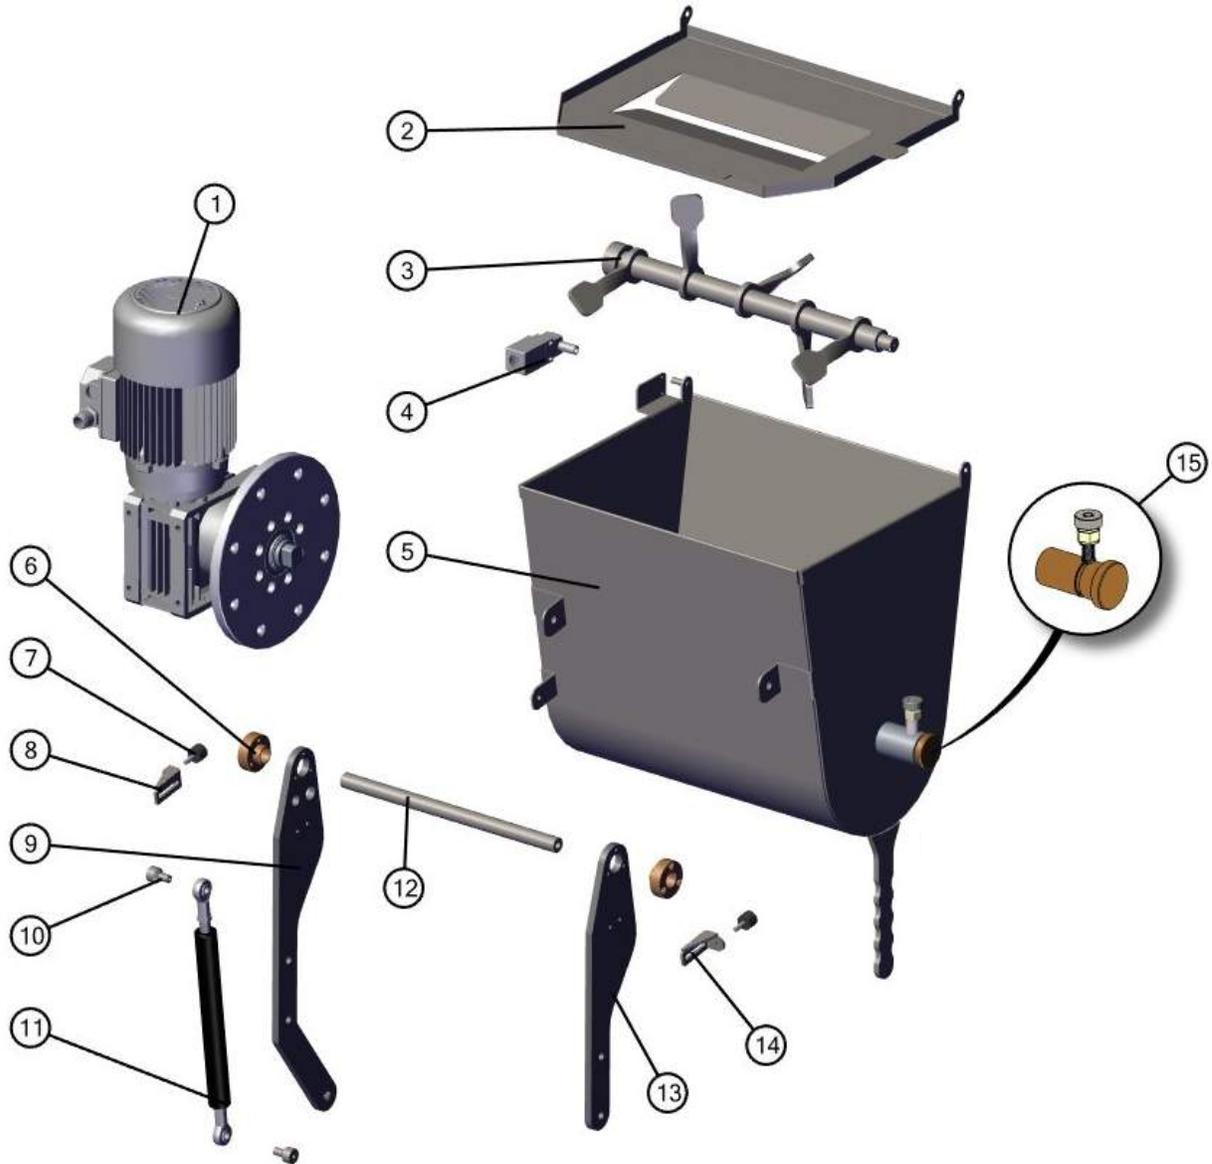




ARCOBALENO®

SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX130M

TABLE 11 - TOP MIXING ARM PLUG

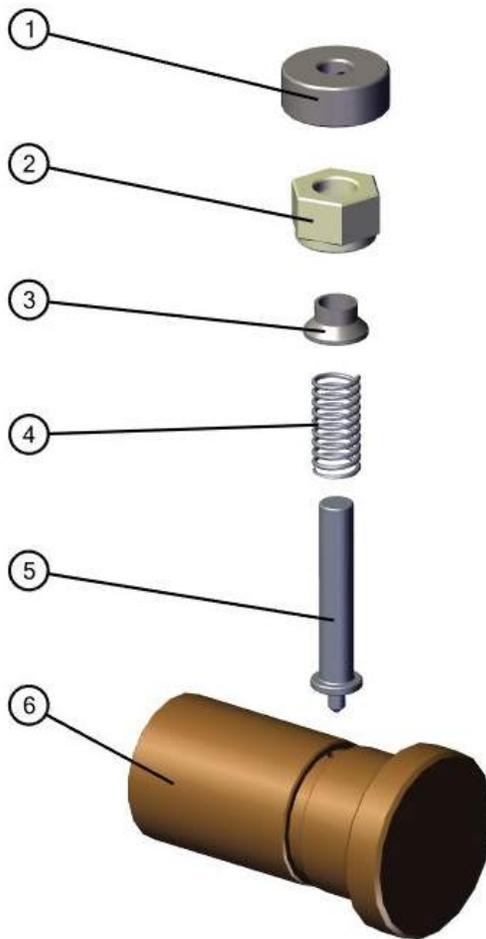




SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX130M

TABLE 12

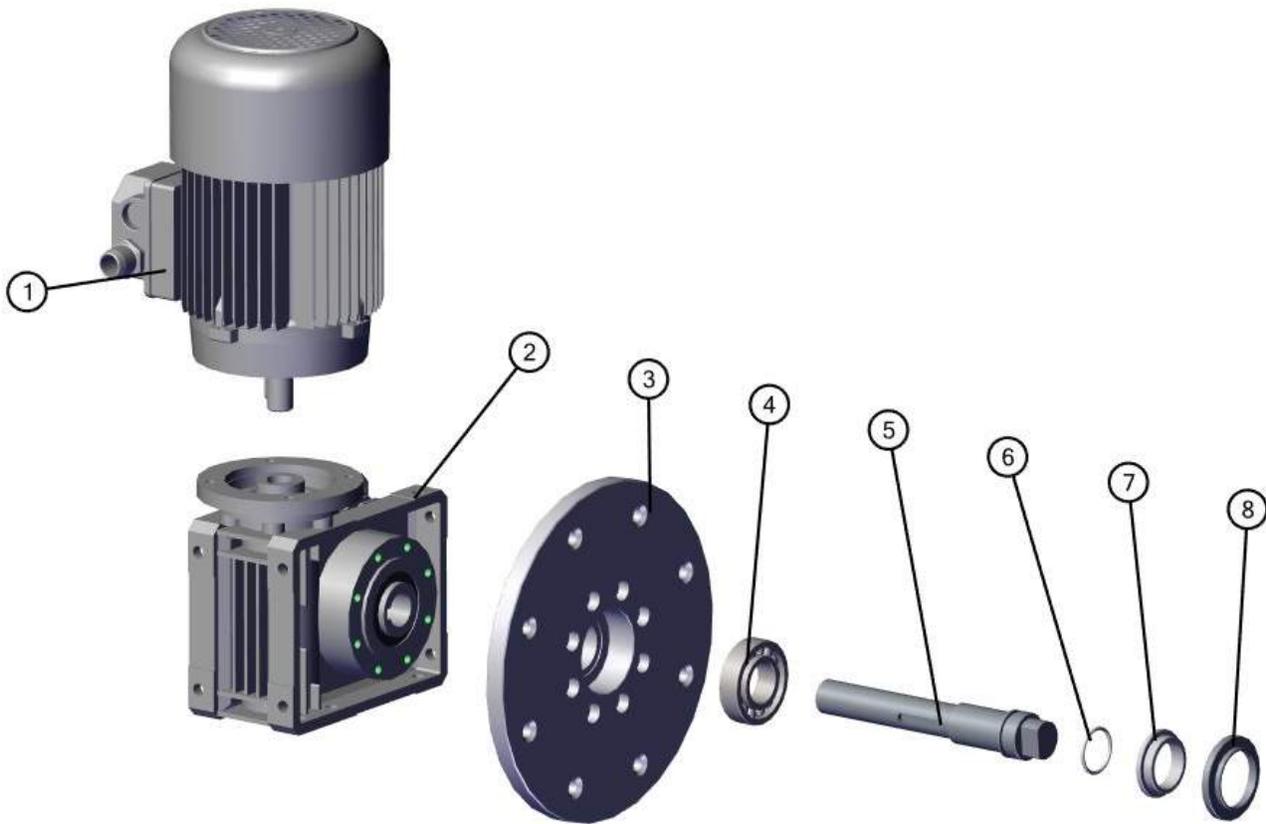



SPARE PARTS &
ELECTRICAL DIAGRAM
MODEL AEX130M

TABLE 13

