



A R C O B A L E N O[®]
PASTA EQUIPMENT

MODEL AEX130M OPERATING, INSTALLATION & MAINTENANCE MANUAL



IMPORTANT SAFETY NOTICE

This manual contains important safety instructions which must be strictly followed when using this equipment.

FOR SERVICE, CONTACT ARCOBALENO

If you have any questions or issues regarding your machine, please contact us at: **717.394.1402** or **service@arcobalenollc.com**. When contacting us, please have your serial number and model number available so we can assist you based on your machine's individual specifications.



A R C O B A L E N O[®]

Arcobaleno Machine Certification

The following machine(s) have been inspected and tested by Arcobaleno prior to shipment to customer:

Model number(s): _____

Serial Number(s): _____

And found to meet the following requirements as certified by the undersigned.

- All safety switches and E-stops function properly
- Machine power connections are installed correctly and function properly
- All covers and guards are present and undamaged
- The machine has been run and tested to meet the required standards
- An operating manual has been included in the packaging
- Appropriate tools have been included in the packaging
- The machine has been packaged properly and is free of physical defects

Authorized Arcobaleno Representative Signature: _____

Date: _____



ARCOBALENO®

SAFETY NOTICE/WARRANTY

MODEL AEX130M

IMPORTANT SAFETY NOTICE

To insure both safe and trouble-free performance, we stress that all personnel that will be involved with your new Arcobaleno Pasta Machine **must** read and understand these instructions **before** attempting to operate this unit.

LIMITED WARRANTY

**Warranty Effective only when Certificate of Acceptance is received.
Please mail back with enclosed pre-paid envelope.
If not received with-in 14 days warranty is VOID.**

As stated on the back of the customer's acknowledgment, ARCOBALENO, LLC. guarantees this device against defects in workmanship or material under use and **service for a period of twelve (12) months, which begins upon receipt of machine by the customer.** All obligations and liabilities under this guarantee are limited to repairing or replacing at our option, F.O.B. our plant of such allegedly defective units as are returned and carrier charges prepaid. All repairs or replacements are made subject to factory inspection of returned parts at company plants. No liability is accepted for consequential damage which may include but is not limited to damage or failure that has occurred due to misuse, acts of God, damage due to reinstallation labor or improper application.

Defects as defined in the above paragraph shall not include decomposition by chemical action (corrosion).

In the event that a defect in material or workmanship occurs during the first ninety (90) days of the warranty and if Arcobaleno determines that field service is required, Arcobaleno will provide the required service and parts free of charge. The buyer will be responsible for, and invoiced for all out of pocket travel and living expenses incurred by such a service call. After the initial ninety (90) days of the warranty, Arcobaleno will service the equipment at the customer's facility at its prevailing labor rates plus expenses. A purchase order will be required for any parts or service ordered under this warranty.

Guarantee on equipment and accessories furnished by outside manufactures shall be limited to the guarantees of the respective equipment and/or accessory manufacturer for such units.

FOR WARRANTY SERVICE

Contact the Arcobaleno warranty service department at **(800) 875-7096** to report warranty claims before arranging repair or attempting to return the unit to Arcobaleno, LLC.



ARCOBALENO®

TABLE OF CONTENTS
MODEL AEX130M

Section 1 GENERAL INFORMATION 5
Section 2 PRELIMINARY INFORMATION 9
Section 3 TECHNICAL DESCRIPTION & OPERATION 12
Section 4 INSTALLATION & START UP 17
Section 5 USE OF THE MACHINE..... 26
Section 6 MAINTENANCE..... 32
Section 7 SPARE PARTS & ELECTRICAL DIAGRAM 38

NOTES: _____



ARCOBALENO®

GENERAL INFORMATION
MODEL AEX130M

SECTION 1

GENERAL..... 6

PURPOSE OF MANUAL 6

WHERE & HOW TO KEEP THIS MANUAL 6

MANUAL UPDATE 7

COOPERATION WITH THE USER 7

MANUFACTURER’S WARRANTY..... 7

AFTER-SALE SERVICE..... 8

**1.1 GENERAL**

This publication, hereinafter simply defined as the “manual”, includes any information regarding installation, use, and maintenance of the “AEX130M” manufactured by Arcobaleno, LLC.

The recipients of this publication, generally defined as “users”, include all individuals who, according to their relevant involvement, need and/or are required to provide instructions or to attend this machine operationally.

These individuals can be identified as follows:

- ✓ Directors
- ✓ Chief of Operations
- ✓ Heads of Department
- ✓ Machine operators who are directly involved in its transportation, storage, installation, use, and maintenance, starting from its market introduction until its service
- ✓ Private direct users

This publication must be considered as being an integral part of the machine and, as such, it needs to be kept for future references until final dismantling and scrapping of the machine.

1.2 PURPOSE OF MANUAL

The purpose of this manual is to allow specific individuals to learn how to use this machine safely for a long period of time in order to perform any relevant tasks; provided that such individuals shall take any measure and arrange in advance any human resources and materials as necessary. This manual is written pursuant to Directives Machines 2006/42/CE. The machine’s intended use and configuration are the only ones approved by the manufacturer; users are advised to avoid usage of the machine in a way non-compliant with the instructions given. Every other use or configuration should be previously agreed with the manufacturer and, in such case, an Annex will be attached to this manual. The machine operator shall comply with any applicable labor law in force at the machine’s place of installation.

1.3 WHERE AND HOW TO KEEP THIS MANUAL

This manual should be kept in a safe and dry area where it is always available for consultation. It is advisable to make a copy which should be kept on file. In the event of exchanges of information taking place with the manufacturer, please refer to the rating plate and serial number. This manual should be kept for the entire life of the machine, and if needed, (for example damage that compromises its consultation, even if only partially, etc.), the user must purchase a new copy which should be requested to the manufacturer only.



ARCOBALENO®

GENERAL INFORMATION

MODEL AEX130M

1.4 MANUAL UPDATE

This manual forms an integral part of the machine and reflects its current status upon its market introduction. This publication complies with any law, directive, regulations in force at that time; it shall not be deemed unsuitable if updated at a later time.

Any changes, adjustments, etc. made on machines marketed afterwards shall cause the manual to be reviewed, however, any manual always represents the current condition of the machine associated with it.

Any additions to this manual that the manufacturer considers appropriate to send to every user should be kept in conjunction with its relative manual.

1.5 COOPERATION WITH THE USER

The manufacturer is available for any additional information its clients may have and for taking into consideration any suggestion as to improve its products and to make this manual more responsive to users needs. In case of equipment transfer, the equipment should be accompanied by this manual. In this regard, the principal user should send the address of the new user to the manufacturer, so that the manufacturer will be able to provide him/her with any necessary information and/or updates.

Arcobaleno, LLC. reserves title to this publication and warns against any reproduction, in whole or in part, without its prior written consent.

1.6 MANUFACTURER'S WARRANTY

In order to benefit from the manufacturer's warranty, users should strictly comply with any provision set forth in this manual, in particular such as:

- ✓ To operate the machine within its usage limits
- ✓ To carry out regular and accurate maintenance
- ✓ To select qualified personnel having the necessary skills and capabilities and being appropriately trained to use this machine

The manufacturer accepts no responsibility, direct or indirect, arising from:

- ✓ Non-compliance with operating instructions and uses which differ from those provided in this manual
- ✓ Usage from personnel unaware of any instructions and details included in this manual
- ✓ Non-compliant usage with specific regulations in force in the installation country
- ✓ Changes made on the machine without prior authorization
- ✓ Unauthorized repairs
- ✓ Use of unoriginal parts
- ✓ Exceptional events



ARCOBALENO®

GENERAL INFORMATION

MODEL AEX130M

Any transfer of the machine to a second user shall take place in conjunction with its related manual; the lack of it shall automatically cause decline of any responsibility on the part of the manufacturer for any incorrect use of the machine.

If the machine is transferred to a second user residing in a country whose language differs from the country of the first user, such first user shall be responsible for providing the second user with a reliable translation of this manual in the language of the country where the machine is transferred to.

1.7 AFTER-SALE SERVICE

For any after-sale service please refer directly to the manufacturer at the following address:

Arcobaleno, LLC.
160 Greenfield Road
Lancaster, PA 17601

Tel: 717.394.1402
Fax: 717.397.0258

service@arcobalenollc.com
www.arcobalenollc.com

AFTER HOURS TECH SUPPORT contact Antonio at 610.656.0391



ARCOBALENO®

PRELIMINARY INFORMATION
MODEL AEX130M

SECTION 2

COMPLIANCE OF RATING PLATES - LABELING10
PACKING - HANDLING10
STORAGE UPON RECEIPT11
MACHINE AND SUPPLY KIT INSPECTION11



PRELIMINARY INFORMATION

MODEL AEX130M

2.1 COMPLIANCE OF RATING PLATES - LABELING

As shown in particular in A, the rating plate includes main data on the manufacturer and on the machine in addition to the EC labeling. The rating plate is secured with four rivets.

As shown in particular in B, C, D, and E other rating plates are added in order to display general warnings as to the correct use of the machine.

Readability and preservation of rating plates:

Rating plates should always be kept in readable form concerning all data included. For such purpose, they should be cleaned on a regular base. In case of degradation and/or illegibility of any one piece of information included, users should request another plate from the manufacturer. Upon such request, they should mention the details included in the original plate and arrange for its substitution.

WARNING: The below rating plates should not be removed or covered with others.



A



B



C



D



E

2.2 PACKING - HANDLING

Machines are delivered completely assembled so that packaging and/or special protections are not included in the delivery. In case of different agreements between the manufacturer and the user regarding packing of parts or the entire machine as well as handling, see any specific instructions attached to this publication.



ARCOBALENO®

PRELIMINARY INFORMATION

MODEL AEX130M

Machines should be handled by using a fork lift truck or the appropriate material handling equipment and fabric slings (fabric/nylon) in conjunction with proper guards for sharp edges. For overall sizes, weights and features of the installation place, please see Sections 3 and 4.

2.3 STORAGE UPON RECEIPT

Storage can take place soon after delivery of the machine and is allowed for a maximum period of two years in sheltered areas with the following features:

- The storage area should be a sheltered place with a temperature of no less than 41° F / 5° C and not over 104° F / 40° C, with a humidity ratio not exceeding a value equal to 80%.
- Should the above mentioned values change in the course of storage, performing some preliminary checks shall be required before setting the machine at work (please consult with the manufacturer).
- Should the temperature within the storage area exceed or drop below the above mentioned values and the relative humidity goes over 80%, it shall be necessary to take proper measures such as using a bag barrier and hygroscopic salt.

WARNING: For storage periods longer than two years or under different environmental conditions, please request the relevant preservation procedures from the manufacturer.

2.4 MACHINE AND SUPPLY KIT INSPECTION

The machine and its relative supply kit (as agreed with the manufacturer) should be in perfect condition. Before shipping, each item is carefully checked and inspected, however, upon its receipt, it is always advisable to verify the completeness and working condition of the goods shipped.

In case of any defects and/or incompleteness, please inform the manufacturer immediately and comply with his instructions before proceeding with the installation of the machine.

Verify any possible damages to the frame, buckles, etc. cracks or tears of electrical conductors, etc... Take the machine's documentation and verify the absence or any discrepancy between what is stated in the shipping documents and the goods received.

Standard supply kit:

- ✓ Machine Certification
- ✓ Certificate of Acceptance - Please mail back with enclosed pre-paid envelope.
If not received with-in 14 days warranty is VOID.
- ✓ Operator's manual - installation, usage, and maintenance



ARCOBALENO®

**TECHNICAL DESCRIPTION
& OPERATION**
MODEL AEX130M

SECTION 3

GENERAL FEATURES AND RECIPE13

TECHNICAL DATA14

MACHINE CONFIGURATION14

EXPECTED USE - INTENDED USE14

OPERATING ENVIRONMENT16

USERS16



TECHNICAL DESCRIPTION & OPERATION MODEL AEX130M

3.1 GENERAL FEATURES AND OPERATING TIPS

The short pasta machine AEX130M model represents a new concept and exhibits a high productivity level. The following are its main features:

- Extruding/mixing bowl capacity 33 lbs. / 15 kg. of dough (front mixer)
- Kneading/mixing bowl capacity 33 lbs. / 15 kg. of dough (top mixer)
- Mechanical transmission chain group for the movement of the mixing arm
- Electric system and box pursuant to current regulations in force; motors and equipment 220V 60HZ
- Three-phases voltage, auxiliary low-voltage equipment 24V
- 3 Hp three-phase motor with mechanical driving belt
- Stainless steel extrusion tube with water cooling system- alimentary bronze screw
- Horizontal extruding head complete with bronze die ring
- Electronic rotating knife for cut of short pasta
- Electric drying pasta fan



TECHNICAL DESCRIPTION & OPERATION

MODEL AEX130M

3.2 TECHNICAL DATA

Model	AEX130M
Hourly Production*	Up to 200 lbs/hr *Production varies by pasta shape
Front Mixer Capacity (flour)	33 lbs
Front Mixer Production (flour+liquid)	43 -45 lbs/batch
Top Mixer Capacity (flour)	33 lbs
Top Mixer Production (flour+liquid)	43 -45 lbs/batch
Electrical Power	220V/3*/60Hz 12 Amps *3ph must be balanced within 2%
Nema Plug	L15-20
Cord Length	8 ft
Water/Drain Connection	1/2" BARB (flexible hose suggested)
Water Cooling	Water line temp 45-60°F
Water Supply Line Volume	1 gallon per minute - 70 psi max
Machine Dimensions	32"W x 58"D x 65"H
Shipping Dimensions	38"W x 64"D x 72"H
Machine Weight	690 lbs
Shipping Weight	800 lbs
Shipping Class	85

3.3 MACHINE CONFIGURATION

All machines are exclusively marketed under the configurations set forth in this manual. Refer to Figure 3-1.

3.4 EXPECTED USE - INTENDED USE

This machine is intended for fresh pasta production. The dough is produced by the mixing arms in the mixing bowl. The shaping is obtained by the extrusion operation, the die mold and the cutting operation by the electronic rotating knife. The primary ingredients, the time of mixing operation, the extrusion velocity, the cutting velocity and the die mold determine the final product.

The use herein indicated is the only one recognized by the manufacturer. In the event that the manufacturer and the user agreed on specific operating conditions, these will be documented and enclosed as annexes to the machine manual, thus forming an integral part of it.




TECHNICAL DESCRIPTION & OPERATION

MODEL AEX130M

FIGURE 3-1

- | | |
|------------------------------------|-------------------------------|
| 1. Main power switch | 14. Extrusion tank safety lid |
| 2. Mixing arm extrusion tank | 15. Fan |
| 3. Mixing arm catch extrusion tank | 16. Touch screen |
| 4. Mixing arm plug extrusion tank | 17. Extrusion gearbox |
| 5. Kneading tank | 18. Extrusion engine |
| 6. Electronic rotating knife | 19. Kneading gearbox |
| 7. Ring nut die holder | 20. Kneading engine |
| 8. Pasta die | 21. Knife gearbox |
| 9. Extrusion auger | 22. Knife engine |
| 10. Kneading tank safety lid | 23. Emergency button |
| 11. Mixing arm catch kneading tank | |
| 12. Mixing arm plug kneading tank | |
| 13. Mixing arm kneading tank | |

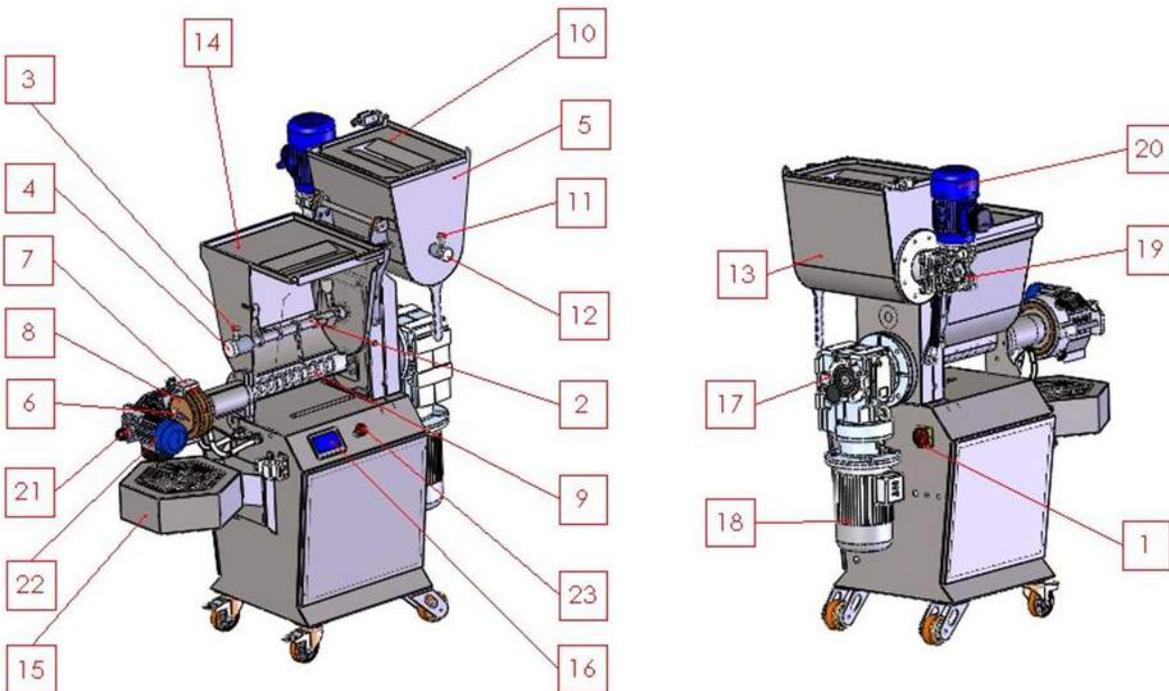



TECHNICAL DESCRIPTION & OPERATION MODEL AEX130M

3.5 OPERATING ENVIRONMENT

The expected operating environment must have the following features:

- Temperature:
 - Minimum: 41° F / 5° C
 - Maximum: 104° F / 40° C
- Maximum relative humidity/dampness: 80%

The machine cannot be operated in open places, or in fire or explosion risk environments, or in such places where usage of explosion-proof components is required.

3.6 USERS

In selecting the most appropriate person (operator) to operate the machine, who will necessarily be someone fit for work in compliance with the regulations in force, the individual in charge of company security shall take into consideration the physical aspect (no impairment), the psychological aspect (mental balance, sense of responsibility), as well as the educational level, training, experience, and knowledge of rules, instructions, and measures designed for accident prevention.

Based on the dispositions and skills emphasized by the operator, the individual in charge of company security shall arrange for his/her training on the machine as to provide him/ her with a complete knowledge of this machine.

In addition the operator will learn the content of this manual as well as its attachments.

WARNING: Don't allow anyone to approach the area when the machine is working and forbid its usage to individuals unfamiliar with ongoing operations.



ARCOBALENO®

INSTALLATION & START UP

MODEL AEX130M

SECTION 4

PRELIMINARY CHECKS	18
INSTALLATION	18
CONTROLS AND INSTRUMENTS	19
CONNECTION TO THE ELECTRIC LINE	24
CONNECTION TO THE WATER LINE	25



4.1 PRELIMINARY CHECKS

- Verify the integrity and perfect condition (no signs of rust, humidity, dent, etc.) of both the machine and of any anticipated accessories within the consignment.
- Assess the integrity of the electric installation wiring (no signs of cracks, squashes, etc.)
- Verify that the expected way to get to the installation place (machine handling) is free from any possible obstacles (things or persons). Foresee contingent protection barriers and get to the selected installation place.

4.2 INSTALLATION

Proceed with the machine setting in the area specifically designed pursuant to instructions given in Section 2 of this manual.

Operator

This machine requires only one operator for the installation.

During normal working order the operator must stay in its proximity, at “visual” distance in order to intervene in case of malfunction or loading/downloading operations, as the case may be.

Lighting System


This machine is not equipped with an off-the-shelf lighting system. The lighting level of the environment should always avoid shadow areas and ensure that any operation is within the maximum levels of security in relation to its usage type.

Should servicing be necessary in parts where there is not enough lighting, it is mandatory to be equipped with portable lighting systems in order to avoid shadows that prevent or reduce visibility on the place of intervention or in its surroundings.

Water Cooling System Extrusion Tube Connection

- connect a water pipe to the hydraulic fitting (WATER INLET)
- connect a water pipe to the hydraulic fitting (WATER OUTLET) for water discharge

See Section 4.5 for more.

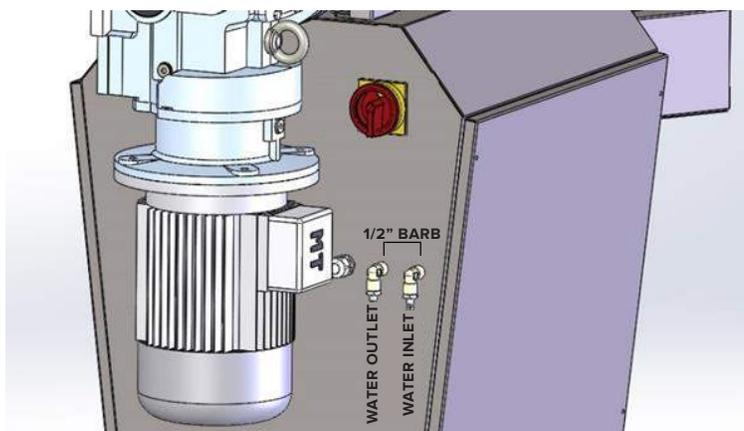



ARCOBALENO®

INSTALLATION & START UP

MODEL AEX130M

4.3 CONTROLS AND INSTRUMENTS

There are 5 tabs located across the top of the touch display:
HOME RECIPES SETUP ALERTS COMBI

HOME TAB

The Home tab has three pages; Mixing (Front Mixer), Extrusion, and Temperature. To cycle through the pages, select the appropriate button located in the lower left/right corners. The active recipe is shown in the lower center.

MIXING SETTINGS - Press HOME or MIXING

Mixing Speed:

- The mixing speed is controlled by the top value (0-100%).
- To increase or decrease the speed utilize the “+” or “-” button or select the value to enter a new value.
- To Mix, press the “START MIXING” button.
- The red triangle in the upper left hand corner of the button will change to green when active.

Mixing Time:

- The lower value is the mixing timer displayed in minutes.
- To increase or decrease the time utilize the “+” or “-” button or select the value to enter a new value.
- To reset the value, press “RESET”.

EXTRUSION SETTINGS - Press EXTRUSION


Extrusion Speed:

- The extruding speed is controlled by the top value (0-100%).
- To increase or decrease the speed utilize the “+” or “-” button or select the value to enter a new value.
- To Extrude, press the “START EXTRUSION” button.
- Confirm the dough is well mixed and press the green check mark to proceed. The red X can be pressed to cancel the extrusion operation.
- The red triangle in the upper left hand corner of the button will change to green when active.

Knife Speed:

- To increase or decrease the cutter speed utilize the “+” or “-” button or select the value to enter a new value.
- Press the “START KNIFE” button to activate the cutter.
- The red triangle in the upper left hand corner of the button will change to green when active.

NOTE: An Alert will be produced if the cutter is activated while the cutter attachment is not connected. To clear the alert, cycle power or cycle emergency stop button.

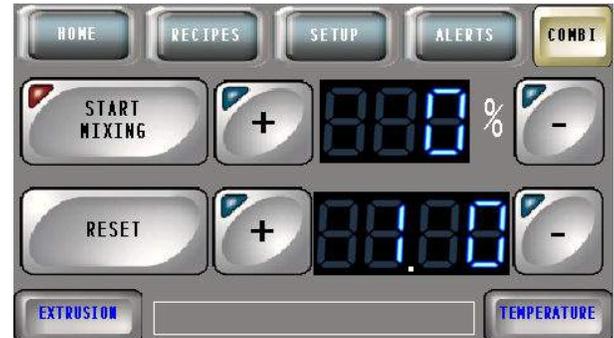



ARCOBALENO®

INSTALLATION & START UP

MODEL AEX130M


TEMPERATURE SETTINGS - Press TEMPERATURE

Setting Temperature:

- Set the desired extrusion temperature via the “+” or “-” button or select the value to enter a new value.

Extr. Chamber Temperature:

- Displays the current extrusion chamber temperature.

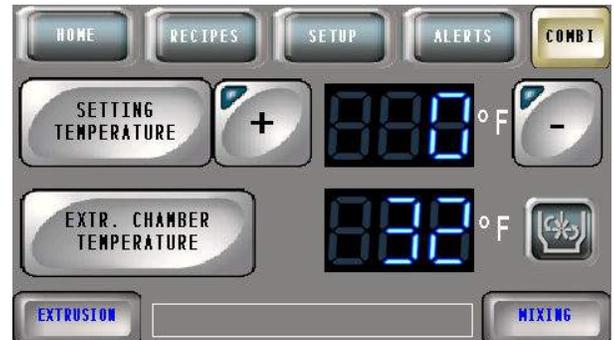

COMBI (TOP MIXER) TAB

The Combi tab is for operation of the top mixer. It has two pages; Mixer Time and Mixer Rotation. To cycle through the pages, use the arrows located in the lower left/right corners. The active recipe is shown in the lower center.

COMBI MIXING SETTINGS

Automatic Mixer Time:

- The value is the mixing timer displayed in minutes.
- To increase or decrease the time utilize the “+” or “-” button or select the value to enter a new value.
- To Mix, press the “START AUTOMATIC MIXER” button.
- The red triangle in the upper left hand corner of the button will change to green when active.
- To reset the value, press “RESET”.

Automatic Mixer Rotation:

- Select the clockwise (left) button to set the direction of the mixing arm to clockwise.
- Select the counter-clockwise (right) button to set the direction of the mixing arm to counter-clockwise.



WARNING: If the mixing/kneading tank runs and the mixing shaft turns in the opposite direction of the signal on the display, it is necessary to invert the two feeding phases.

END PHASE:

- Stop the machine and open both the main tank and Combi tank lids.
- Tilt the Combi tank forward using the handle and empty dough into main tank.



ARCOBALENO®

INSTALLATION & START UP

MODEL AEX130M

RECIPES TAB

The Recipes tab allows the operator to program recipes for each die or pasta recipe. The recipes can then be selected to change all of the parameters found on the home tab.

Selecting a Recipe:

- Select the desired recipe.
- Select the recipe by pressing the “SELECT RECIPE” button located in the upper right corner.
- The recipe is now selected and displayed in the top box on the recipes tab and across the bottom of the home page.

ALTERING RECIPES

Activate Parameter Editor Mode:

- To enter parameter editor mode, select password.
- Enter password “12345”.
- Select “ENTER”.
- Recipe parameters can now be edited.

Change Recipe Parameters:

- Select the desired recipe to be altered.
- Select the “SELECT RECIPE” button to select that recipe.
- Select the “HOME” tab button.
- Alter the desired parameter.
- Select the “RECIPE” tab button.
- Select the “SAVE RECIPE” button.
- Confirm to save parameters.

Rename a Recipe:

- Select the desired recipe to be renamed.
- Select the “RENAME RECIPE” button.
- Enter new recipe name.
- Select “ENTER”.

Delete Recipe:


- Select recipe
- Select the “DELETE RECIPE” button.
- Confirm to delete recipe.

Copy Recipe:

- Select recipe.
- Select the “COPY RECIPE” button.

Exit Parameter Editor Mode:

- To exit parameter editor mode cycle power.

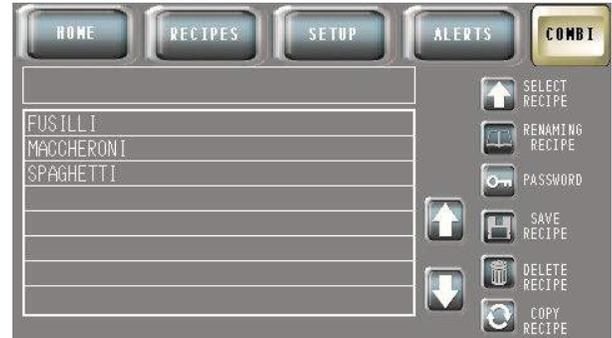



ARCOBALENO®

INSTALLATION & START UP

MODEL AEX130M

SETUP TAB

Allows for setup of the machine.

Language:

- Select the desired language by selecting a flag.

Information:

- Displays machine information and Arcobaleno information.



Serial number of machine listed in program information



ALERTS TAB

If an Alert is triggered the Alerts tab button will flash red.

Clearing Alerts:

- Select the "ALERT" tab.
- Review the message displayed.
- Resolve the displayed alert.

NOTE: If resolving the display issue does not clear the alert, cycle power or cycle emergency stop button.





ARCOBALENO®

INSTALLATION & START UP

MODEL AEX130M

ALARMS	CAUSE	SOLUTION
PRESSED EMERGENCY	The main emergency button is pressed.	Once out of the emergency turn the emergency button clockwise to cycle it.
SWITCH-BOARD LID OPEN	The switch-board lid is open.	Close the door of the electric panel with the related key.
TANK SAFETY LID OPEN	The lid to the front mixer isn't in the right position. The magnetic sensor doesn't read the magnet on the repair.	Put the lid in the right position on the bowl and fix it with the supports. Clean-off the magnetic sensor head and the magnet.
TANK COMBI SAFETY LID OPEN	The lid to the combi (top) mixer isn't in the right position. The magnetic sensor doesn't read the magnet on the repair.	Put the lid in the right position on the bowl and fix it with the supports. Clean-off the magnetic sensor head and the magnet.
ACTIVATED THERMIC	The engine is overworking. It has a discharge towards the ground and the thermic relay or the related thermal-magnetic switch has been activated.	Check which relay or switch has been activated on the electric panel. Check the related motor by consulting the electric diagram. Only after checking and eliminating the emergency, reengage the relay or switch.
ALARM INVERTER	An inverter is in alarm.	Check the alarm code on the inverter display. Check the related manual for causes of the alarm. Only after determining and eliminating the reason for the alarm, turn off the machine to reset it. Wait for 1 minute before turning it on again.
PROCEED WITH GREASING OPERATION	The machine exceeded the total of 300 working hours- it is necessary to replace the grease.	Proceed with the greasing (see Section 6.4)
UNDER DEVICE STOP	Stop of the entire line.	Check the machines on the down-side.

ATTENTION: If the alarm, the problems or the actions taken to correct them are not clear or sufficiently explained or in the event of any other problem, contact the manufacturer before restarting the machine, otherwise there can be serious damage to the machine itself or people.



ARCOBALENO®

INSTALLATION & START UP

MODEL AEX130M

4.4 CONNECTION TO THE ELECTRIC LINE

The operator is responsible for providing a suitable electronic system. The operator should arrange for connection to a proper power source equipped with wires of suitable sizes. The supply source should be suited to the machine and comply with any relevant regulations.

Any electrical equipment of AEX130M meets the standards CEI-EN 60204, therefore, supply should be within a $\pm 10\%$ range based on the current value and within a $\pm 1\%$ range continuously, as well as within a $\pm 2\%$ range for a brief period of time based on the frequency value.

The electric system should be equipped with an automatic release system, having a differential thermal-magnetic switch, as well as with a ground system able to ensure the minimal parameters requested by regulations. It should also respect specific provisions of the law in force in the machine's installation country.

Prior to performing any connection, verify that the features of the electric line correspond to any technical information included in the electric system's diagram and in the plate located inside the box.

Any equipment connection to the electric system (when the manufacturer didn't already prearrange for a cable with a EC plug), should be carried out only by qualified and trained staff, directly to the terminal or the master switch through the relevant fairlead.



ARCOBALENO®

INSTALLATION & START UP

MODEL AEX130M


4.5 CONNECTION TO THE WATER LINE

The water pressure should not exceed 70 PSI / 4.8 bar. Recommended temperature is 45-55° F / 7.2-12.7° C. You can regulate the temperature of the extrusion with the tap. Machine Temperature should be between 95-105° F / 35-40.5° C.

Is chilled water detrimental to the machine? No, it's just going to cool the machine faster.

You will need a cold water connection and drain. Both input and output connection size is half-inch. Height of the water connection is 12" off the floor and located on the back of machine approximately in center of machine.

Equipment is to be installed with adequate back flow protection to comply with applicable federal, state and local codes.

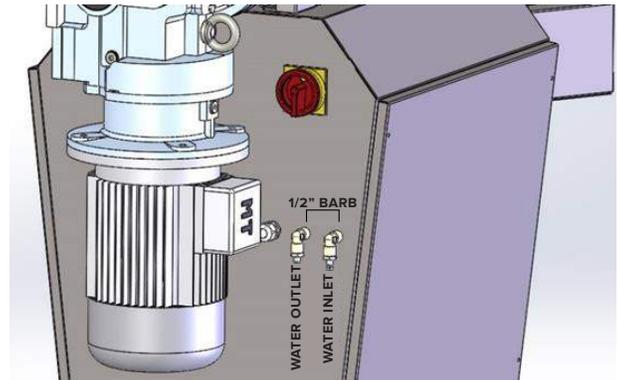

Activating the Water Cooling Function

When setup in the standard configuration (plumbed to a water line and drain), to activate the water-cooling function two conditions must be met:

Condition #1: The extrusion mode must be active.

Condition #2: The observed temperature in the extrusion chamber must be greater than the setpoint temperature.

To alter the setpoint temperature:

1. Navigate to the "HOME" tab
2. In the bottom right corner, navigate to the "TEMPERATURE" page
3. Set the desired extrusion temperature via the "+" or "-" button or select the value to enter a new value.

NOTE: The current extrusion temperature can be monitored on this page.





ARCOBALENO®

USE OF THE MACHINE

MODEL AEX130M

SECTION 5

CERTIFICATION	27
OPERATIVENESS.....	27
DIE CHANGING.....	28
DURING USAGE.....	29
UNAUTHORIZED USE.....	30
ADJUSTMENTS.....	31
STANDSTILL & EMERGENCY OPERATIONS	31
DEACTIVATION.....	31



ARCOBALENO®

USE OF THE MACHINE

MODEL AEX130M

5.1 CERTIFICATION

Before starting for the first time any operating activity, perform the checks provided for in Section 4

- Supply the electric box
- Activate any circuit by turning on the master switch

5.2 OPERATIVENESS

WARNING: A complete reading of this instruction manual and of any related attachments is necessary prior to starting any operating activity. The warranty according to the working order of the machine within safety conditions and absolute performance according to its expected use, is strictly dependent on accurate application of this instruction manual and of any related attachments.

Operator

He/she should be a person fit for work and able to attend to any needs regarding the machine operation (see Section 3). He/she should not allow any other person to approach the area when the machine is working and should forbid its use by staff unfamiliar with such activities. He/she should follow any directions provided in this manual in order to achieve maximum performance, minimum wear and tear, and greater security for both himself/herself and others.

WARNING: If your machine is not functioning properly, don't perform any operations that might compromise the good working order of the whole installation. When in doubt, always request the help of a team of specialists authorized by the manufacturer.


√ ANY VIOLATION OR DAMAGE TO THE EQUIPMENT ON THE PART OF THE USER RELIEVES THE MANUFACTURER FROM ANY LIABILITY AND MAKES THE USER EXCLUSIVELY LIABLE FOR ACCIDENT PREVENTION TO THE COMPETENT AUTHORITY

WARNING: It is advisable to read any specific paragraph several times and, if in doubt, to consult the manufacturer indicating the passage whose construction seems unclear.



5.3 DIE CHANGING

- Stop the machine by pressing the proper stop button.
- Turn off and remove the cutting knife if in use.
- Use caution as the die and die ring may be hot from use.
- Unscrew the die ring with the provided die ring wrench, remove the die and replace with new die.
- **NOTE:** The supplied hammer can be used to aid in removal of the die ring with the die wrench. While holding the die wrench firmly, tap the arm of the die wrench with the hammer as shown. Use care when using the hammer to avoid damage to the user or the machine.

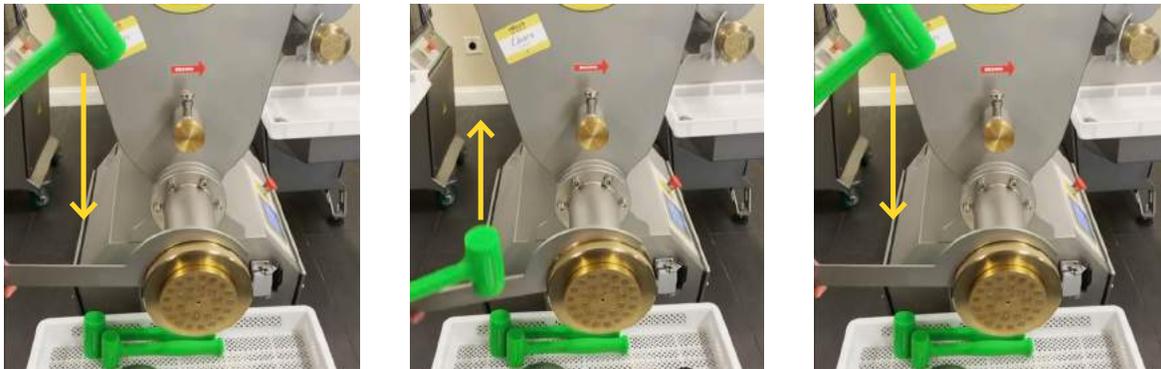

Example shown with AEX130.

- **WARNING:** Do not press the mixing start button once die ring is off of machine. Doing so will cause the auger to become stuck.
- **NOTE:** If the die is difficult to remove, press the EXTRUSION start button to run the machine for a few seconds to release pressure from the extrusion neck. Make sure to catch the die so that it is not damaged.
- Secure the new die by screwing the die ring back onto the extrusion neck. The die ring should turn smoothly. If it does not, the die ring holder grooves may have dough that needs to be removed.
- **NOTE:** To remove dough from the die ring, use the stainless steel tool provided in the cleaning kit. If the dough is not removed, it can damage the threads of the extruding head.
- Immerse the used die in water until it is needed again. Failure to do so will cause the dough inside of the die to become like cement.

Lasagna Die:

The lasagna die should be placed into the die ring so that the cutting slot (small pin) is situated at the 12 o'clock or 6 o'clock position. This aids the opening of the pasta tube.

- To get a thin sheet tighten the central screw (clockwise) to desired thickness
- To get a thick sheet loosen the central screw (counter-clockwise) to desired thickness

NOTE: Open the die BEFORE removing from the extruder to allow water flow through the die when submerged after use. To open the die, loosen the central screw (counter-clockwise) and run the machine for a few seconds so that the die is pushed out.



ARCOBALENO®

USE OF THE MACHINE

MODEL AEX130M

5.4 DURING USAGE

Expected use - precautionary standards and measures:

A correct use of the machine allows operators to fully benefit from its performance within complete safety conditions. Such potential is guaranteed only by compliance with the directions provided thereunder, therefore:

ALWAYS follow this manual's directions and instructions and, prior to start up production, verify the integrity of the machine parts.

ALWAYS observe any instructions and possible warnings marked on the machines; any warning sign displayed on the machine should always be readable.

ALWAYS assess the appropriateness of upkeep (cleaning, etc.) both of the machine and its main parts.

ALWAYS verify the suitability and working order of the electrical system; in particular check the connection and make sure there are no insecure or dangerous connections.

ALWAYS work under the best lighting conditions as to the whole installation and, in particular, in the application area.

Before leaving the work area, ALWAYS disconnect the machine's feeding line as necessary.

At any time during inspections, repairs, routine maintenance services of the machine, ALWAYS disconnect the machine and the electric box.

ALWAYS keep clean and dry the floor surrounding the machine.

At any time during operation, ALWAYS wear suitable work clothes (including individual safety devices) subject to work environment safety standards and warning signs displayed on the equipment designed to prevent possible accidents.

ALWAYS report any defect during running (suspected breakage, incorrect movements, excessive noise) to the department head and put the machine out of order by disconnecting the equipment.

Use proper signs to indicate that the machine or the whole production line is out of order.

ALWAYS use the machine in a sheltered area, within a suitable operating environment as specified in this manual.

ALWAYS use original replacement parts.



ARCOBALENO®

USE OF THE MACHINE

MODEL AEX130M

In case of servicing of the machine's electric system ALWAYS contact qualified and trained personnel.

In case of doubt as to the real construction of any operating procedures described in this manual, ALWAYS contact the manufacturer; don't perform any actions if the operating procedures seem unclear to you.

5.5 UNAUTHORIZED USE - UNEXPECTED USE - USE NOT RECOMMENDED - EXPECTED AND UNEXPECTED IMPROPER USE

Any machine usage for unauthorized operations, its improper use and lack of service can endanger personnel safety in addition to compromising functionality and security.

The measures provided hereunder, which obviously cannot cover the whole spectrum of improper usage possibilities, represent those more "reasonably" expected and, therefore, should be considered absolutely forbidden:

NEVER use the machine under unexpected environmental conditions.

NEVER use the machine with "temporary" connections, such as temporary cables which are not insulated.

NEVER allow any unfit person to use the machine.

NEVER use the machine without wearing suitable work clothes (including individual safety devices) subject to work environment safety standards and warning signs displayed on the equipment designed to prevent accidents.

NEVER change any safety devices, remove protection measures and/or damage the equipment.

NEVER leave the machine unattended when already qualified for operating activities.

NEVER use the machine to perform different tasks from the ones it was intended to.

NEVER change functional and performance features of the machine and/or of its components in order to increase production capacity.

NEVER allow personnel unfamiliar with ongoing operations to approach the area when the machine is working.

NEVER use or service the machine under inadequate or poor lighting/visibility.

NEVER use the machine if the content of this instruction manual was not fully understood.



ARCOBALENO™

USE OF THE MACHINE

MODEL AEX130M

NEVER carry out any routine maintenance activity, inspections or repairs without first deactivating the machine and the whole production line.

NEVER use any replacement parts not original or not recommended by the manufacturer.

NEVER have the machine serviced by inexperienced staff.

NEVER leave the machine unattended after any service without posting the appropriate warning sign and informing the department head.

5.6 ADJUSTMENTS

To obtain the length of the pasta desired, adjust the rpm (speed) of the knife using the control display.

5.7 STANDSTILL AND EMERGENCY OPERATIONS

To bring the machine to a temporary stop, press the proper push button. In case of emergency press the emergency push button (fig. 3-1, no. 23), so that the whole equipment shall be deactivated.

5.8 DEACTIVATION

To deactivate the machine at the end of the work shift, turn off the main switch and make sure that the light of the numbered switches on the control panel goes off.

Deactivate the department feeder line relative to the electric box.

Proceed with routine maintenance procedures expected daily at the end of production (see specific paragraph within Section 6).

WARNING: Whenever necessary, post a sign on the machine indicating any defects and/or adjustments which occurred during its use or usage of the equipment related to the entire production line. Before leaving the work place, please inform the department head about the above.



ARCOBALENO®

MAINTENANCE
MODEL AEX130M

SECTION 6

GENERAL.....33
ROUTINE MAINTENANCE.....33
SCHEDULED MAINTENANCE.....33
MAINTENANCE AFTER 300 WORKING HOURS.....34
CLEANING.....35
TROUBLESHOOTING.....37



6.1 GENERAL

The maintenance plan includes routine procedures, that is operations that should be performed daily and don't need any special instruments and/or equipment; and scheduled procedures, that is operations which may involve partial disassembly and removal of safety devices.

For scheduled maintenance procedures contact only competent and experienced department maintenance staff.

WARNING: Prior to carrying out any maintenance procedure make sure that the equipment is deactivated from the feeder line.

6.2 ROUTINE MAINTENANCE

Daily procedures before putting the machine into service:

Carry out a visual inspection by verifying the correct tightening/clamping of any component; perform a test on the idling machine in order to locate any faults/defects, creakings, abnormal noises, etc., and operate as deemed necessary.

WARNING: In case of abnormal conditions or failure of any equipment component first make sure that the instructions provided in the previous paragraphs have been followed correctly.

DON'T ever carry out rush or coarse repairs which might compromise the good working order of the machine and of any related equipment. Whenever in doubt, request servicing by specialized staff authorized by the manufacturer.

Daily procedures to be carried out once the work shift ends:

Open the lids and proceed with an accurate cleaning of the entire machine. Make sure to remove any product residual. Clean carefully by using the supplied dough scraper, brush, a shop vacuum, and/or cloths dampened with water and vinegar; don't use any type of detergent. NEVER pour water into the hopper. This can cause machine damage or failure. You must use a DAMP cloth or sponge.

6.3 SCHEDULED MAINTENANCE

Procedures carried out semi-annually:

Check the safe tightening/clamping of any element that makes up the equipment by requesting the assistance of skilled and experienced department maintenance personnel. Should any excessive wear and tear or breakage be found proceed with proper replacement.


Procedures carried out annually:

Check the conditions of any electric components and proceed with proper replacement as deemed necessary in case of fault or wear and tear; for any operation contact skilled and experienced maintenance personnel.




6.4 MAINTENANCE AFTER 300 WORKING HOURS

After 300 working hours it is necessary to replace the lubricating grease using the special greaser:

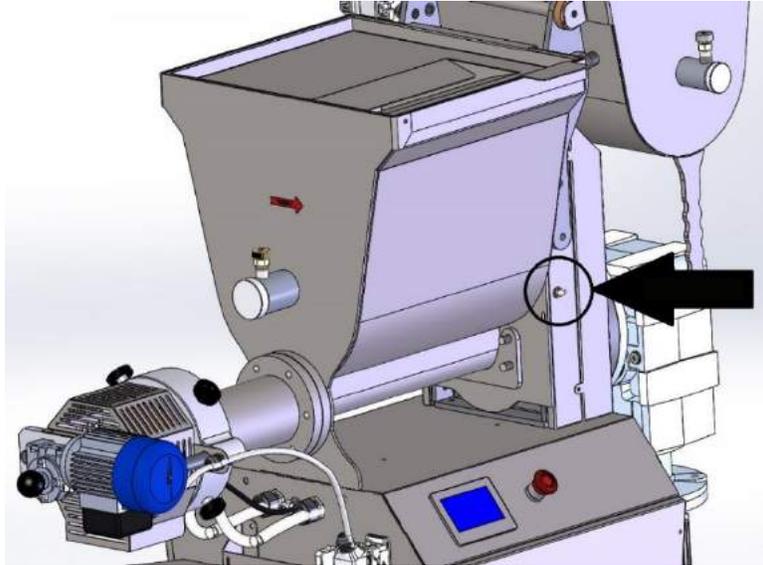

The grease replacement operation is complete when clean grease comes out from the exhaust fitting:

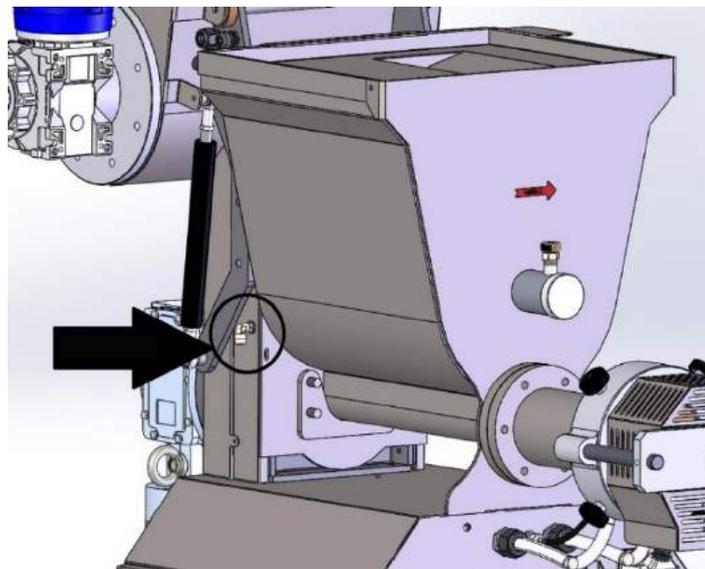



MAINTENANCE MODEL AEX130M

6.5 CLEANING

Clean the mixing hopper and the removable parts (auger, mixing arms, die ring) after use.

NEVER use corrosive or flammable cleaning products that contain substances harmful to human health. DO NOT clean the AEX130M Pasta Extruder with sodium hypochlorite based solutions or abrasive cleaners since this could damage the unit.

Cleaning the machine and individual parts:

1. Before cleaning the machine, turn the machine off and disconnect the power supply.
2. Open the lids.
3. Clean the hoppers using the supplied dough scraper, brush, and/or a shop vacuum to remove flour and dough deposits. The hoppers and lids can be cleaned using a damp cloth or sponge with water and disinfectant. **Never pour water into the hopper.**
4. Do not leave dough deposits attached to the side of the extrusion hopper or mixing hopper. This could affect the next batch of dough.
5. Remove and clean the mixing arms, auger, and die ring. These can be washed in a sink with water and mild detergent that is “food safe”. Rinse and dry thoroughly.
6. Once cleaning is complete, reassemble the parts into the machine.
7. Accurately clean the work surface and all surrounding areas.
8. Clean external appliance surfaces with a damp cloth or sponge.

WARNING: DO NOT POUR WATER INTO THE HOPPER. Pouring water into the hopper can cause machine damage or failure. You must use a DAMP cloth or sponge.

To clean pasta dies, see instructions on next page.

CLEANING TOOLKIT INCLUDED

Toolkit bag, dough scraper, cleaning pick, brush, tape measure (to aid in cutting pasta to the desired consistent length), and hammer (to aid in removal of die ring with die wrench)



**Die Cleaning:**

After extruding pasta, remove die and gently clean the back of the die with wooden skewer. Wash off any exterior dough. Remove as much external dough as possible.

Never use metal tools with pointed ends- that will damage the dies. Picking and poking at brass dies with brushes and scrubbies is also a bad idea. It can etch and scratch the dies and this will adversely affect the extruded pasta.

After removing external dough, soak the die in water until the next use. Store extruding dies in individual labeled storage containers. Cover the die with approved food safe sanitizer and water to the proper dilution.

Soaking the used dies in water keeps the dough stuck in the nooks and crannies soft, so that the next time you use one the new dough pushes out the old. Discard the old dough and then keep going. This method won't affect the new batch of pasta or damage the die in any way.

When the die is being used again, rinse thoroughly with warm water. Place die into die ring and thread onto machine. Extrude pasta, discarding the first 18 inches of dough.

As you store the dies you certainly want to change the water as it turns cloudy and keep them in a relatively cool spot, but overall maintenance is simple – Just soak and go.

Dies can also be cleaned with a power washer/a strong jet of water. Dies can also be boiled in a pot of water. This will help to soften any dough trapped inside.





ARCOBALENO®

MAINTENANCE

MODEL AEX130M

6.6 TROUBLESHOOTING

PROBLEM	CAUSE	REMEDY
The pasta comes out broken or with jagged edges	Remains of earlier dough are blocking outlet of the pasta from the die- may be egg shell or dry flour.	Clean the die
The pasta comes out white and piping hot	The extrusion neck has over-heated.	Open the water delivery tap
The pasta is not cut correctly	The position of the knife blade does not match the die.	Adjust the knife
The machine will not start	The machine lid is not closed. The power supply is interrupted.	Close the lid. Check the power supply.



ARCOBALENO®

**SPARE PARTS &
ELECTRICAL DIAGRAM**
MODEL AEX130M

SECTION 7

PARTS, DIAGRAMS, SPARE PARTS.....39
ELECTRICAL DIAGRAM.....53



ARCOBALENO®

SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX130M

7.1 PARTS, DIAGRAMS & SPARE PARTS

Should the machine be scrapped, you need to arrange for disposal of its parts by taking into consideration their different nature. For the above purpose, it may be advisable to contact companies specialized in this field which, in any case, abide by the law in force in the machine installation country as to disposal of solid industrial wastes.

WARNING: Don't drop the machine in very busy areas as it might endanger persons lives, minors and animals in particular; the owner of the machine shall be held responsible for any claims arising in connection with the above.




ARCOBALENO®

SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX130M

TABLE 1

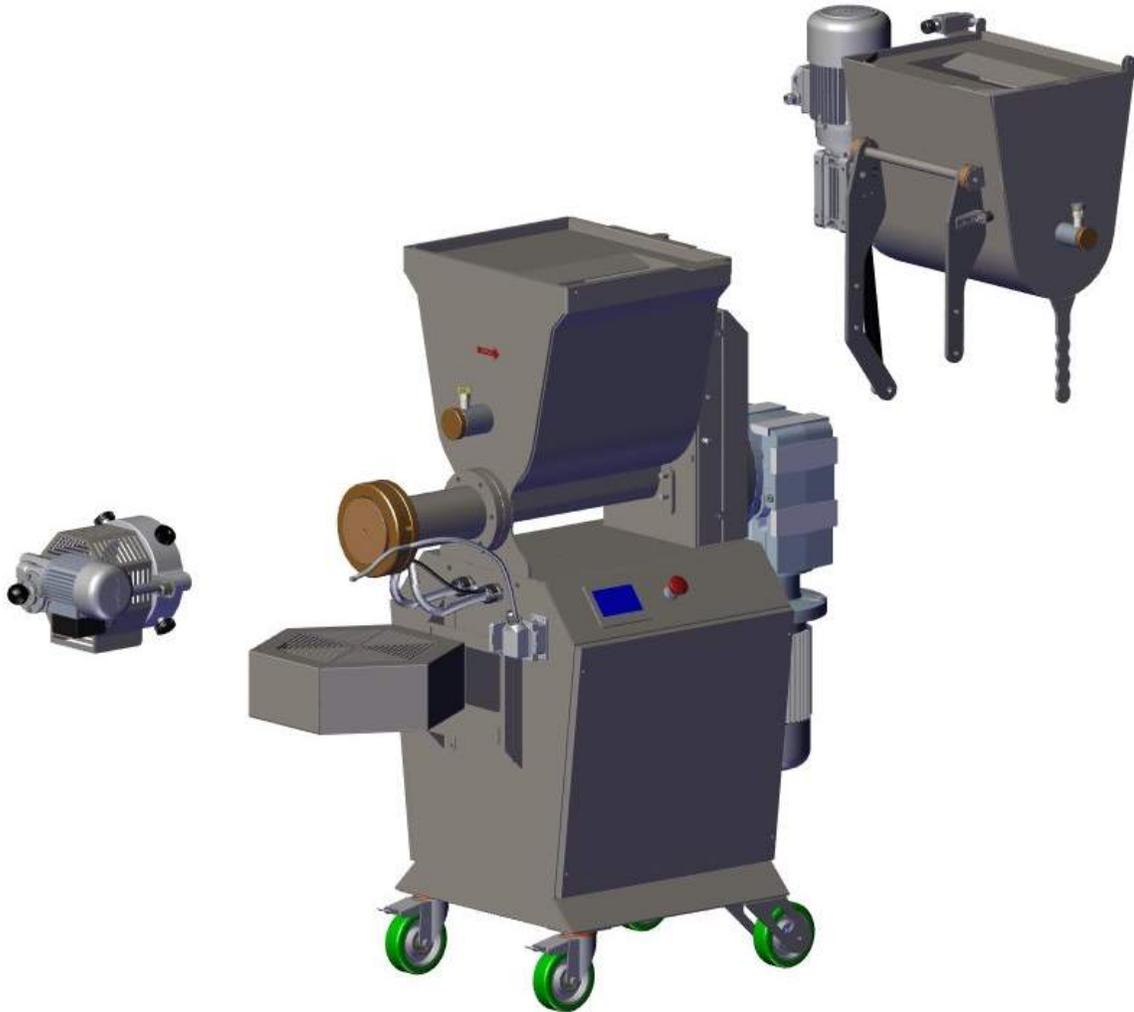




ARCOBALENO®

SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX130M

TABLE 2

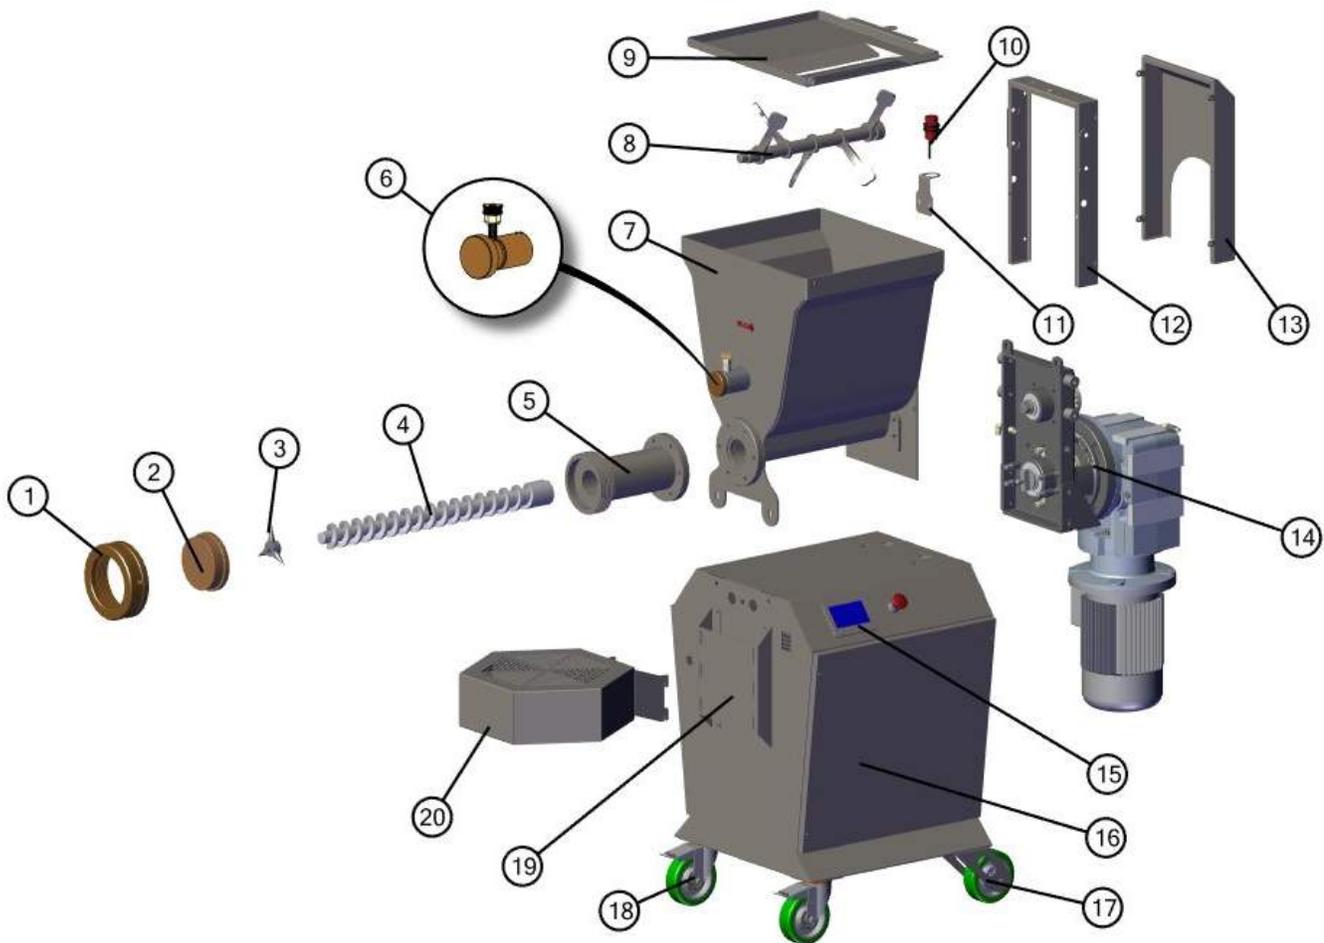




ARCOBALENO®

SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX130M

TABLE 3

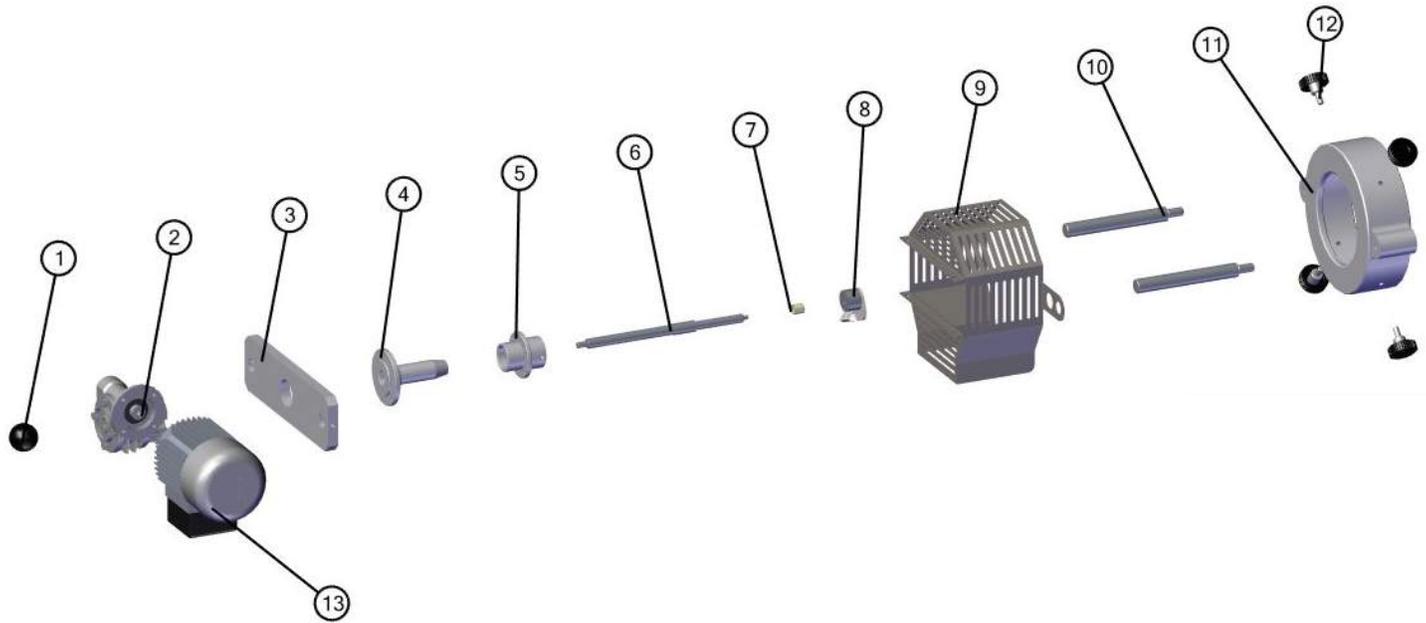




SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX130M

TABLE 4

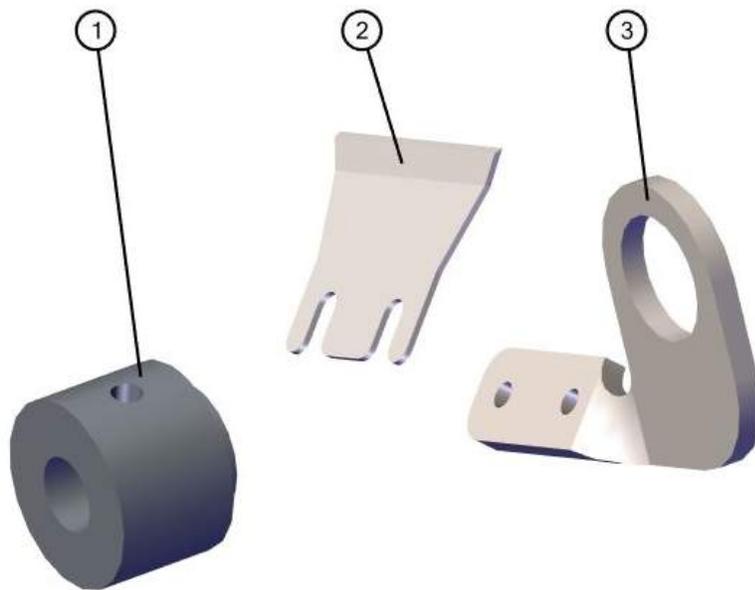




SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX130M

TABLE 5

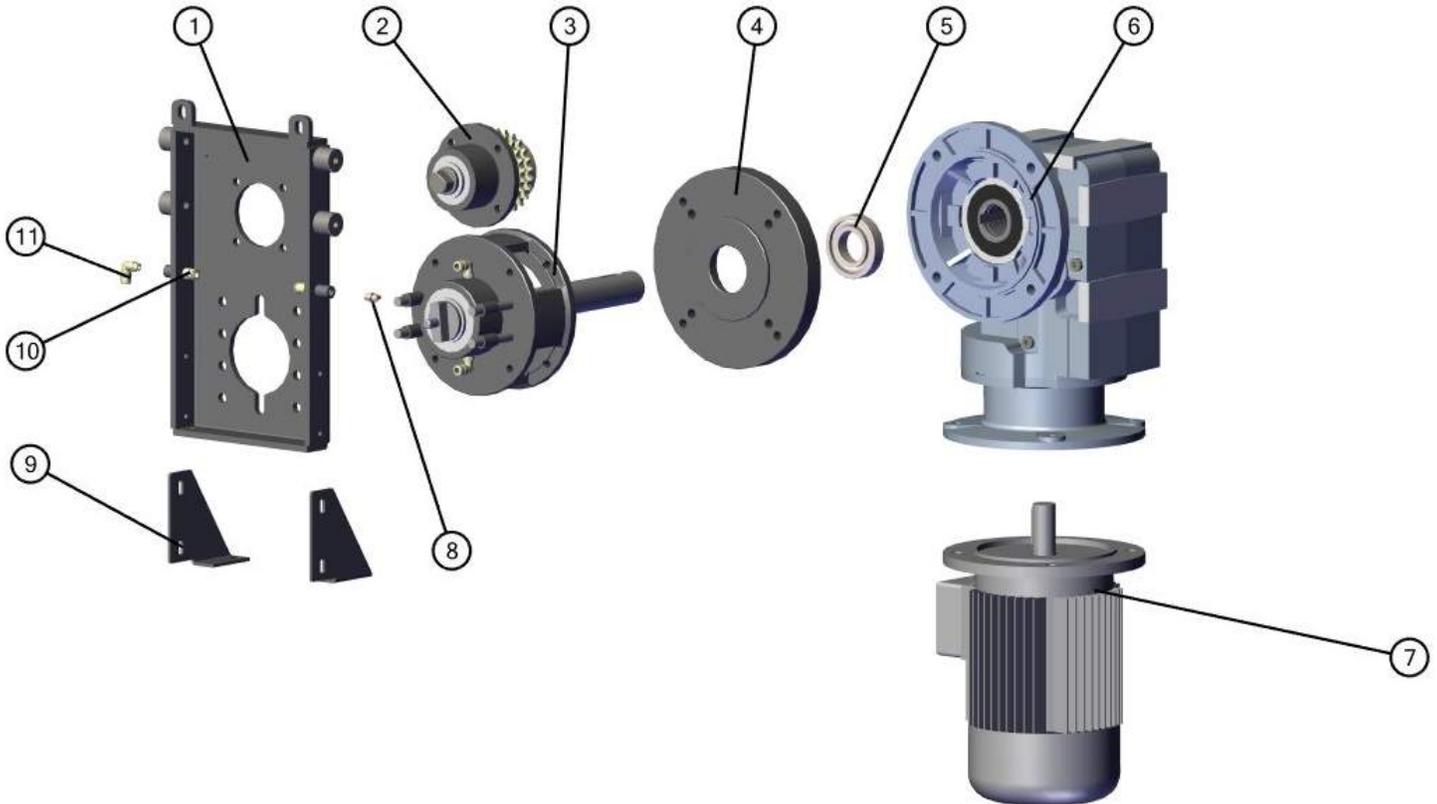




ARCOBALENO®

SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX130M

TABLE 6

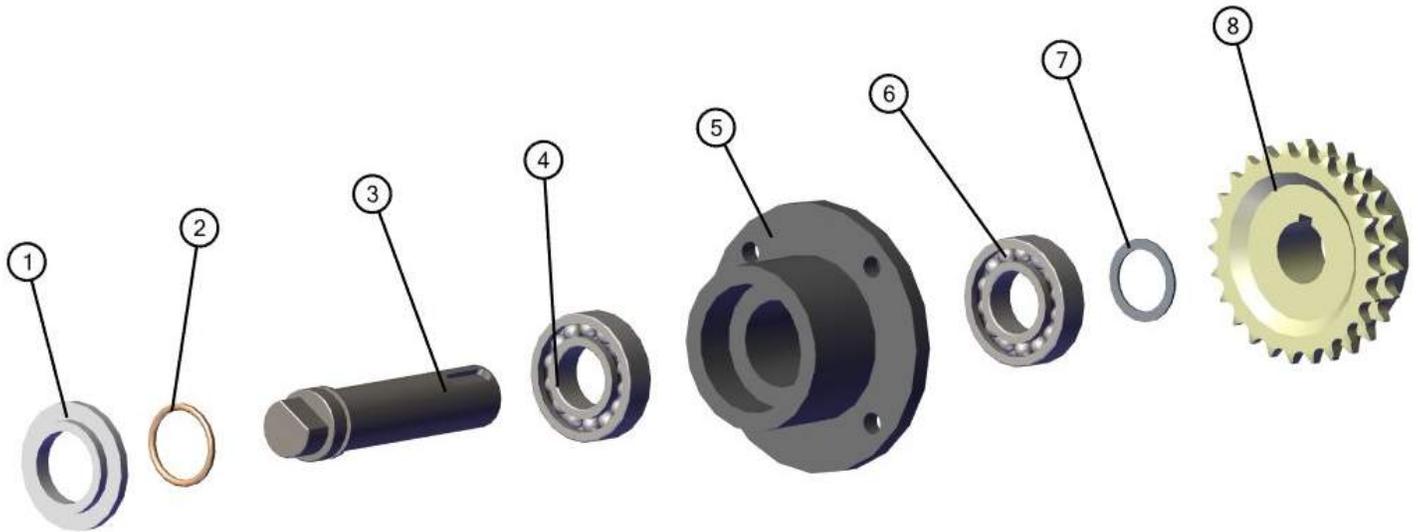




ARCOBALENO®

SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX130M

TABLE 7

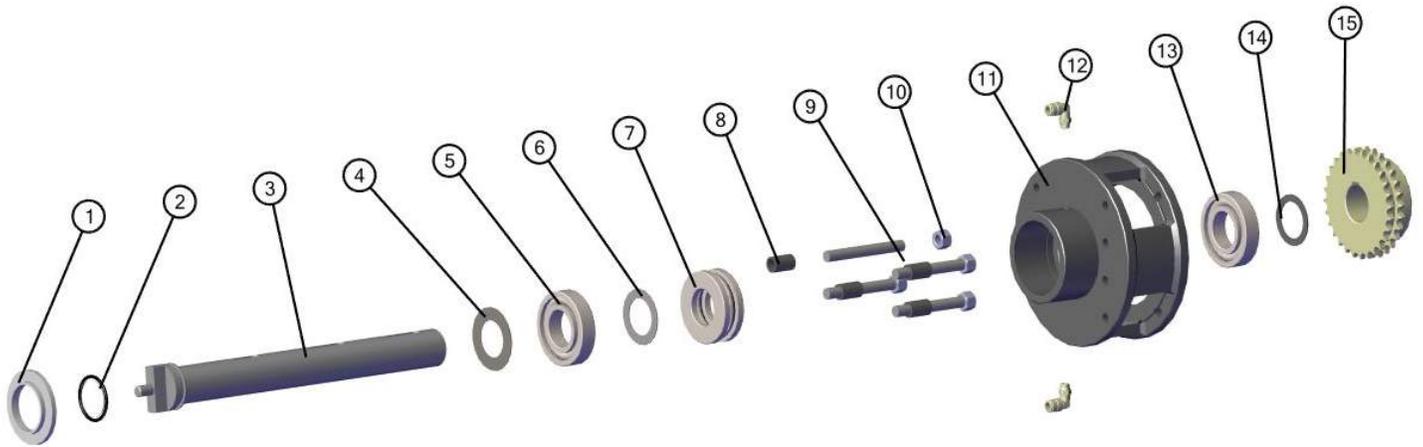




ARCOBALENO®

SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX130M

TABLE 8 - FRONT MIXING ARM PLUG

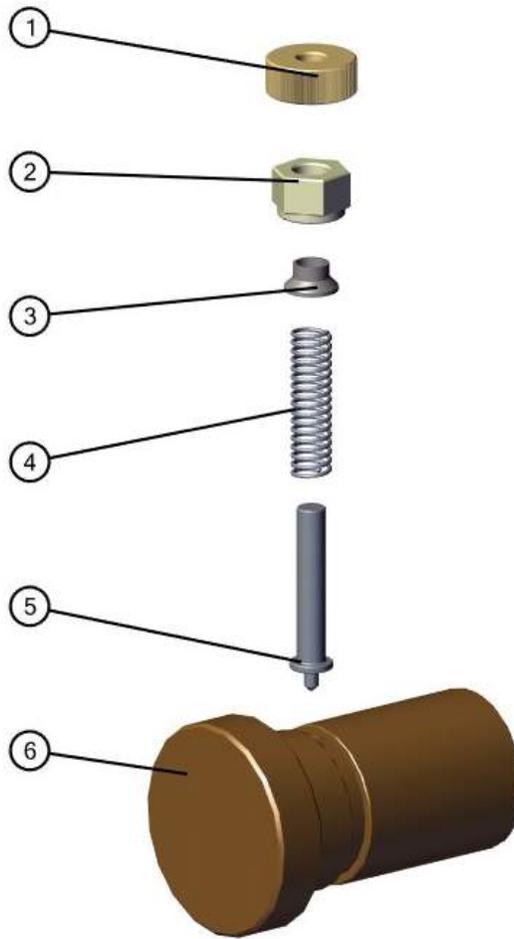




ARCOBALENO®

SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX130M

TABLE 9

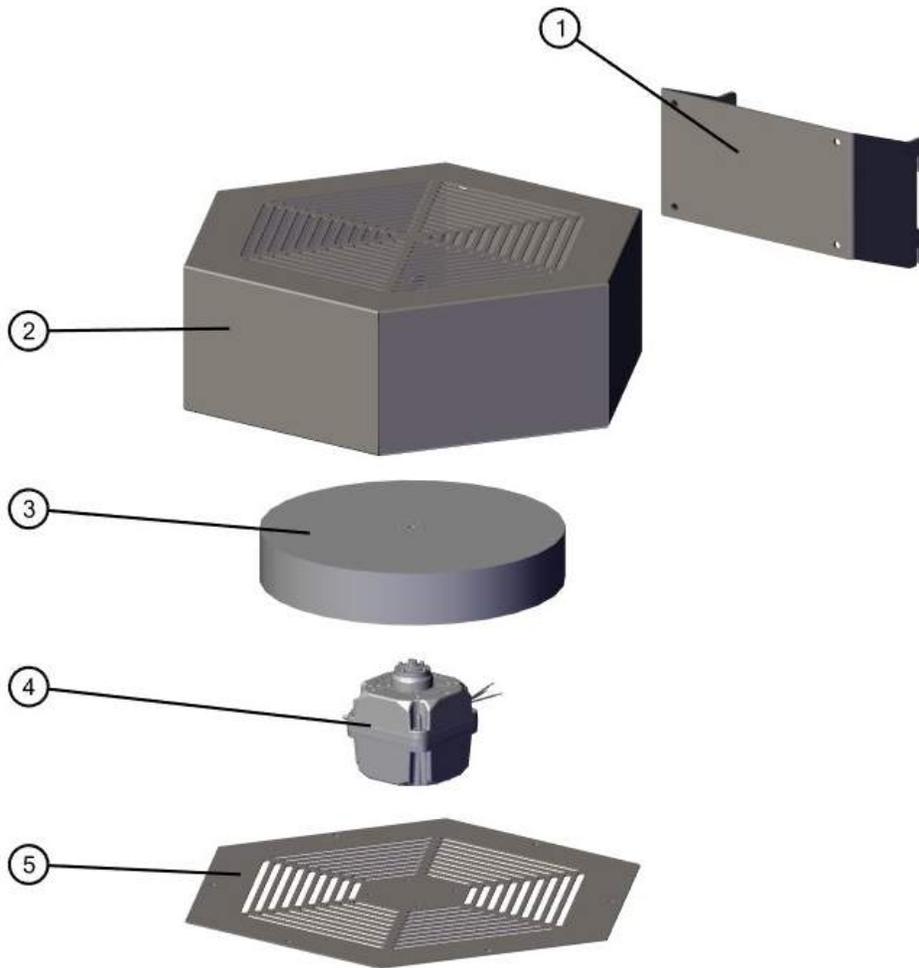




ARCOBALENO®

SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX130M

TABLE 10 - TOP MIXER

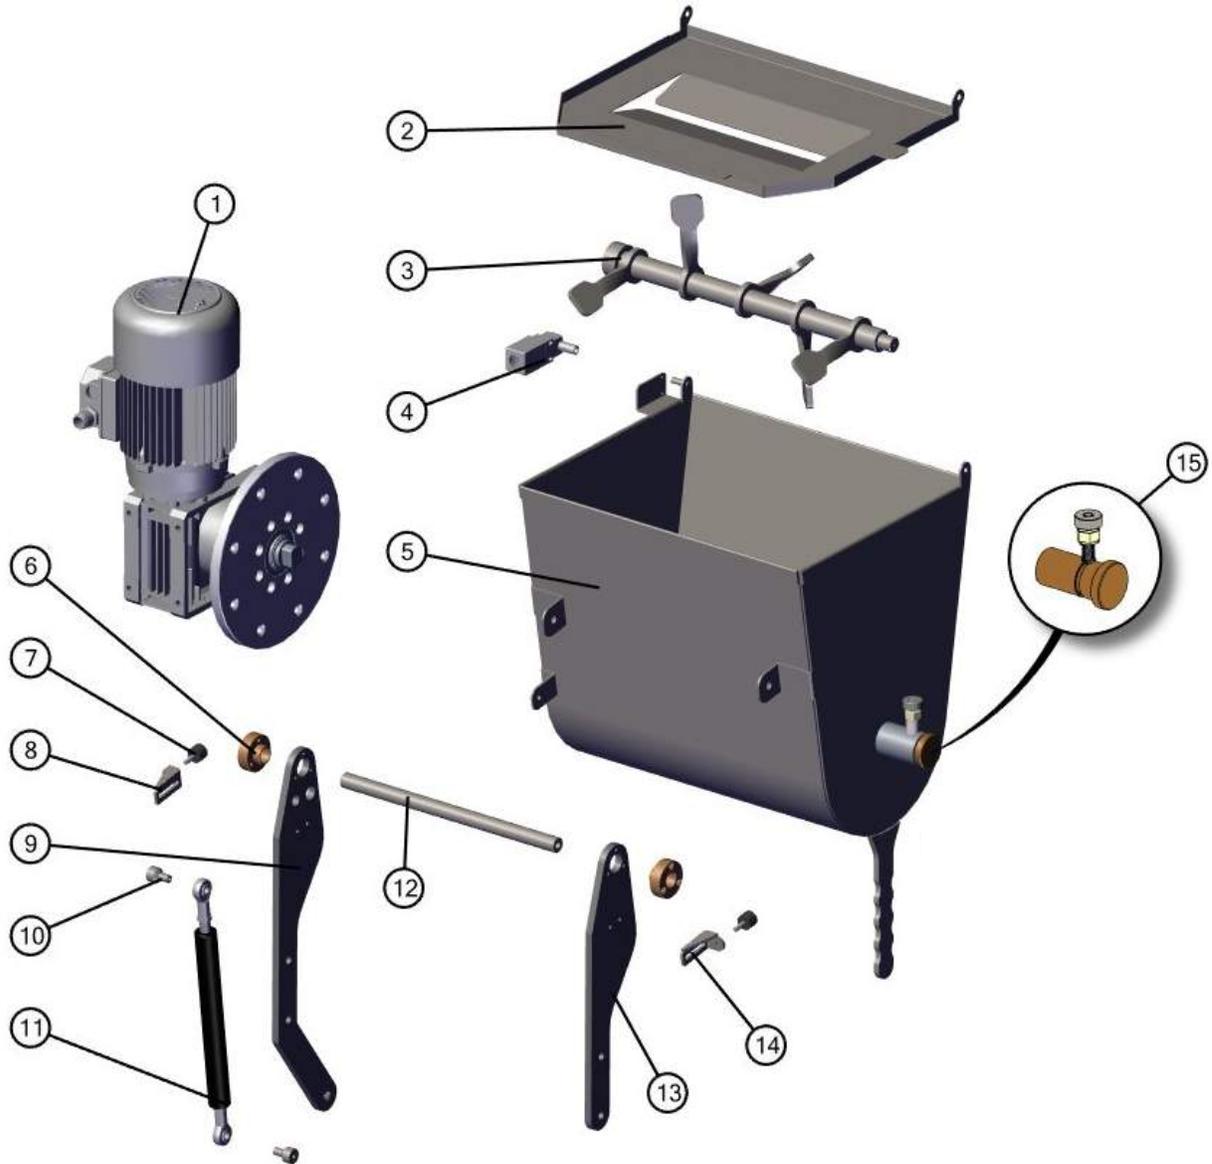




ARCOBALENO®

SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX130M

TABLE 11 - TOP MIXING ARM PLUG

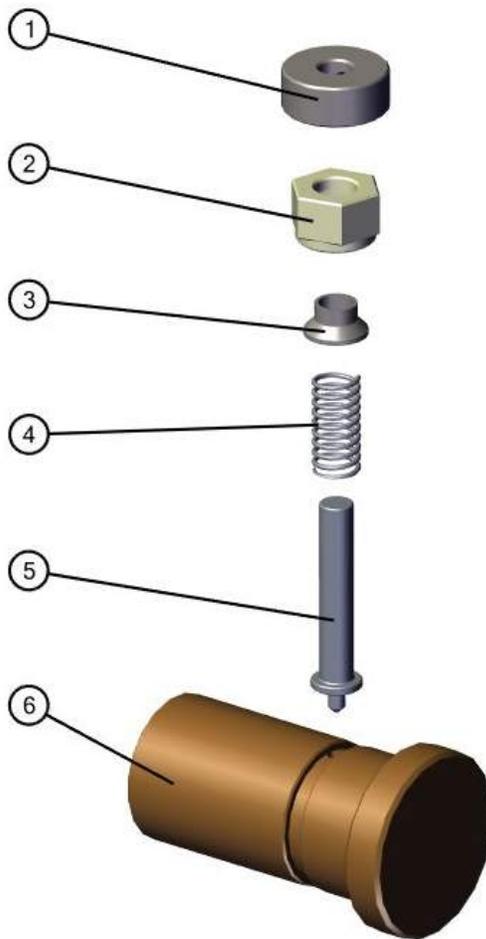




SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX130M

TABLE 12

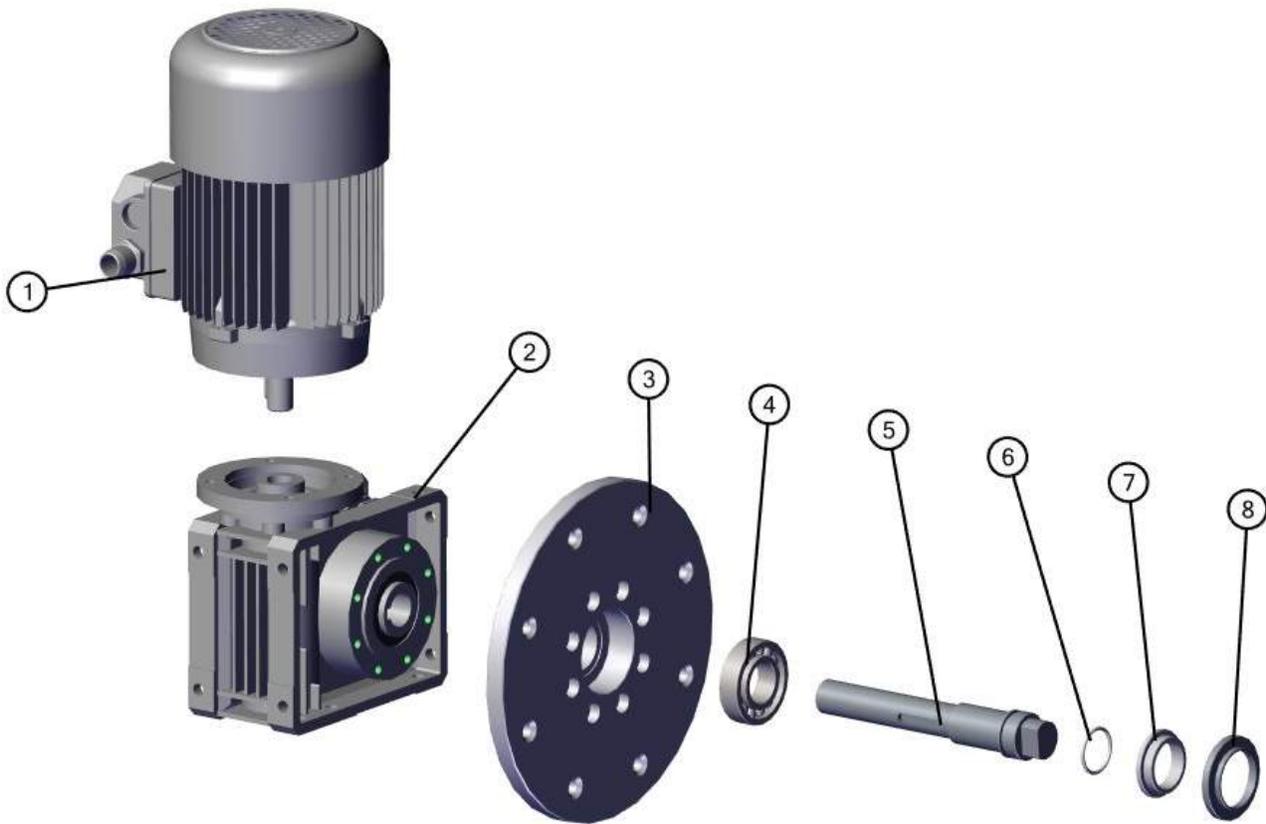




SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX130M

TABLE 13

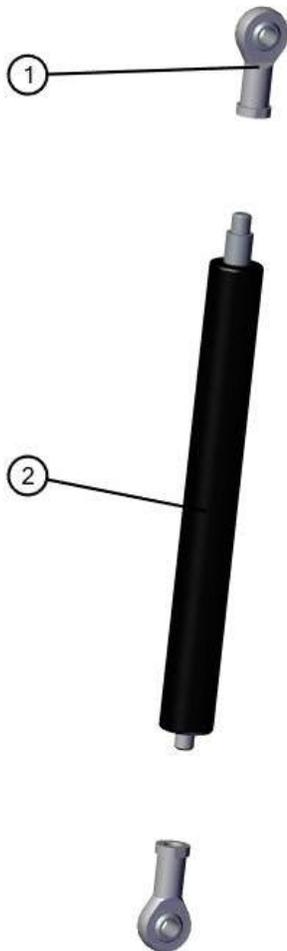



ARCOBALENO®

SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX130M

7.2 ELECTRICAL DIAGRAM

ARCOBALENO, LLC.
160 Greenfield Road
Lancaster, PA 17601

Phone: 717.394.1402
Fax : 717.397.0258

Web : www.arcobalenollc.com
E.Mail : info@arcobalenollc.com


MODEL	AEX130M		
SERIAL	XXXXX		
YEAR	07 2019		
VOLTS	220	HZ	60
WATT	3500	PH	3
AMPS	12		

—————	400 V
-----	PE
—————	24 V AC
—————	24 V DC
/	QUADRO
*	PULSANTIERA
@	BORDO MAC.
#	COLTELLO
^	ELEVATORE



ARCOBALENO®


SPARE PARTS &
ELECTRICAL DIAGRAM
MODEL AEX130M

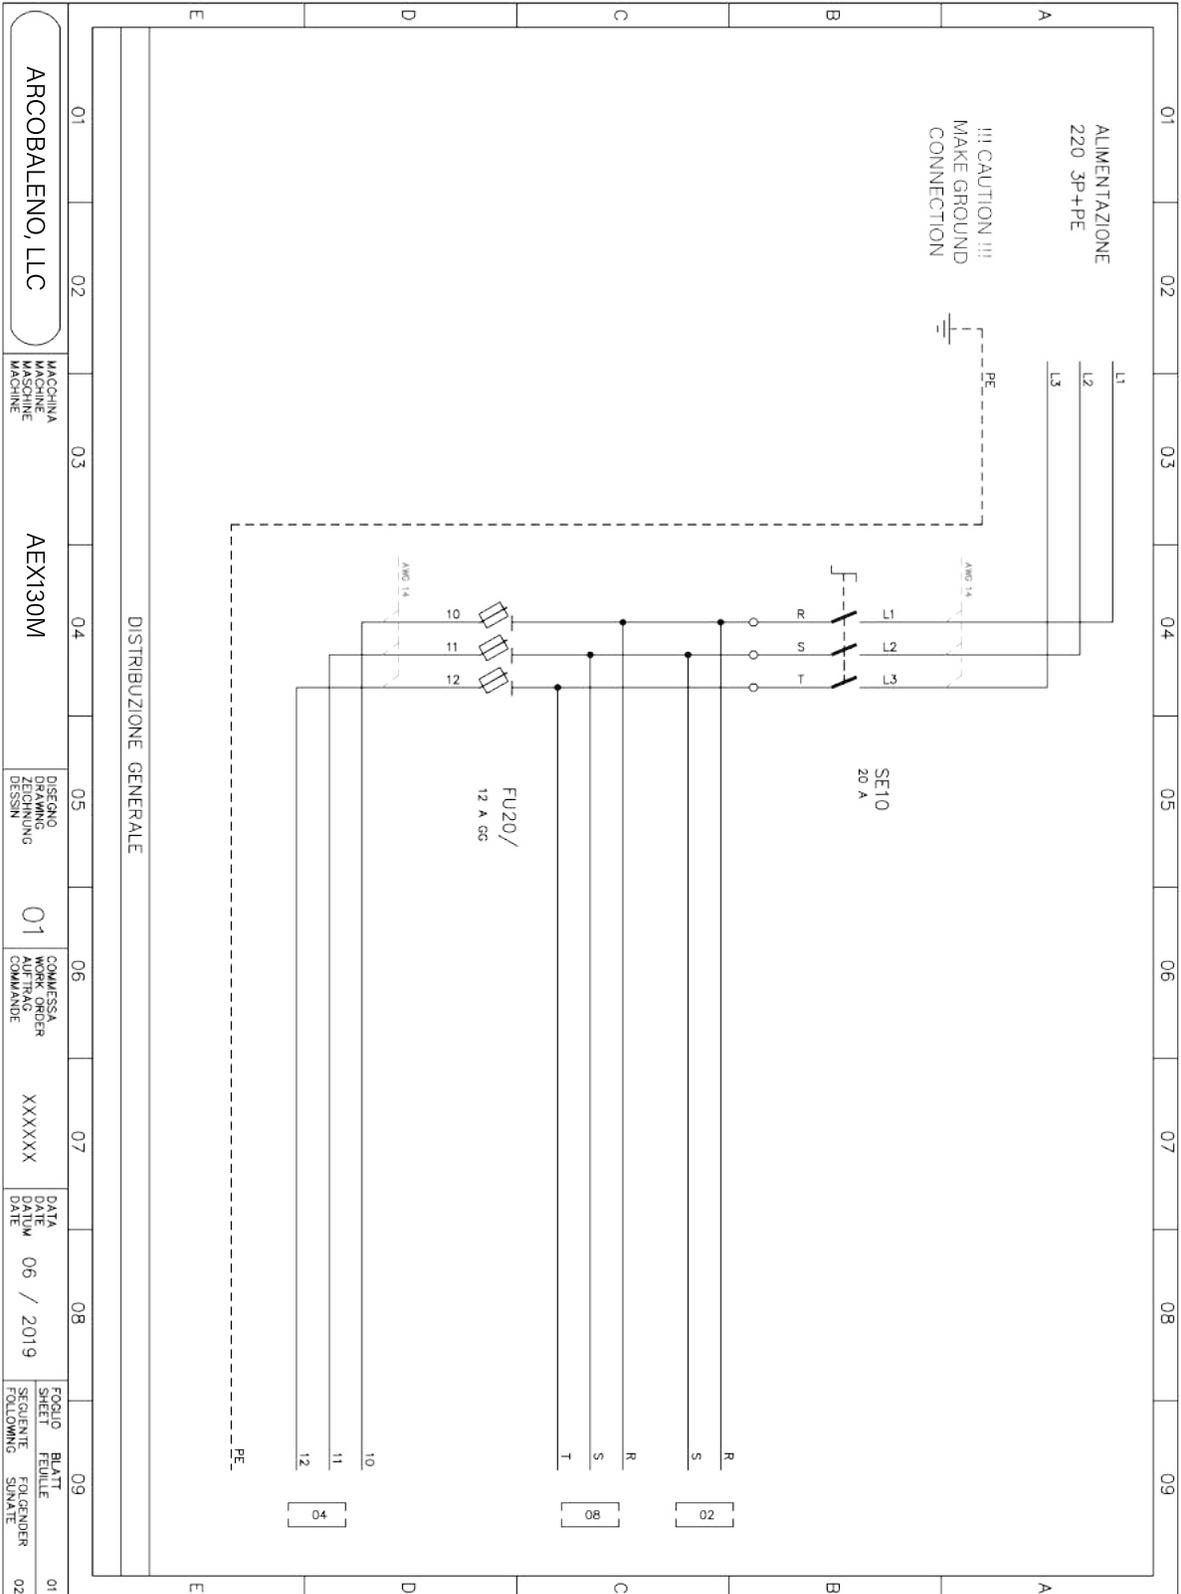



ARCOBALENO®

SPARE PARTS &
ELECTRICAL DIAGRAM
MODEL AEX130M

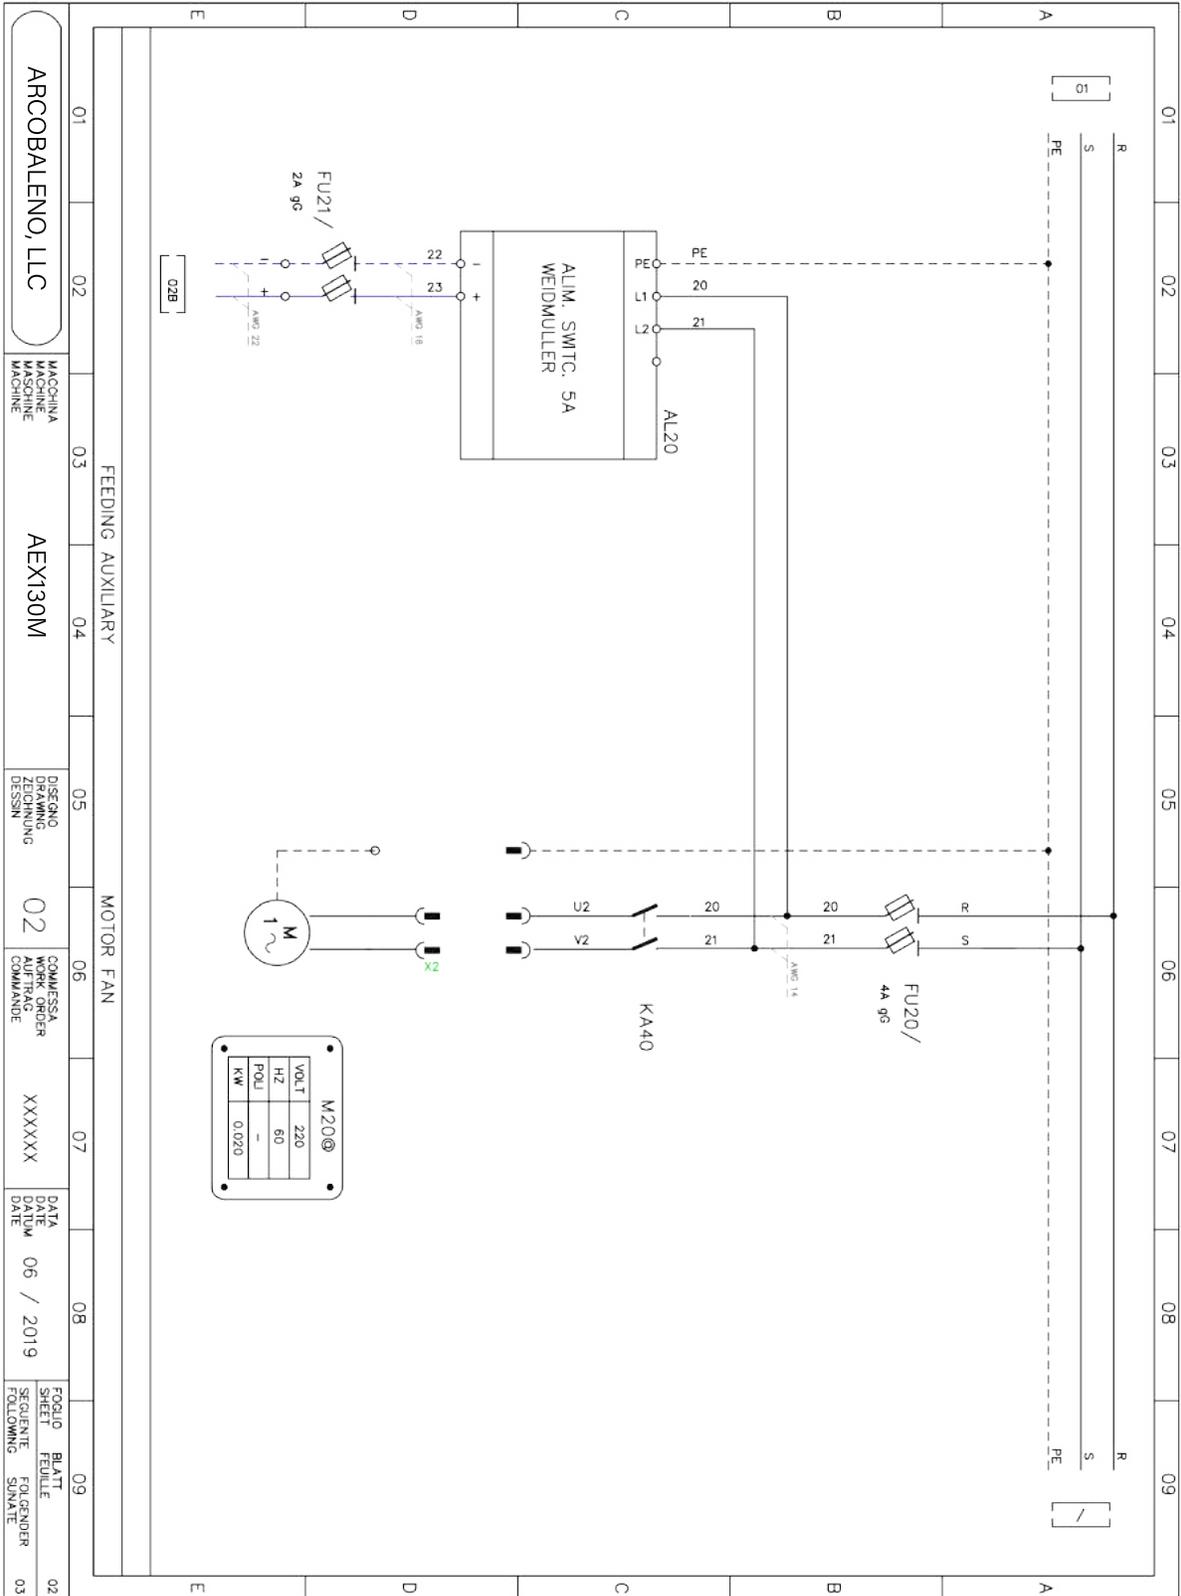


ARCOBALENO, LLC	MACHINA MASCHINE MACHINE	AEX130M	DISEÑO ZICHUNING DESIGN	02	COMANDA AUFTRAG COMMAND	XXXXXX	DATA DATUM DATE	06 / 2019	FOGLIO SHEET FOLIO	BLATT FEUILLE BLATT



ARCOBALENO®

SPARE PARTS &
ELECTRICAL DIAGRAM
MODEL AEX130M

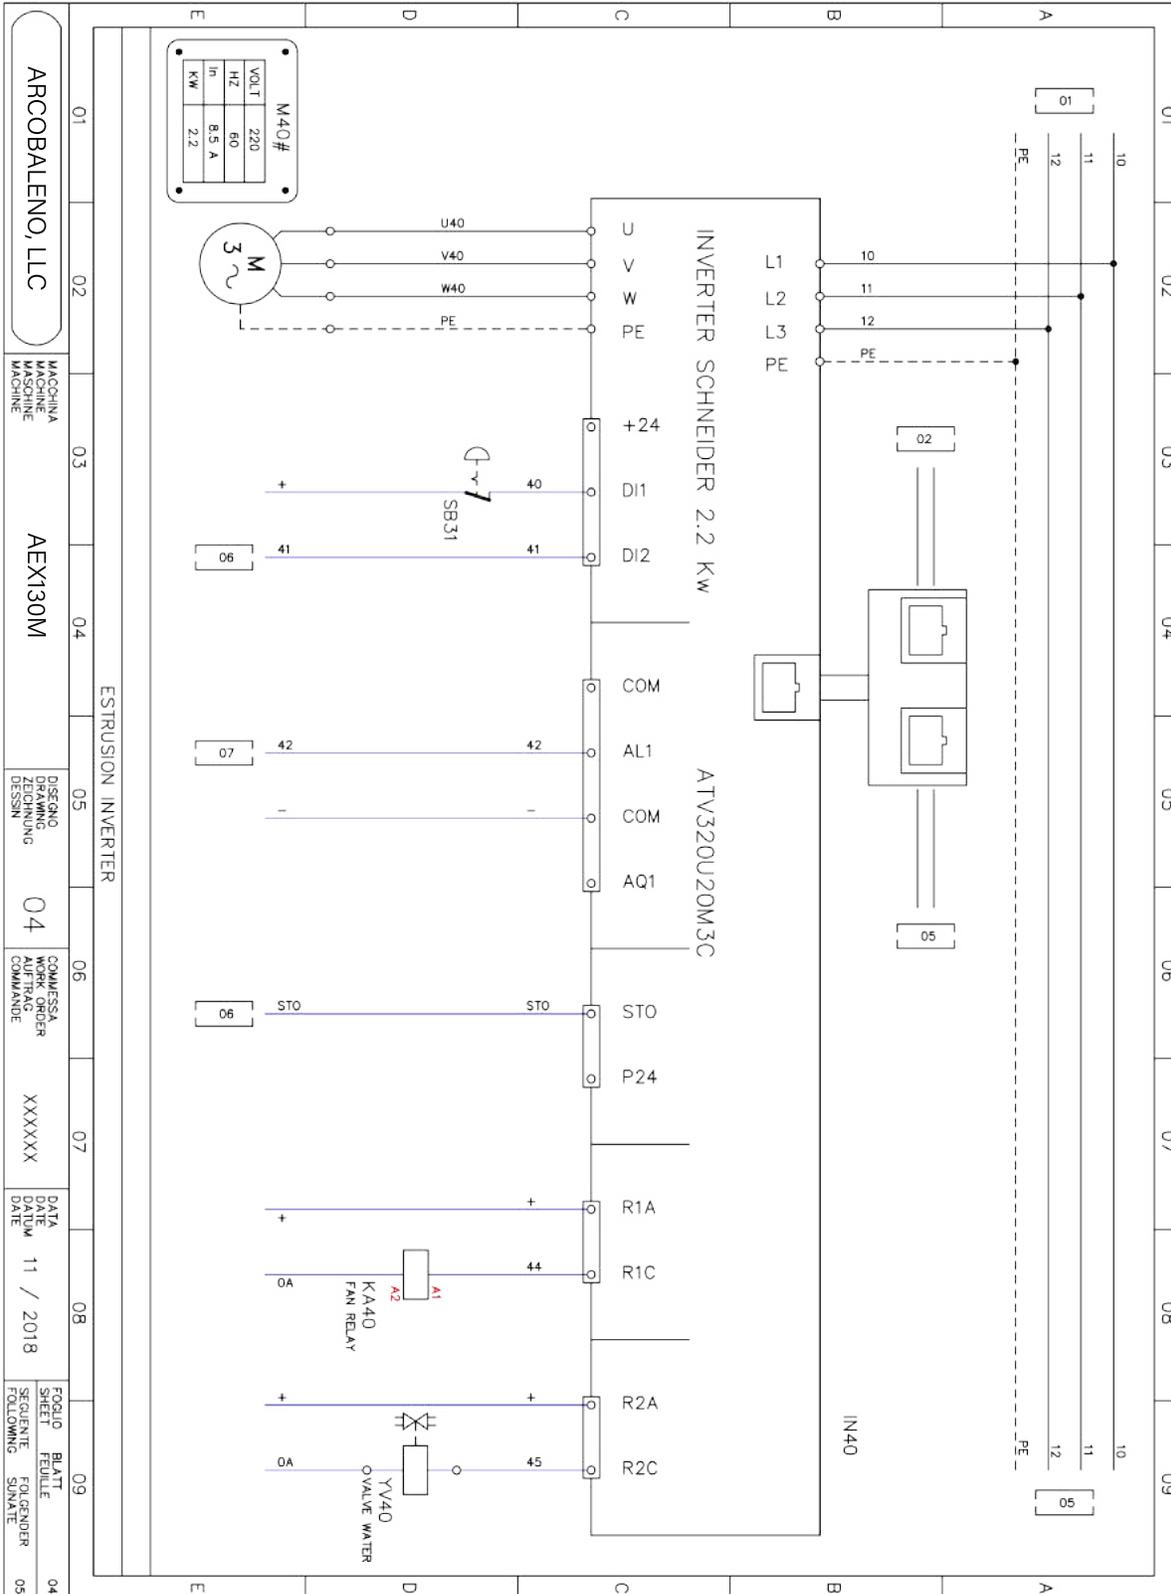


ARCOBALENO, LLC	MACHINA MASCHINE MACHINE	AEX130M	DISIGNO ZICHUNING DESIGN	04	COMMESSA AUFTRAG COMMAND	XXXXXX	DATA DATUM DATE	11 / 2018	FOGLIO SHEET FEUILLE	04
									SEQUENTE FOLGEND SIGNATE	05



ARCOBALENO®

SPARE PARTS &
ELECTRICAL DIAGRAM
MODEL AEX130M

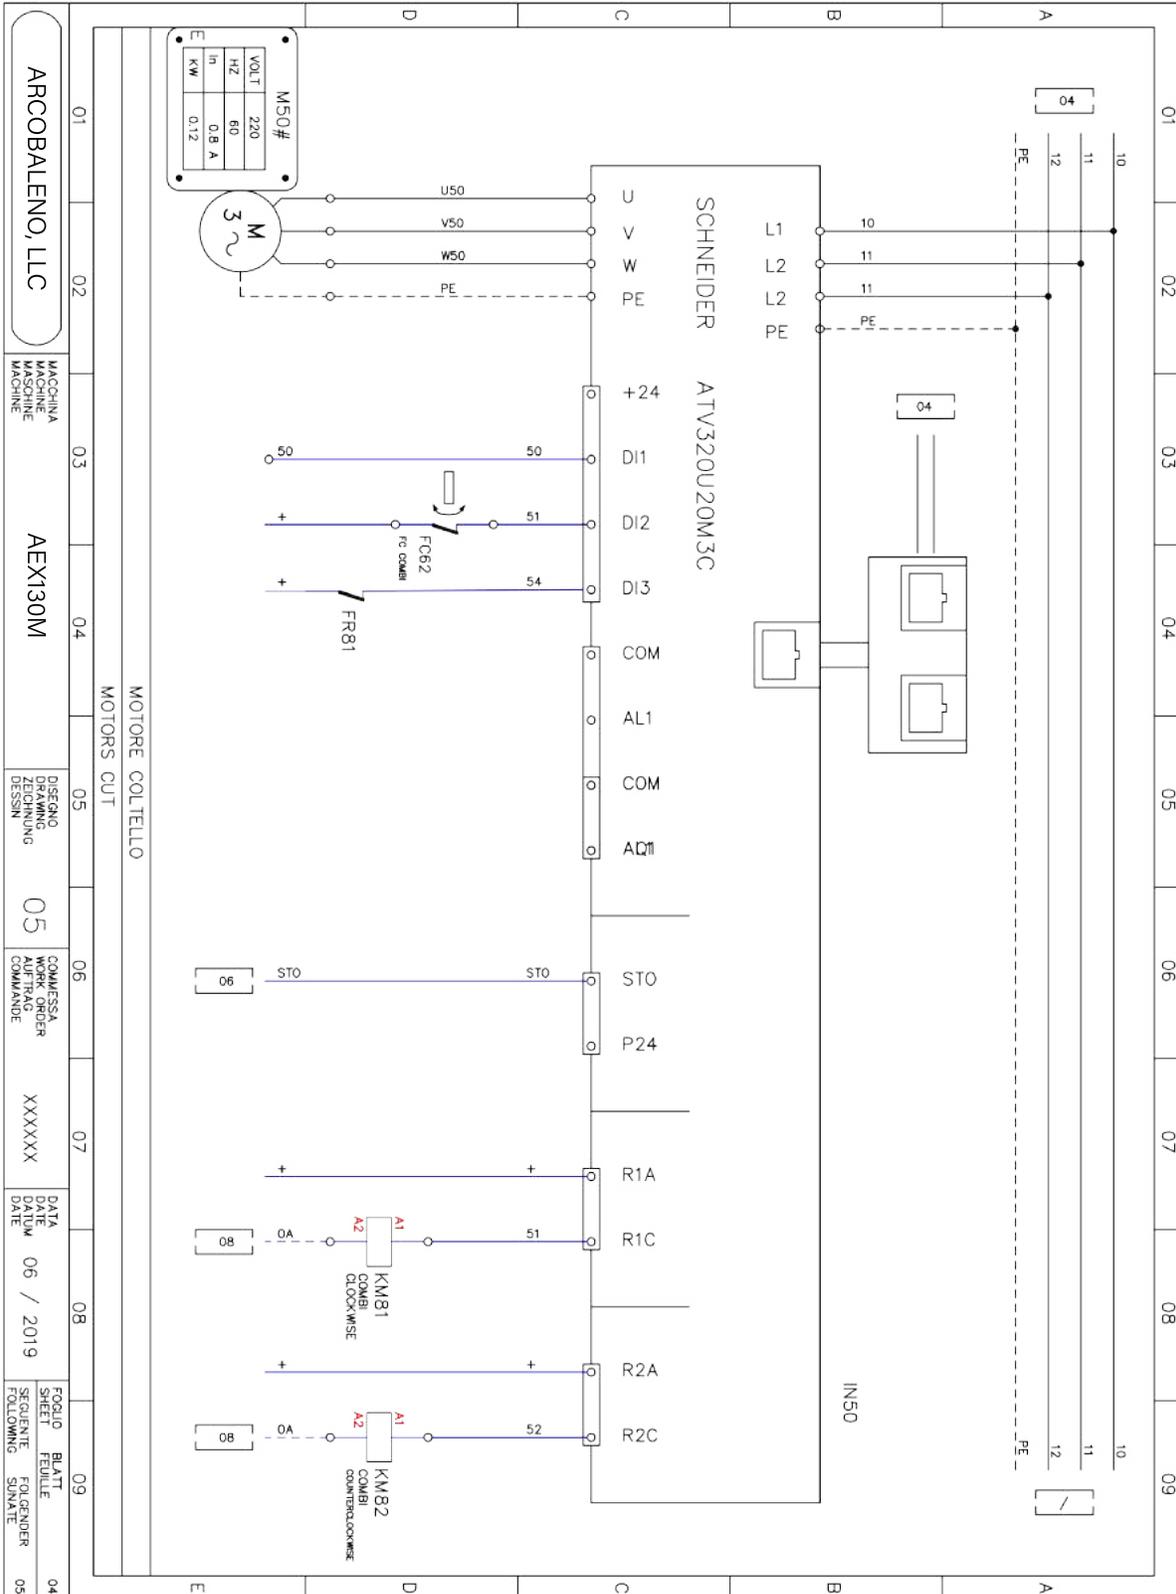




ARCOBALENO®

SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX130M

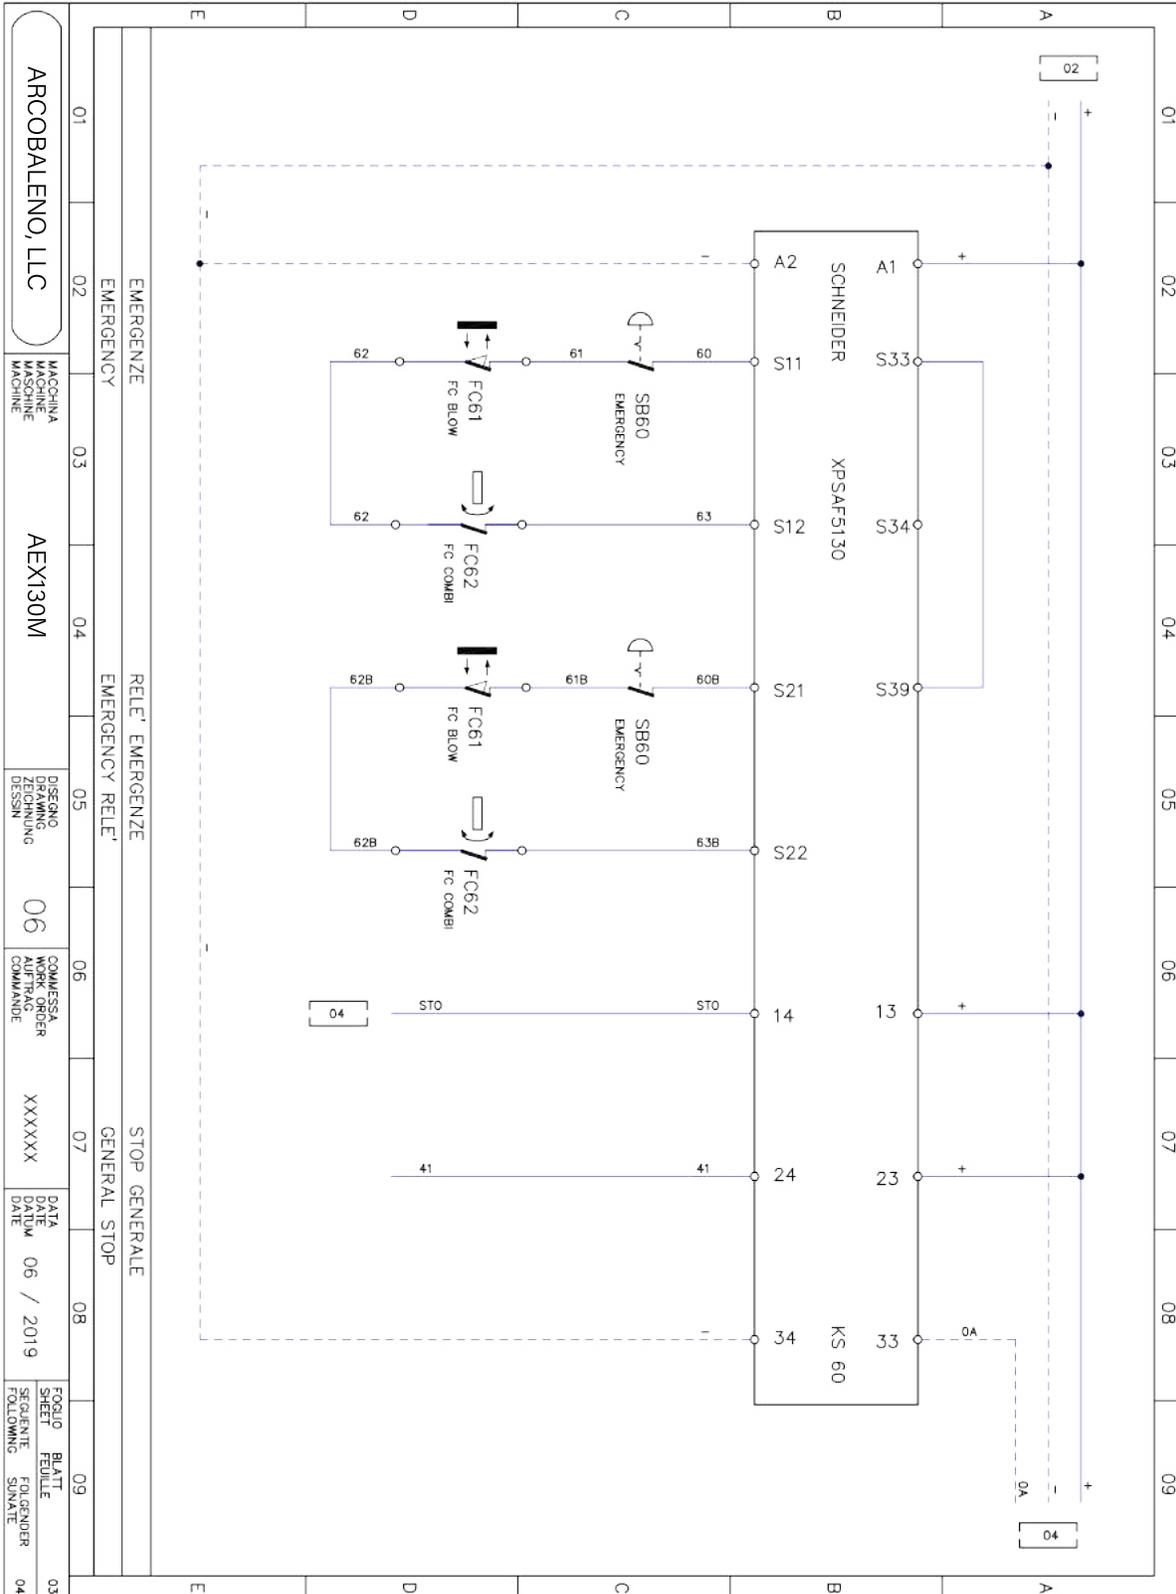


ARCOBALENO, LLC	MACHINA MASCHINE	AEX130M	DISEGNO ZICHUNING	06	COMPRESSA AUFFRAG	XXXXXX	DATA DATUM	06 / 2019	FOGLIO BIATTI	03
	MACCHINA		DESIGN		ORDER		DATE		SHEET FEUILLE	
					COMMAND				FOLGENDER	
									SINANTE	
										04



ARCOBALENO®

**SPARE PARTS &
ELECTRICAL DIAGRAM
MODEL AEX130M**

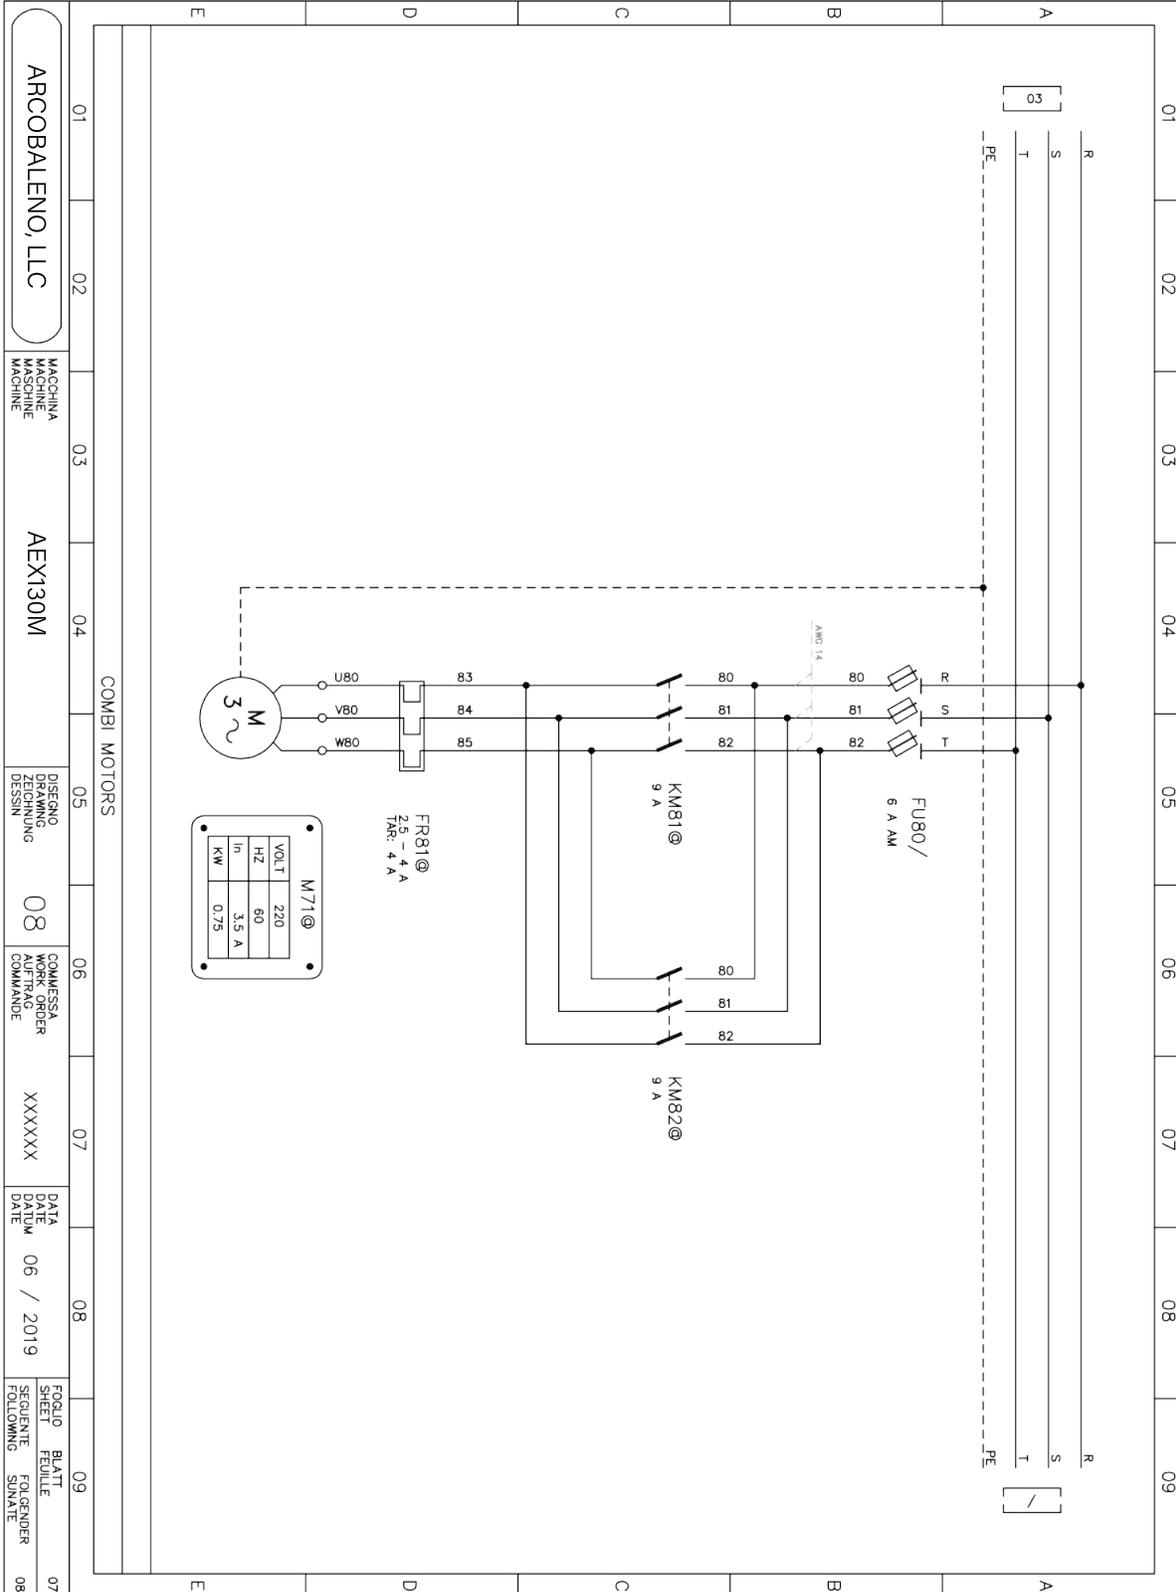

01	02	03	04	05	06	07	08	09				
ARCOBALENO, LLC			MACCHINA MASCHINE MACHINE	AEX130M	DISEÑO ZICHUNNING DESSIN	08	COMMESSA AUFTRAG COMMANDE	XXXXXX	DATA DATUM DATE	06 / 2019	FOLGIO SHEET FEUILLE	BIATT FOLGENDE SINATE



ARCOBALENO®

**SPARE PARTS &
ELECTRICAL DIAGRAM**
MODEL AEX130M

ARCOBALENO, LLC		MACCHINA MASCHINE MACHINE		AEX130M		DISIGNO ZEICHNUNG DESSIN		MO		COMMESSA AUFTRAG COMMANDE		XXXXXX		DATA DATUM DATE		FOGLIO SHEET FEUILLE		MO										
														06 / 2019														
MORSETTIERA A STANDARD																												
E	D	C	B	A	01	02	03	04	05	06	07	08	09	E	D	C	B	A	01	02	03	04	05	06	07	08	09	
					PE																							
					R																							
					S																							
					T																							
					PE																							
					U40																							
					V40																							
					W40																							
					PE																							
					U50																							
					V50																							
					W50																							
					PE																							
					61																							
					62																							
					61B																							
					62B																							
					45																							
					0A																							
					+																							
					-																							
					50																							
					PE																							
					70																							
					71																							
					72																							
					PE																							
					U80																							
					V80																							
					W80																							
					PE																							
					62																							
					63																							
					62B																							
					63B																							
					+																							
					51																							
					PE																							
					+																							
					+																							
					+																							
					+																							
					+																							
					PE																							



ARCOBALENO®

SPARE PARTS &
ELECTRICAL DIAGRAM
MODEL AEX130M

