



ARCOBALENO®

**SCRAPPING & DISPOSAL,
PARTS & ELECTRICAL DIAGRAMS**
MODEL AEX50

7.3 ELECTRICAL DIAGRAM

ARCOBALENO, LLC.
160 Greenfield Road
Lancaster, PA 17601

Phone: 717.394.1402
Fax : 717.397.0258

Web : www.arcobalenollc.com
E.Mail : info@arcobalenollc.com


MODEL	<input type="text" value="AEX50"/>	
SERIAL	<input type="text" value="XXXXX"/>	
YEAR	<input type="text" value="2022"/>	
VOLTS	<input type="text" value="220"/>	HZ <input type="text" value="60"/>
WATT	<input type="text" value="1800"/>	PH <input type="text" value="1"/>
AMPS	<input type="text" value="10"/>	



ARCOBALENO®

SCRAPPING & DISPOSAL, PARTS & ELECTRICAL DIAGRAM

MODEL AEX50

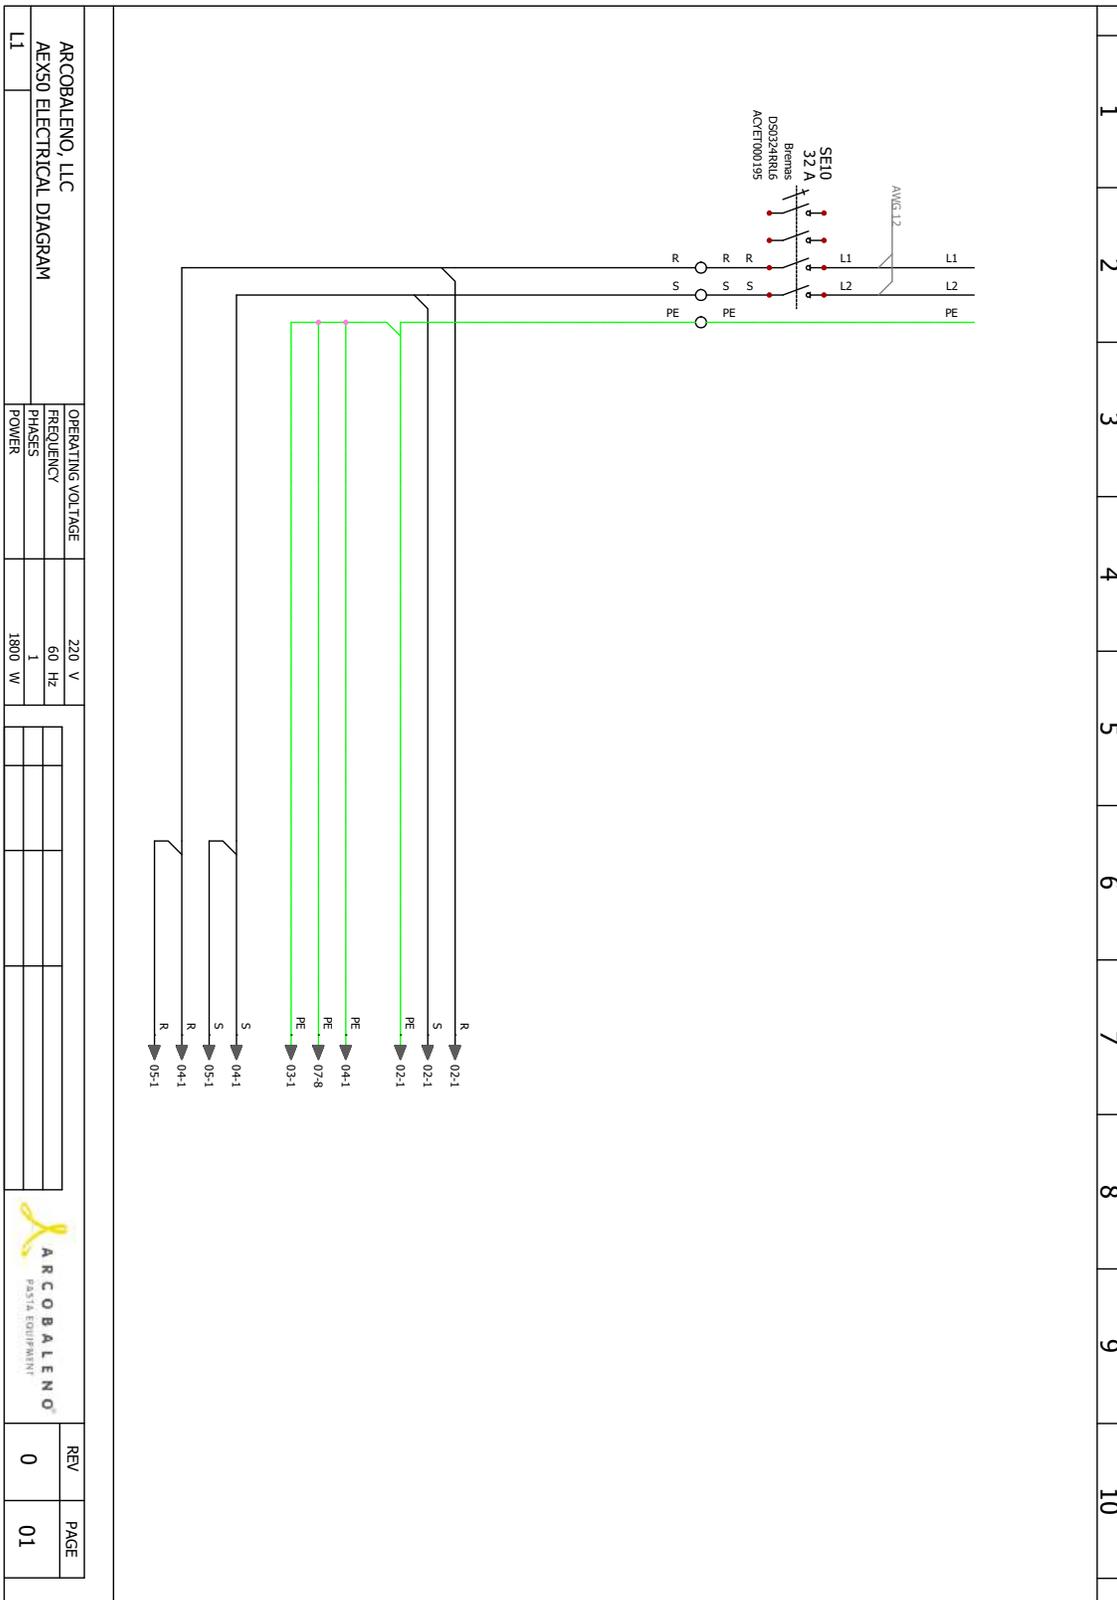




ARCOBALENO®

SCRAPPING & DISPOSAL, PARTS & ELECTRICAL DIAGRAMS

MODEL AEX50

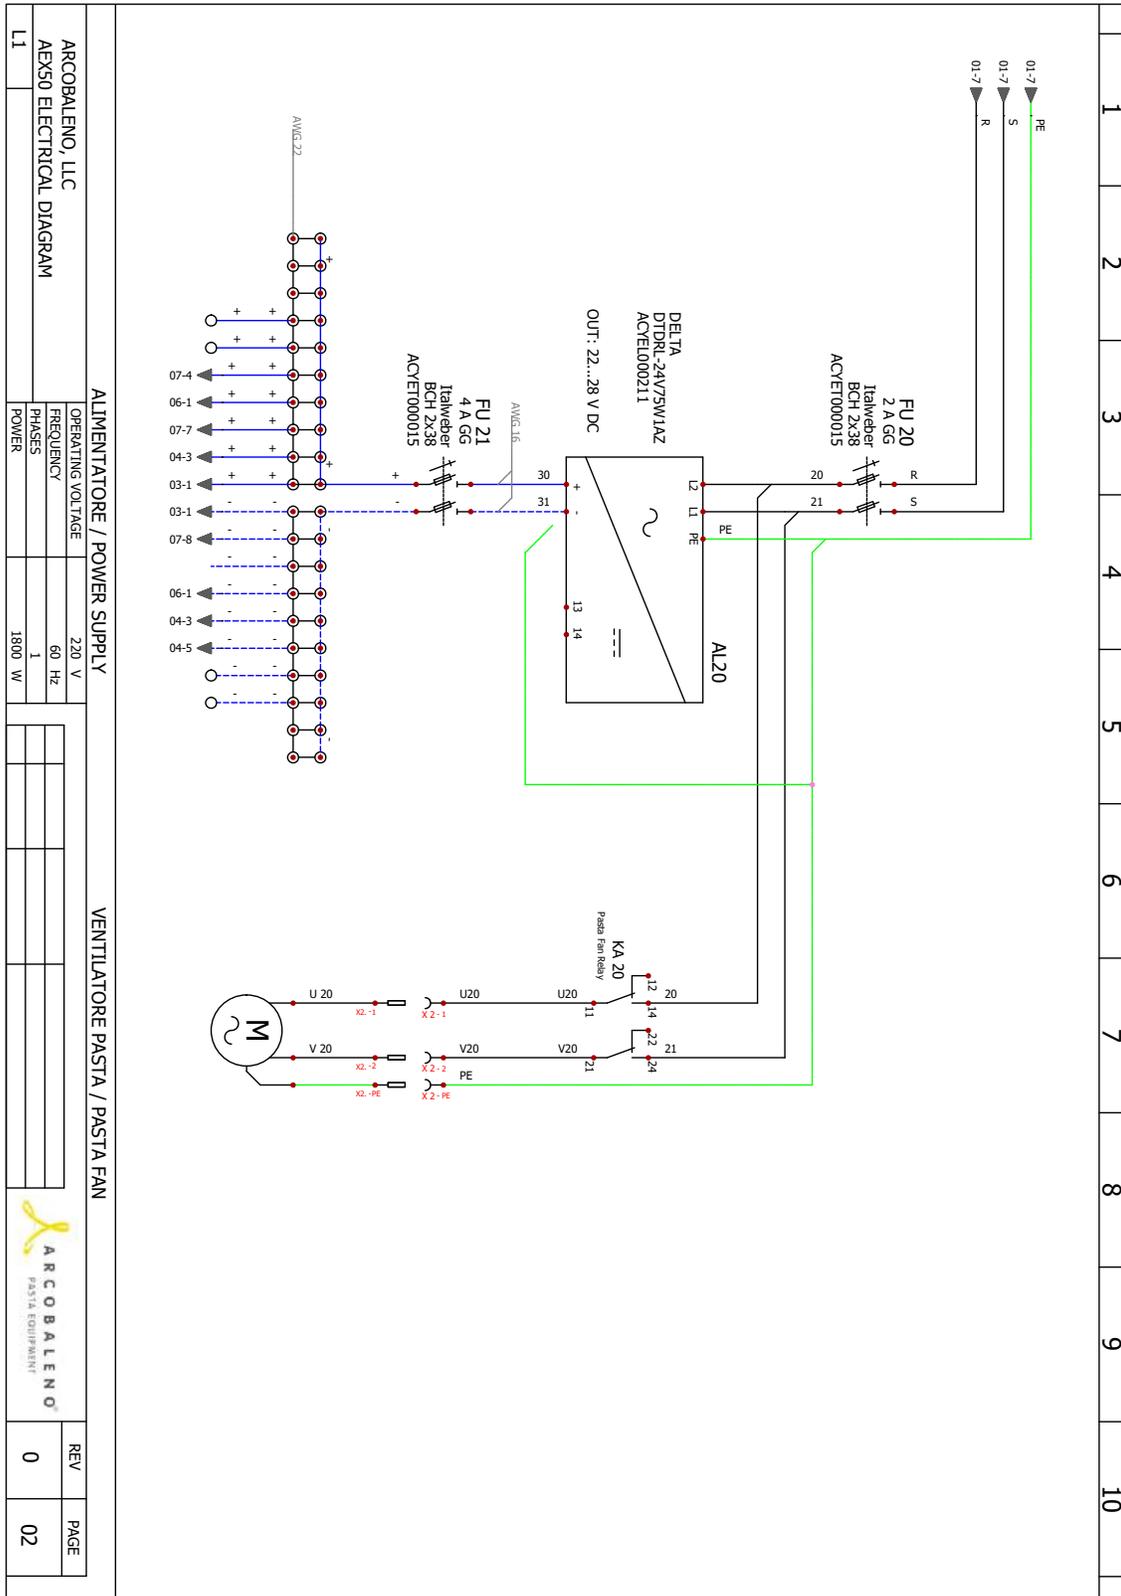

ARCOBALENO, LLC AEX50 ELECTRICAL DIAGRAM		ALIMENTATORE / POWER SUPPLY		VENTILATORE PASTA / PASTA FAN		REV	PAGE
L1		OPERATING VOLTAGE	220 V			0	02
		FREQUENCY	60 Hz				
		PHASES	1				
		POWER	1800 W				




1 2 3 4 5 6 7 8 9 10



ARCOBALENO®

SCRAPPING & DISPOSAL, PARTS & ELECTRICAL DIAGRAMS

MODEL AEX50

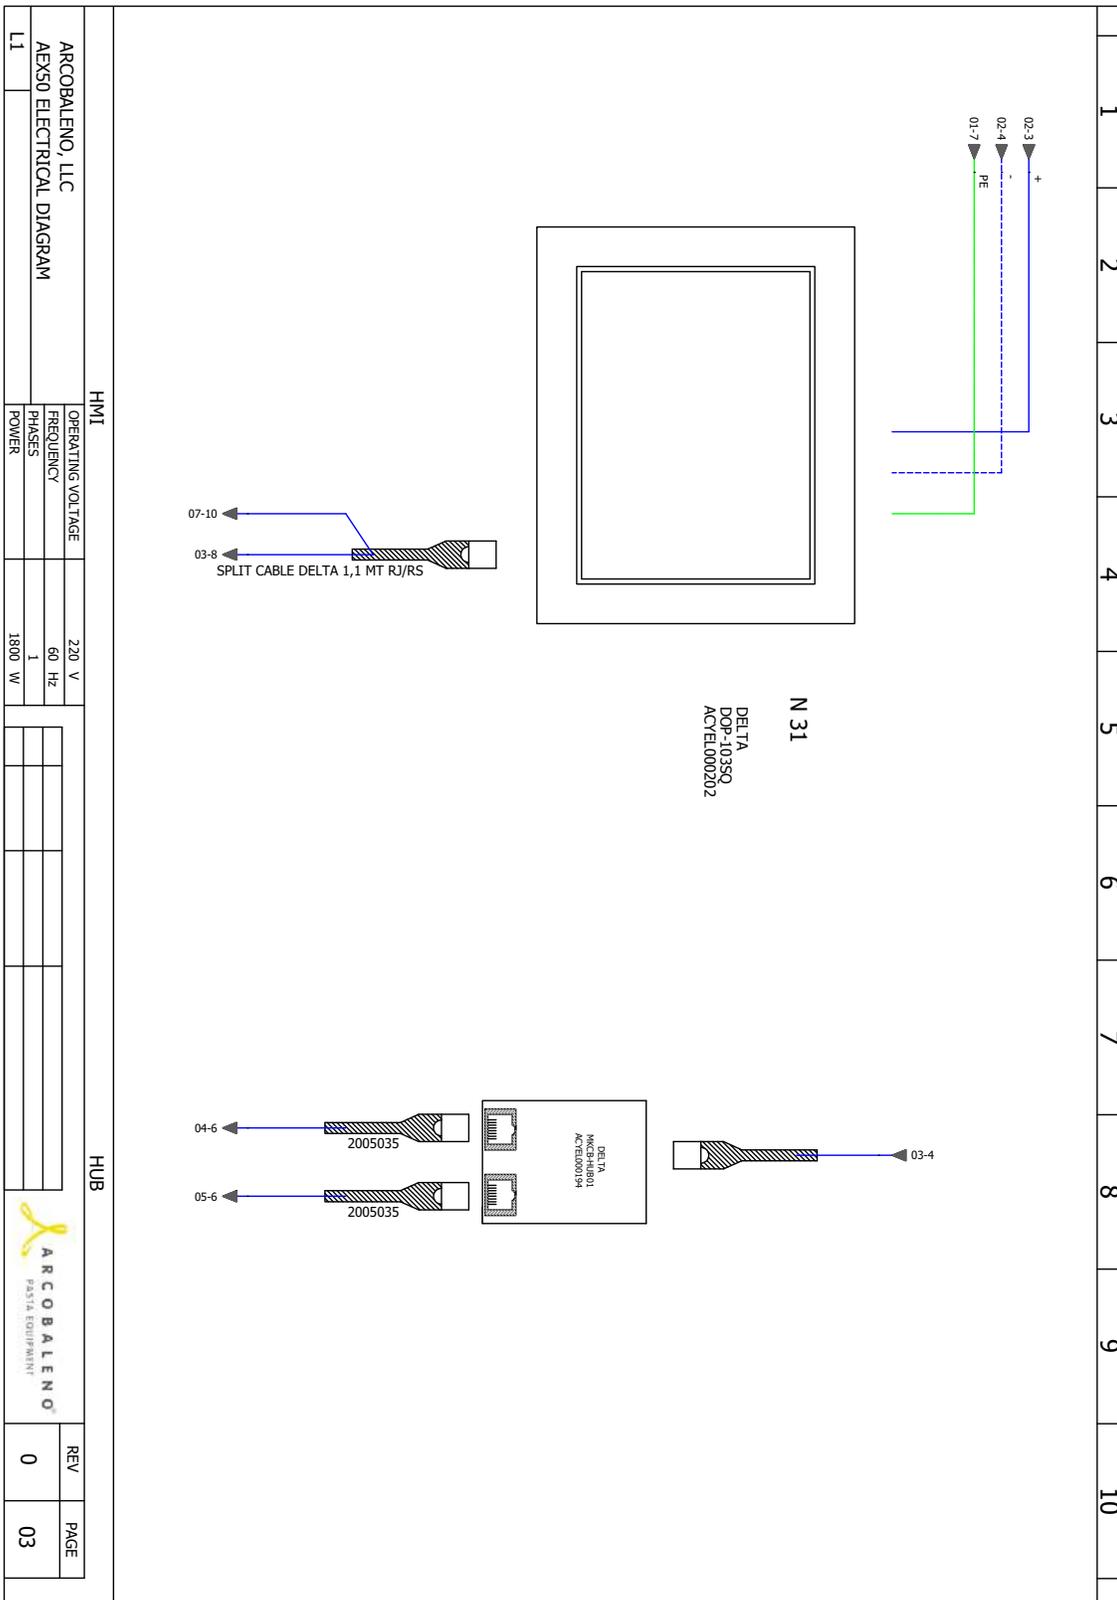




ARCOBALENO®

SCRAPPING & DISPOSAL, PARTS & ELECTRICAL DIAGRAMS

MODEL AEX50

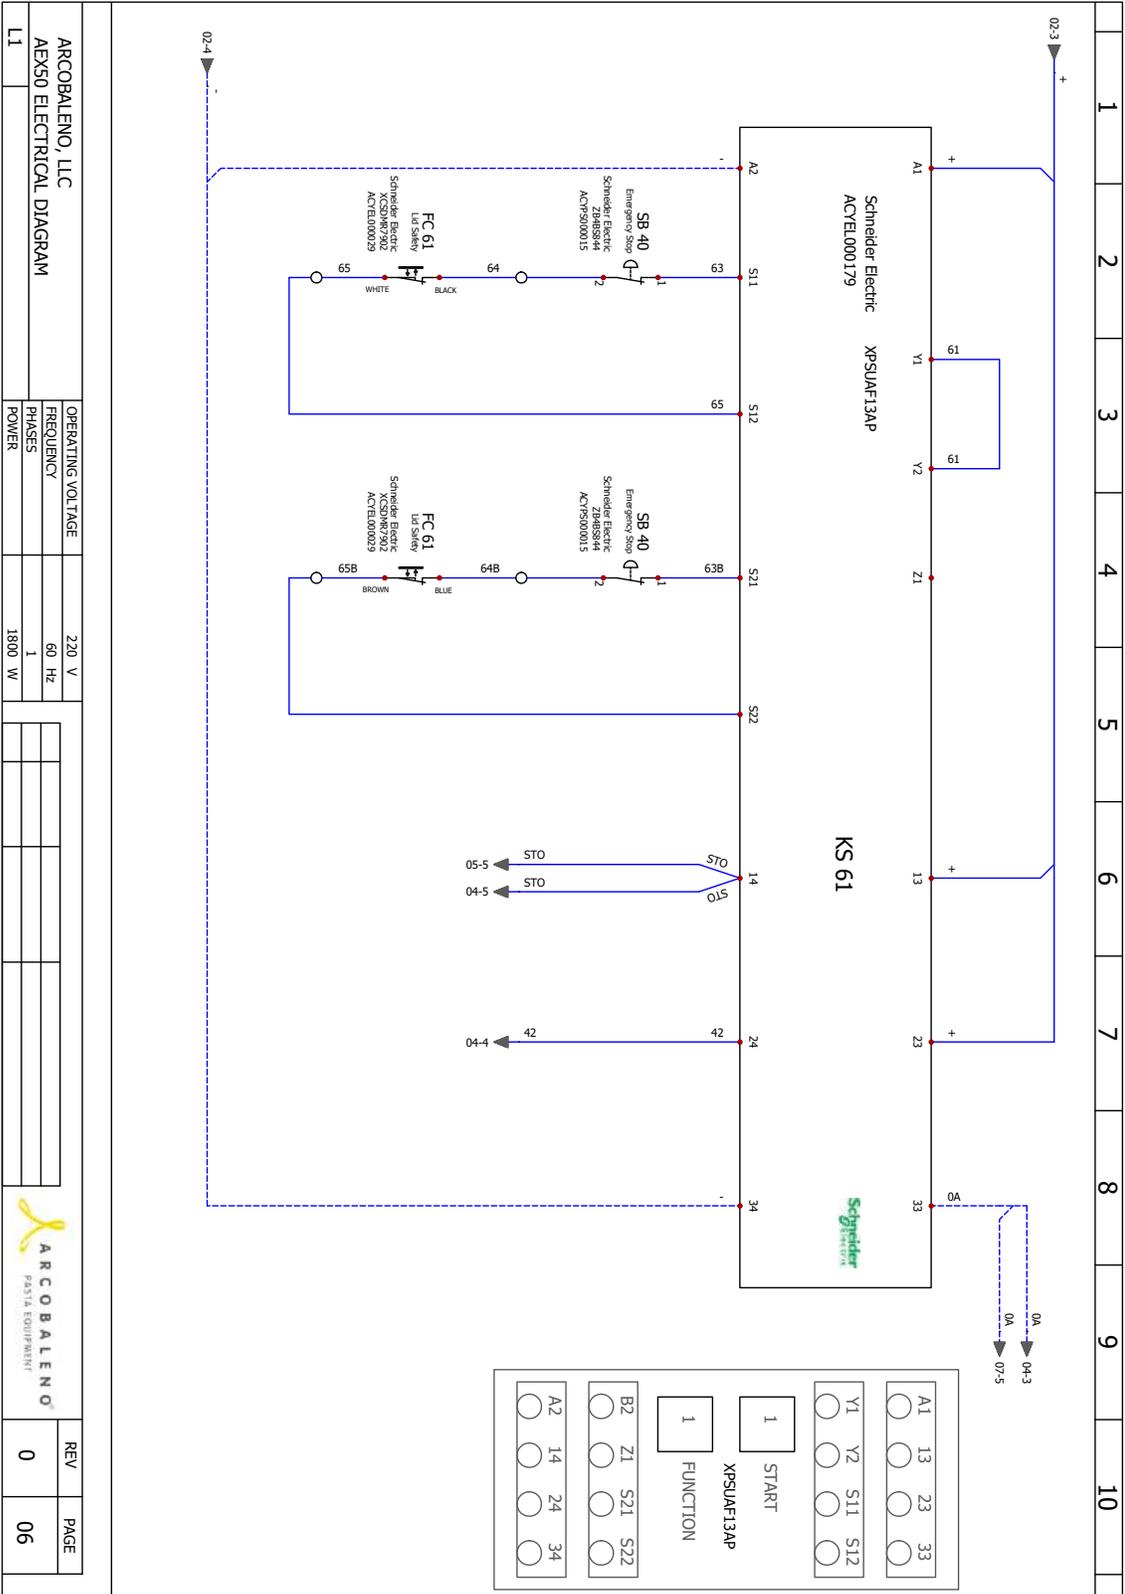

ARCOBALENO, LLC		OPERATING VOLTAGE		220 V	
AEX50 ELECTRICAL DIAGRAM		FREQUENCY		60 Hz	
L1		PHASES		1	
		POWER		1800 W	




REV	PAGE
0	06



ARCOBALENO®

SCRAPPING & DISPOSAL, PARTS & ELECTRICAL DIAGRAMS

MODEL AEX50

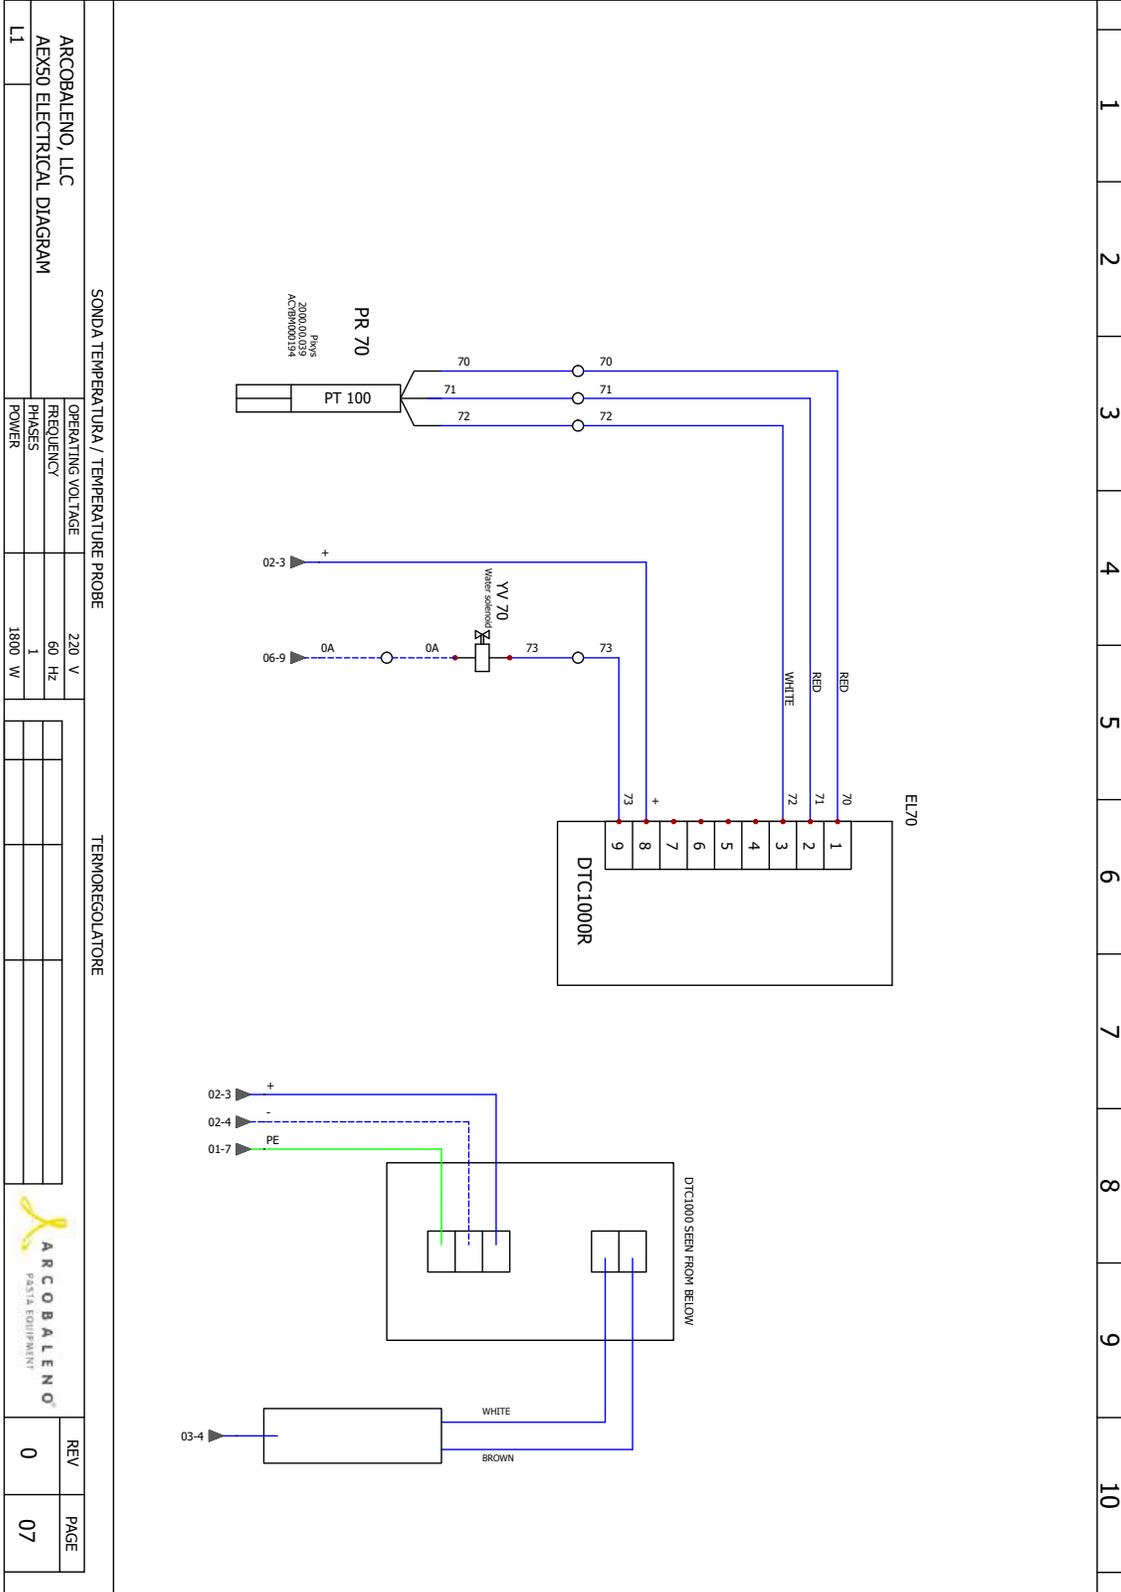



ARCOBALENO®

**SCRAPPING & DISPOSAL,
PARTS & ELECTRICAL DIAGRAMS**
MODEL AEX50

ARCOBALENO, LLC AEX50 ELECTRICAL DIAGRAM		OPERATING VOLTAGE		220 V	L1
FREQUENCY		60 Hz			
PHASES		1		POWER	
1800 W					
REV		0		PAGE	
08					

64	64B
65	65B
70	0A
71	73
72	

⊖ PE	⊖
R	
S	
PE	⊖
U 40	
V 40	
W 40	
PE	⊖
U 50	
V 50	
W 50	
PE	⊖

PE			
+	+	+	+
+	+	+	+
+	+	+	+
-	-	-	-
-	-	-	-
-	-	-	-

⊖ PE	⊖
------	---





ARCOBALENO®

SCRAPPING & DISPOSAL, PARTS & ELECTRICAL DIAGRAMS

MODEL AEX50

