



## SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX90M

### 7.1 PARTS, DIAGRAMS & SPARE PARTS

Should the machine be scrapped, you need to arrange for disposal of its parts by taking into consideration their different nature. For the above purpose, it may be advisable to contact companies specialized in this field which, in any case, abide by the law in force in the machine installation country as to disposal of solid industrial wastes.

**WARNING:** Don't drop the machine in very busy areas as it might endanger persons lives, minors and animals in particular; the owner of the machine shall be held responsible for any claims arising in connection with the above.




ARCOBALENO®

# SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX90M

TABLE 1

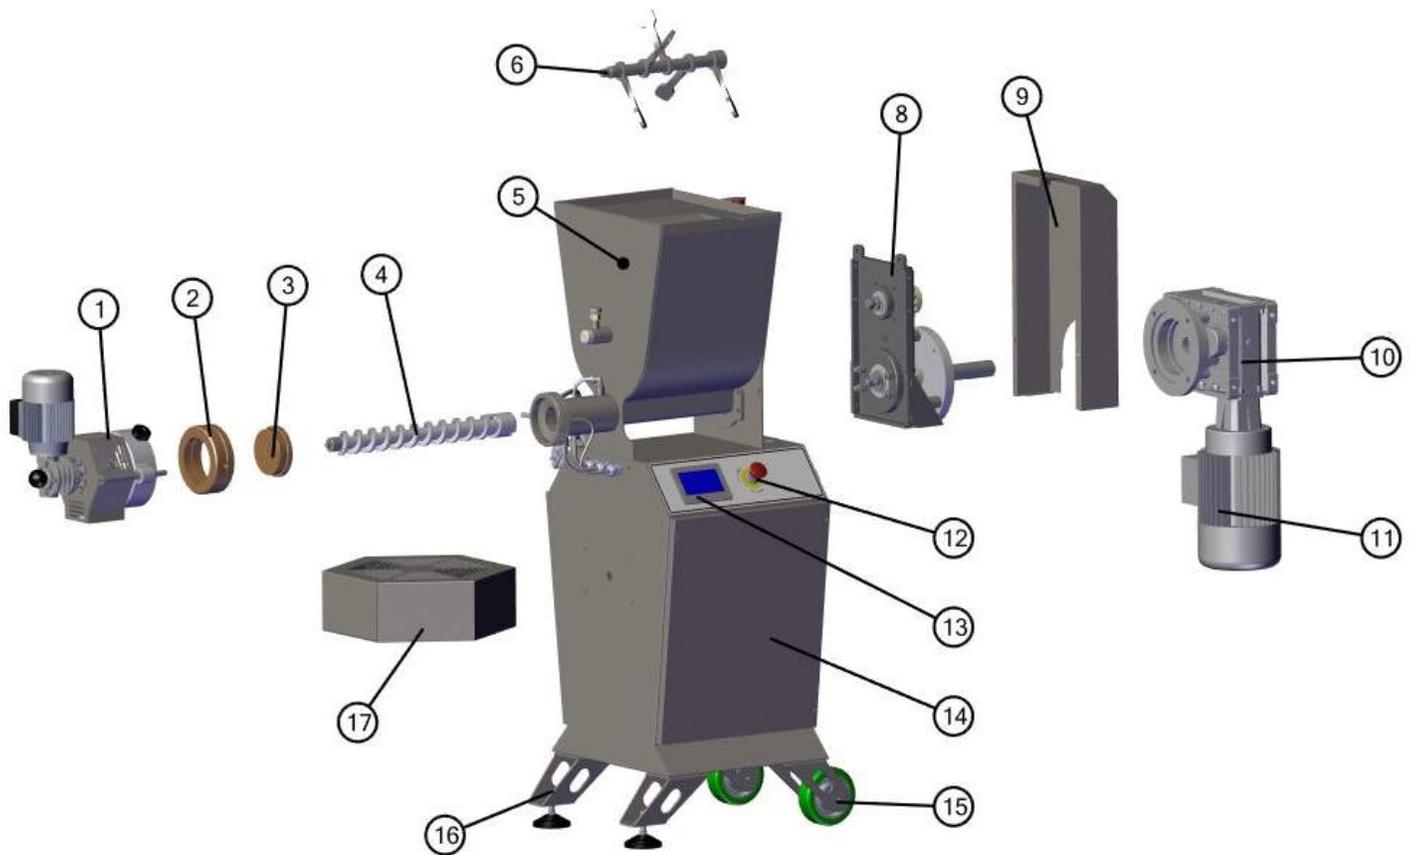




ARCOBALENO®

# SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX90M

TABLE 2

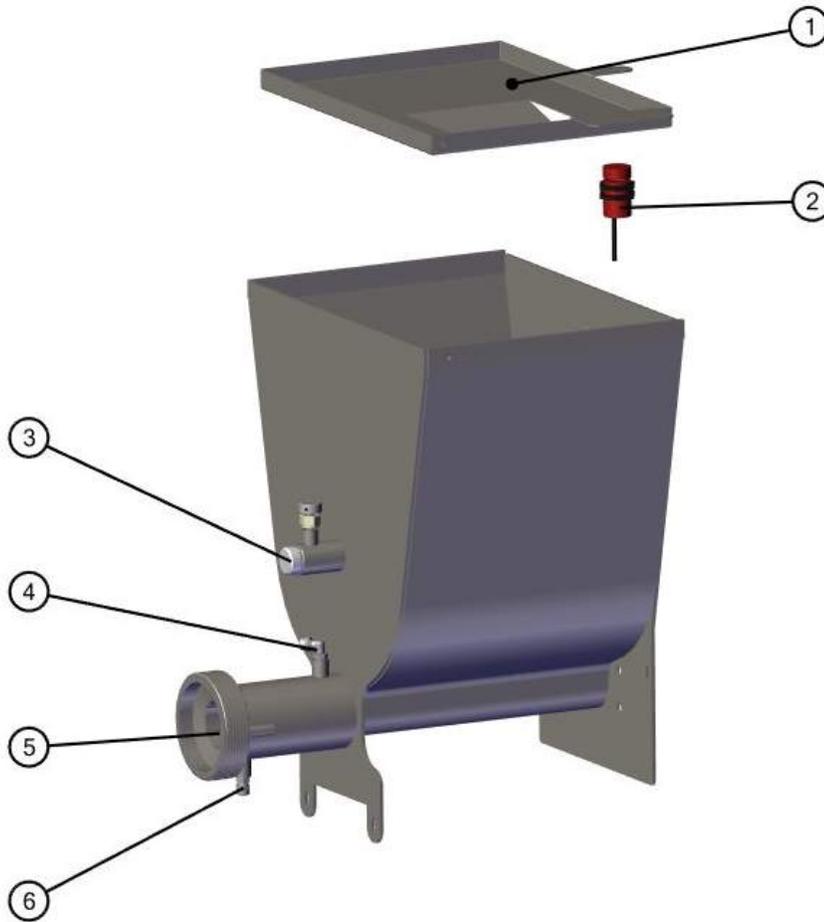




ARCOBALENO®

# SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX90M

TABLE 3

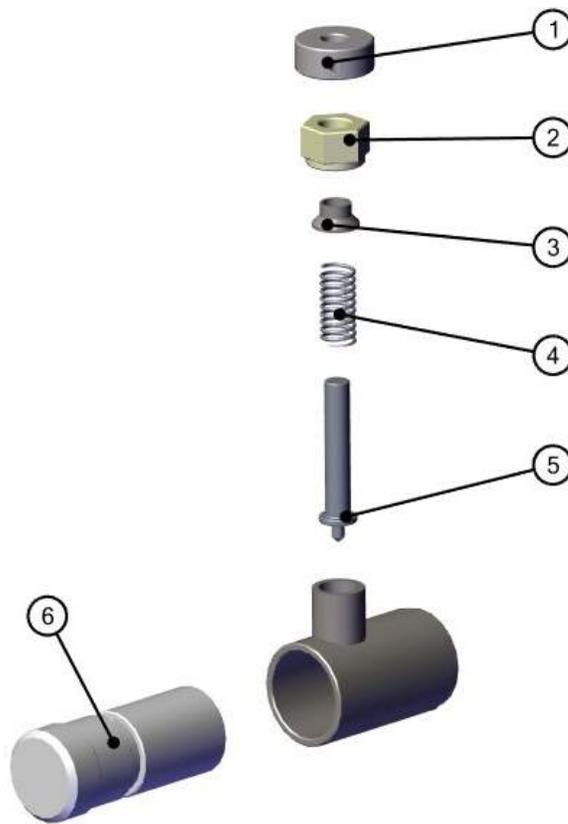




ARCOBALENO®

# SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX90M

TABLE 4

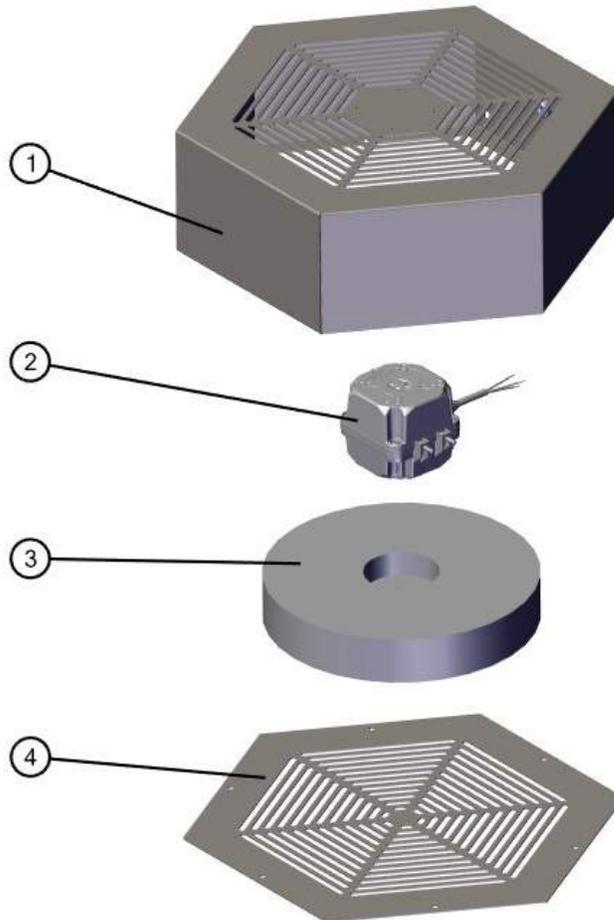




ARCOBALENO®

# SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX90M

TABLE 5

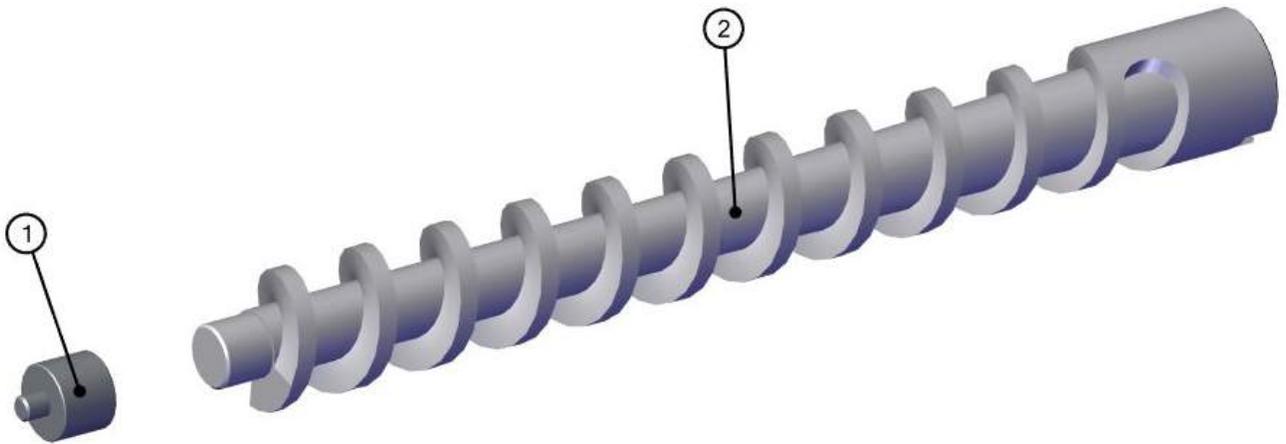




ARCOBALENO®

# SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX90M

TABLE 6

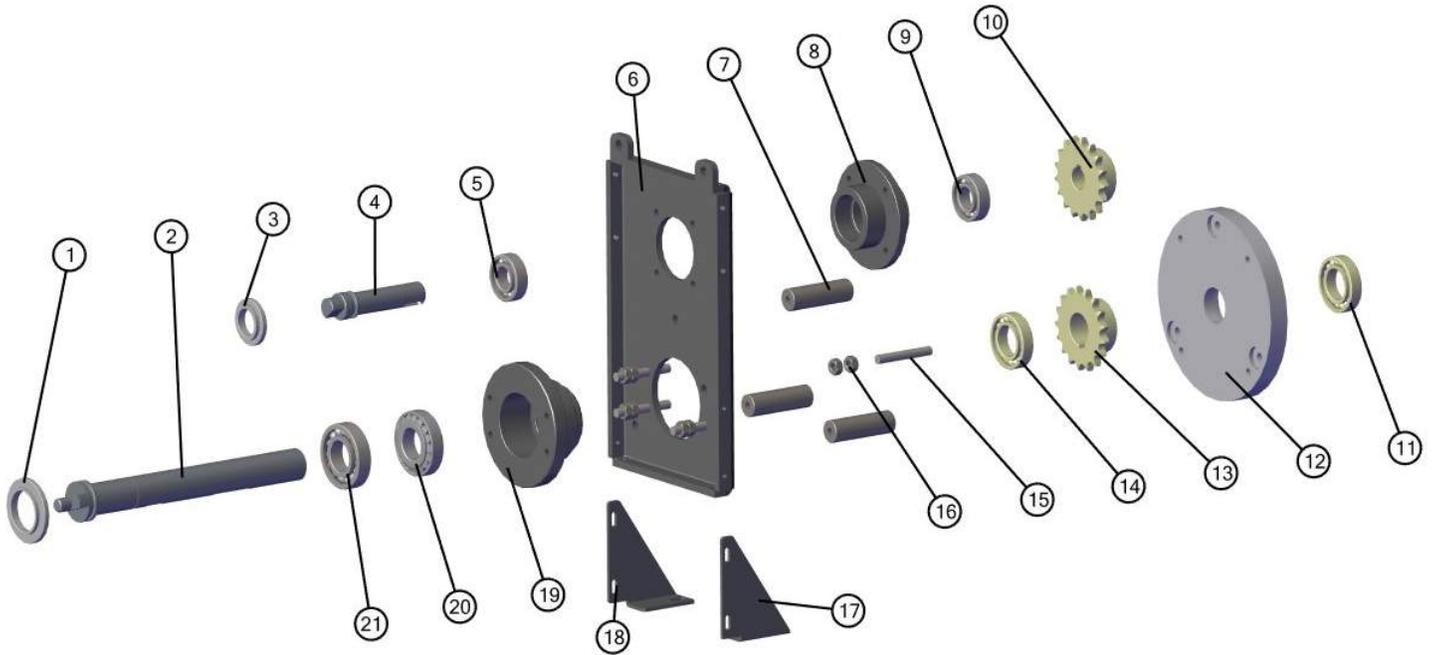




ARCOBALENO®

# SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX90M

TABLE 7

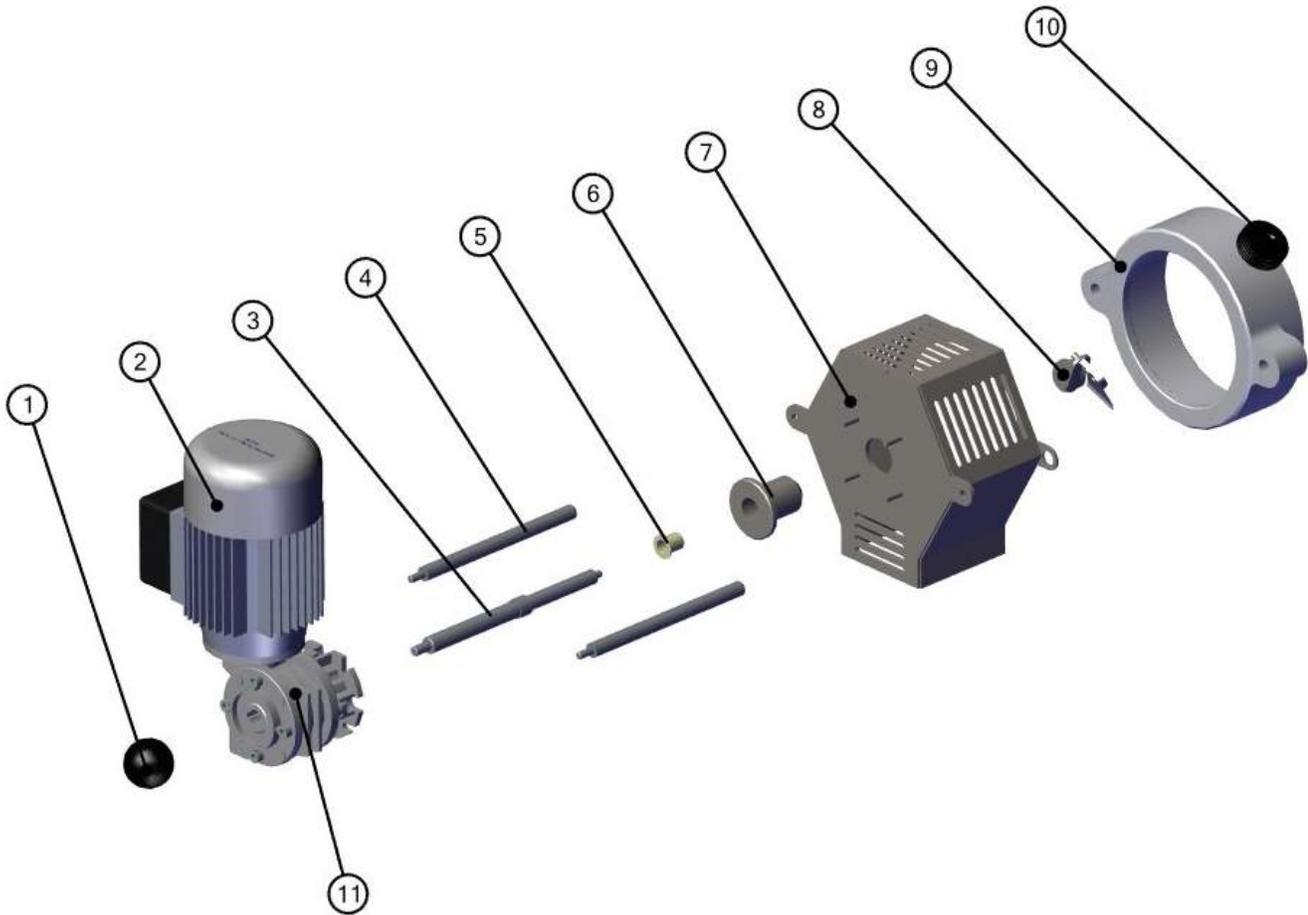




ARCOBALENO®

# SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX90M

TABLE 8

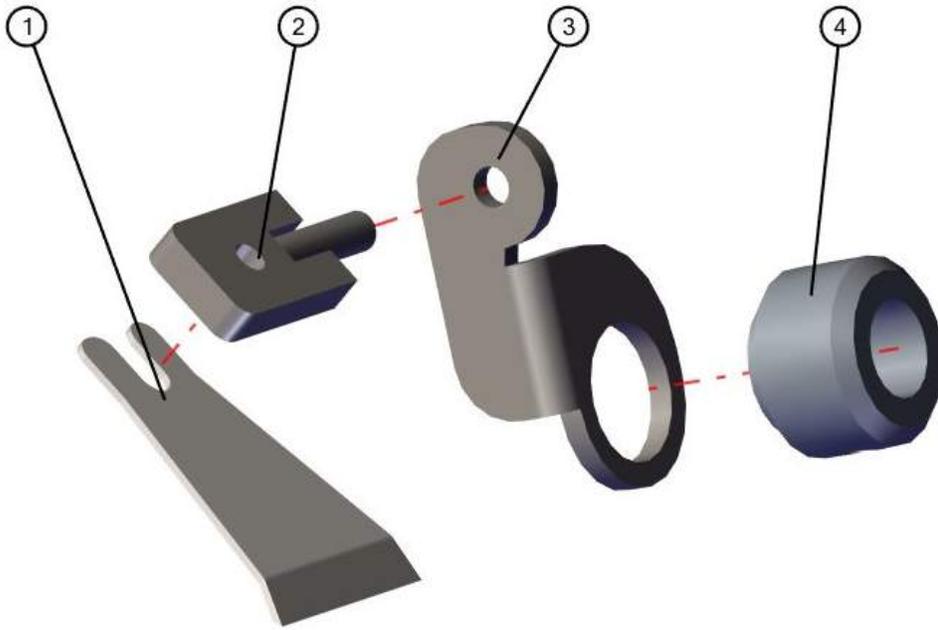




ARCOBALENO®

# SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX90M

TABLE 9

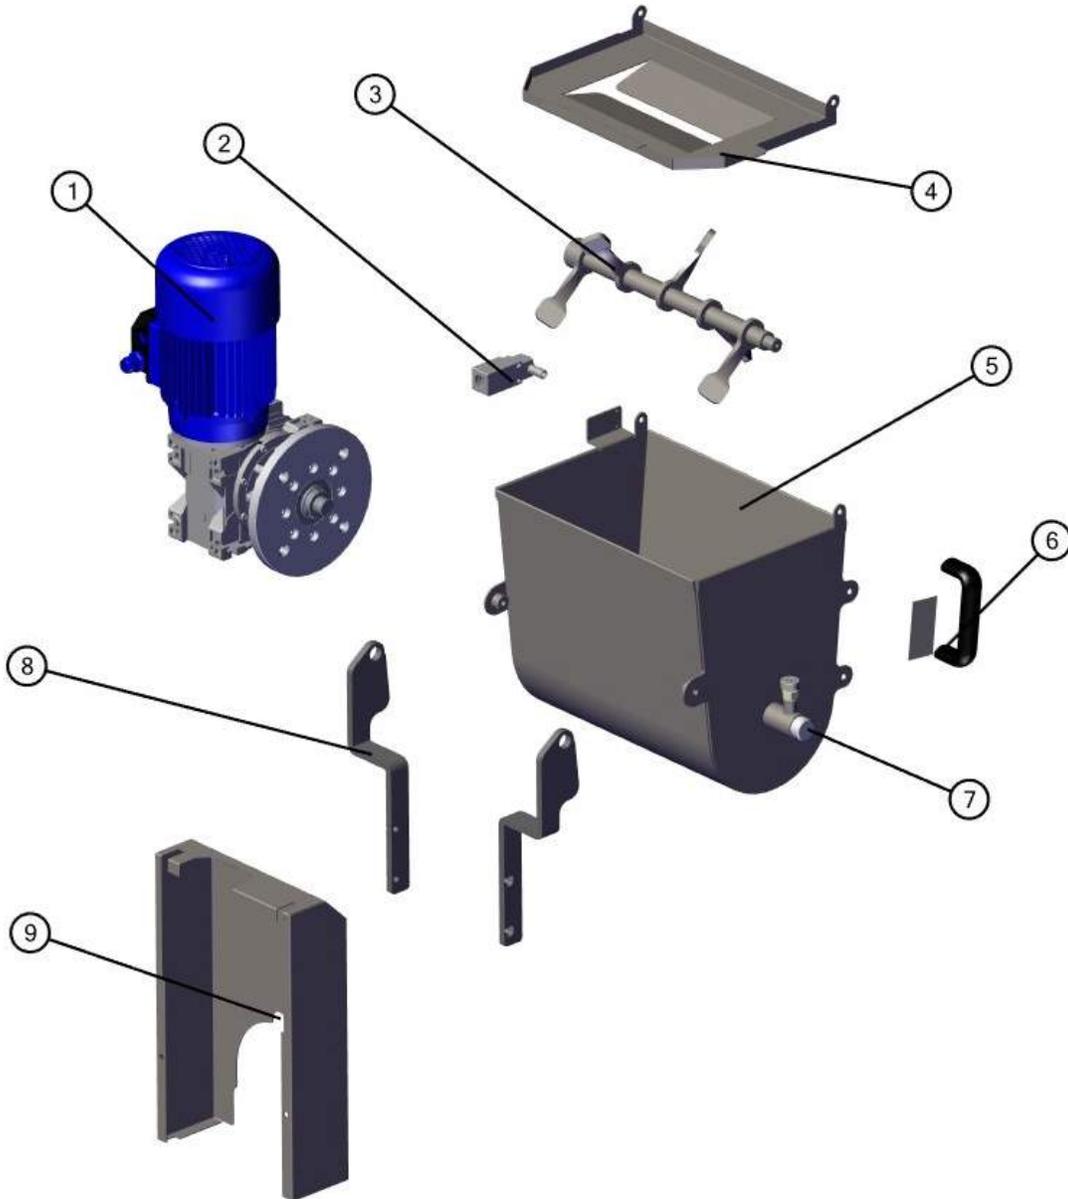




# SPARE PARTS & ELECTRICAL DIAGRAM

## MODEL AEX90M

TABLE 10

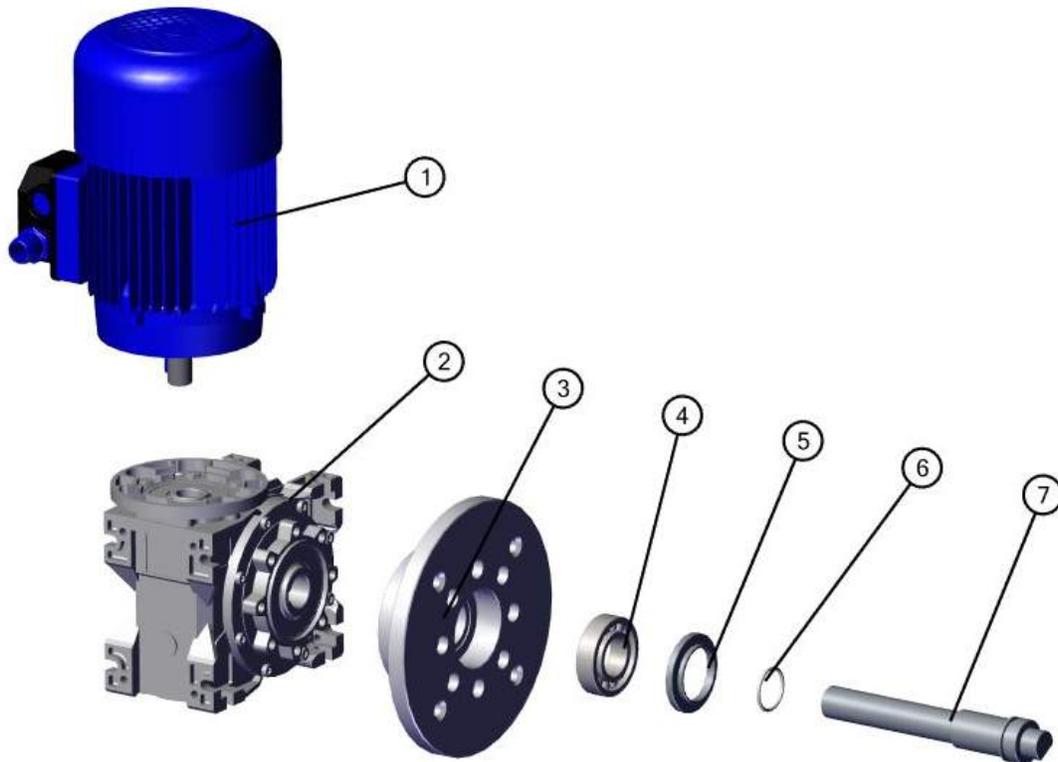



# SPARE PARTS & ELECTRICAL DIAGRAM

MODEL AEX90M

TABLE 11

