




ARCOBALENO™

SPARE PARTS &
ELECTRICAL DIAGRAM
MODEL ASM40/50

PARTS DIAGRAM

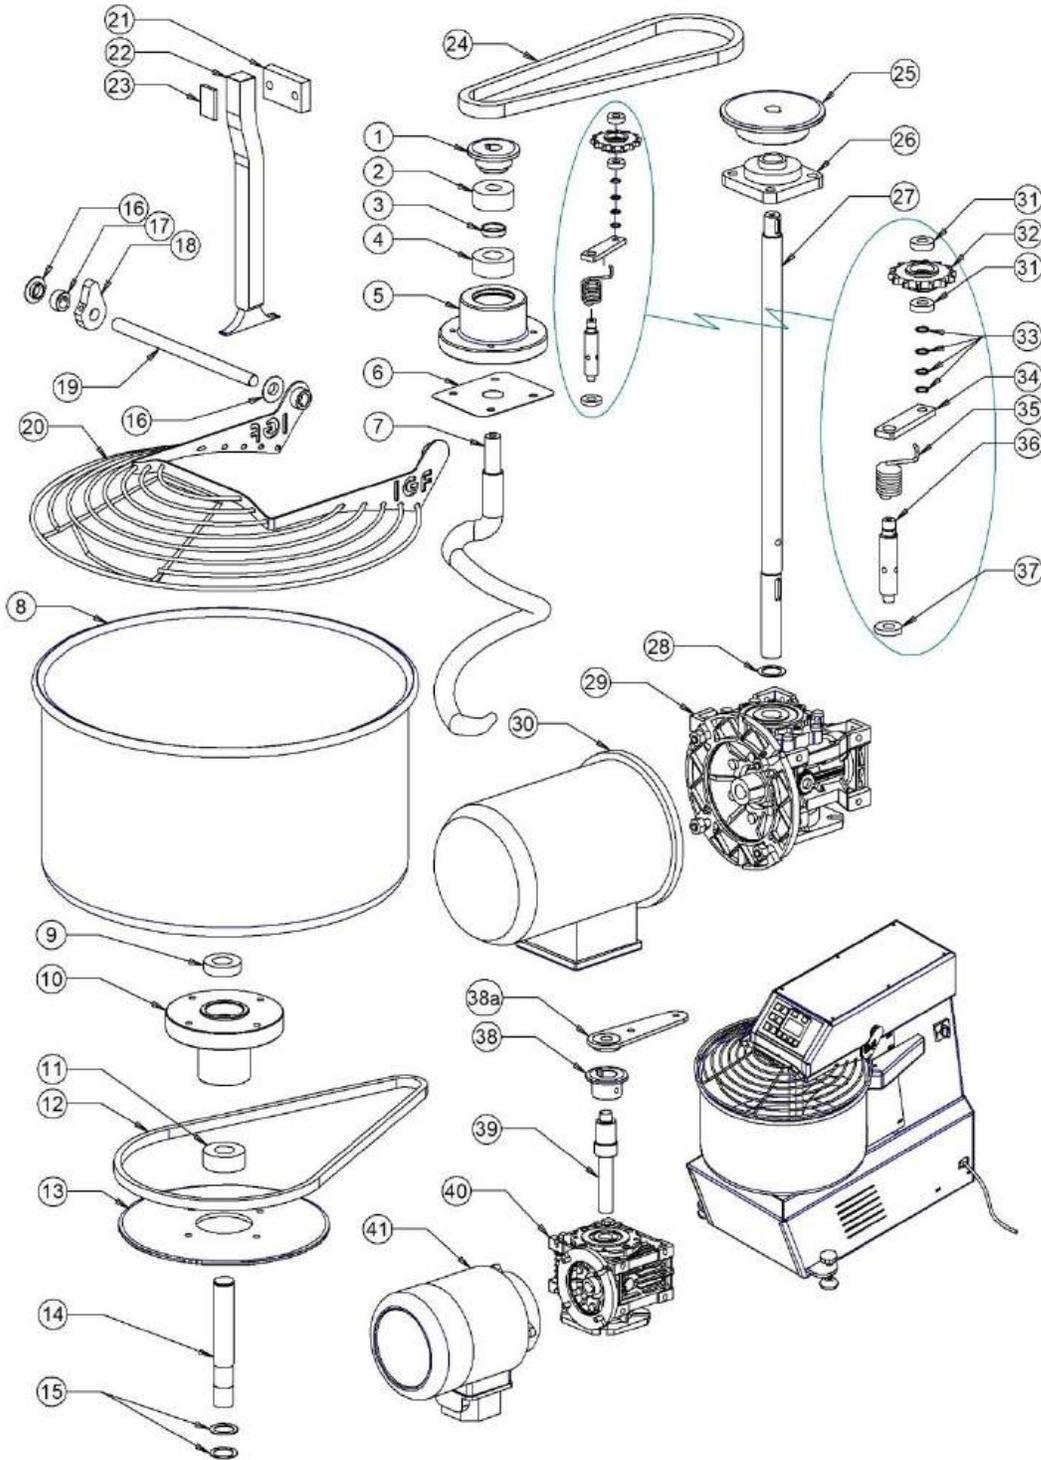




ARCOBALENO™

SPARE PARTS & ELECTRICAL DIAGRAM

MODEL ASM40/50

PARTS DIAGRAM

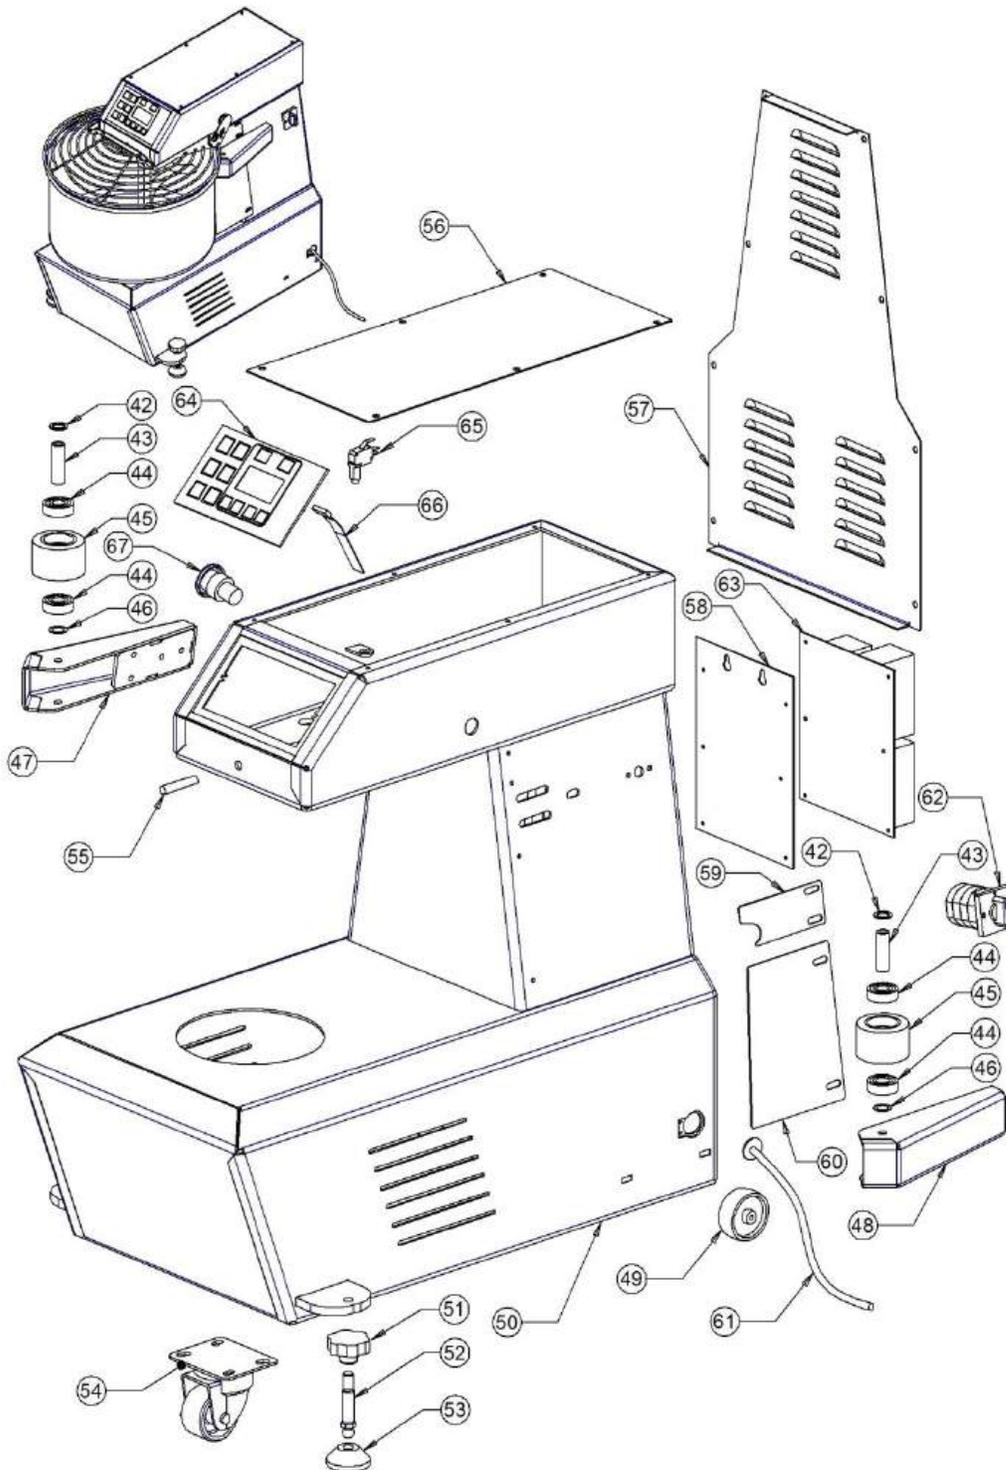



ARCOBALENO™

SPARE PARTS & ELECTRICAL DIAGRAM

MODEL ASM40/50

PARTS DIAGRAM KEY

Item	Description
1	PINION
2	BEARING
3	SPACER OF BEARING
4	BEARING
5	WHISK SUPPORT
6	SAVE DOUGH METAL SHEET
7	WHISK (SPIRAL)
8	BOWL (POT)
9	BEARING
10	SUPPORT
11	BEARING
12	LOWER CHAIN
13	RIM
14	SHAFT
15	SPACER
16	FERRULE FOR PIVOT
17	RING.
18	RABBET
19	PIVOT
20	SAFETY DEVICE
21	BAR LOCKING
22	BAR (DOUGH SEPARATOR)
23	SPACER
24	UPPER CHAIN
25	PINION
26	U.C.F. SUPPORT
27	SHAFT
28	RABBET
29	TRANSFORMER
30	MOTOR
31	BEARING
32	PINION
33	SPACER
34	LEVER
35	SPRING
36	PIVOT
37	WASHER
38	PINION
39	BEARING HOUSING
40	SHAFT
41	TRANSFORMER

42	MOTOR
43	SPACER
44	FERRULE
45	BEARING
46	ROLLER
47	SPACER
48	LEFT ROLLER SUPPORT
49	RIGHT ROLLER SUPPORT
50	WHEEL
51	BASE
52	KNOB
53	SCREW-PIVOT
54	FOOT
55	WHEEL
56	RABBET
57	UPPER CASING
58	LOWER CASING
59	CARD-CARRYNGPLATE
60	UPPER SAFETY DEVICE
61	LOWER SAFETY DEVICE
62	COONNECTION LINE
63	MAIN SWITCH
64	POWER CARD
65	CONTROL PANEL
66	MICROSWITCH
67	DATA CABLE
68	MUSHROOM-SHAPED EMERGENCY SWITCH